


M5 MULTISPRAY MIXER & PUMP ILLUSTRATED PARTS MANUAL

PARTS GROUP 00 FIGURE 00 PAGE 01

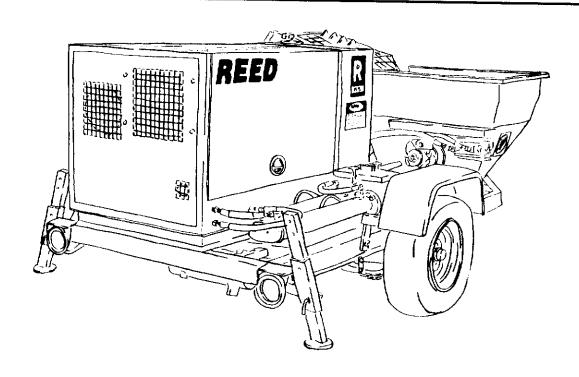

REED TRAILER MOUNTED CONCRETE MIXER & PUMP MODEL M5 MULTISPRAY ILLUSTRATED PARTS MANUAL CONTAINS THE FOLLOWING GROUPS AND FIGURES:

GROUP 00 HOW TO USE PARTS MANUAL

FIGURE 00 TABLE OF CONTENTS

FIGURE 01 HOW TO USE PARTS MANUAL

FIGURE 02 HOW TO ORDER PARTS

GROUP 10 FINAL INSTALLATION

FIGURE 00 TABLE OF CONTENTS
FIGURE 01 FINAL INSTALLATION
FIGURE 02 DECAL ASSEMBLY

GROUP 20 HOPPER INSTALLATION

FIGURE 00 TABLE OF CONTENTS

FIGURE 01 HOPPER INSTALLATION

FIGURE 02 OPTIONAL REMIXER/AUGER ASSEMBLY

FIGURE 04 OPTIONAL REMIXER/AUGER MOTOR ASSEMBLY

FIGURE 05 OPTIONAL CONTROL VALVE SUBASSEMBLY

REVISION:



M5 MULTISPRAY MIXER & PUMP ILLUSTRATED PARTS MANUAL

FIGURE 00 PAGE 02

GROUP 30 TANK INSTALLATION

FIGURE	00	TABLE OF CONTENTS
FIGURE	01	TANK INSTALLATION
FIGURE	02	ACCUMULATOR ASSEMBLY
FIGURE	03	FUEL TANK ASSEMBLY
FIGURE	04	D 08 VALVE ASSEMBLY
FIGURE	05	DIRECTIONAL CONTROL VALVE SUBASSEMBLY
FIGURE	06	D 08 SOLENOID VALVE SUBASSEMBLY
FIGURE	07	D 05 VALVE ASSEMBLY
FIGURE	08	D 05 SOLENOID VALVE SUBASSEMBLY
FIGURE	09	HYDRAULIC TANK ASSEMBLY
FIGURE	10	HYDRAULIC MIXER DUMP MANIFOLD ASSEMBLY
FIGURE	11	MIXER DUMP MANIFOLD VALVE SUBASSEMBLY

GROUP 40 POWER TRAIN INSTALLATION

00	TABLE OF CONTENTS
01	POWER TRAIN INSTALLATION
02	HYDRAULIC PUMPS ASSEMBLY
03	MAIN PUMP ASSEMBLY
04	UNLOADER MANIFOLD ASSEMBLY
05	BATTERY MOUNTING ASSEMBLY
	02 03 04

GROUP 50 CONTROLS INSTALLATION

rigure	UU	TABLE OF CONTENTS
FIGURE	01	CONTROLS INSTALLATION
FIGURE	02	CONTROL BOX ASSEMBLY
FIGURE	03	MIXER AND PUMP REMOTE CONTROL ASSEMBLY
FIGURE	04	ON/OFF 100 FOOT REMOTE ASSEMBLY

GROUP 60 PUMPING TRAIN INSTALLATION

FIGURE	00	TABLE OF CONTENTS
FIGURE	01	PUMPING TRAIN INSTALLATION
FIGURE	02	SWING VALVE ASSEMBLY
FIGURE	03	SWING RAM CYLINDER SUB-ASSEMBLY
FIGURE	04	CONCRETE CYLINDER ASSEMBLY
FIGURE	05	FLUSHBOX ASSEMBLY
FIGURE	06	HYDRAULIC DRIVE CYLINDER ASSEMBLY
FIGURE	07	HYDRAULIC DRIVE CYLINDER SUB-ASSEMBLY



M5 MULTISPRAY MIXER & PUMP ILLUSTRATED PARTS MANUAL.

PARTS GROUP 00 FIGURE 00 PAGE 03

GROUP 70 FRAME INSTALLATION

FIGURE	00	TABLE OF CONTENTS
FIGURE	01	FRAME INSTALLATION

FIGURE 02 AXLE AND BRAKE ASSEMBLY

FIGURE 03 NON-OPERATOR SIDE ELECTRIC BRAKE ASSEMBLY

FIGURE 04 OPERATOR SIDE ELECTRIC BRAKE ASSEMBLY

GROUP 80 OPTIONAL INSTALLATION

FIGURE 00 TABLE OF CONTENTS

FIGURE 01 OPTIONAL INSTALLATION

FIGURE 02 WASH PUMP ASSEMBLY

FIGURE 03 WASH WATER PUMP ASSEMBLY

FIGURE 04 WASH PUMP MOTOR ASSEMBLY

FIGURE 05 HOPPER VIBRATOR ASSEMBLY

FIGURE 06 ACTUATOR BRAKES ASSEMBLY

FIGURE 07 ACCUMULATOR CHARGE KIT

FIGURE 08 BLADDER REPAIR KIT

FIGURE 09 NON-OPERATOR SIDE HYDRAULIC BRAKE ASSEMBLY

FIGURE 10 OPERATOR SIDE HYDRAULIC BRAKE ASSEMBLY

FIGURE 11 12 VOLT LUBE PUMP ASSEMBLY

FIGURE 12 STIRRING PADLE LUBRICATION PUMP ASSEMBLY

FIGURE 13 OPTIONAL TOO KIT ASSEMBLY

GROUP 90 LIFT MIXER INSTALLATION

FIGURE 00 TABLE OF CONTENTS

FIGURE 01 LIFT MIXER INSTALLATION

FIGURE 02 WATER PLUMBING ASSEMBLY

FIGURE 03 WATER METER ASSEMBLY

FIGURE 04 MIXER WELDMENT ASSEMBLY

FIGURE 05 MIXING BLADE ASSEMBLY

FIGURE 06 DOUBLE AUXILIARY MIXER PUMP ASSEMBLY

FIGURE 07 LIFT MIXER CYLINDER ASSEMBLY

FIGURE 08 MIXER MOTOR ASSEMBLY





PARTS
GROUP 00
FIGURE 01
PAGE 01

I. PURPOSE

This parts manual is prepared, issued and revised by **REED** Manufacturing, for the exclusive use of its customers and is intended for use in provisioning, requisitioning, storing and issuing replaceable **REED** trailer mounted MIXER & PUMP model **M5 MULTISPRAY**.

The contents are proprietary to **REED** and are subject to change without notice. The use of any part of this document by any other person or persons or for any other purpose without the written consent of **REED** is expressly prohibited.

The parts number content of this document, arrangement and breakdown sequence of items is compatible with Military Standard (MS) and Air Transport Association Specification (ATA).

II. GENERAL SYSTEM OF ASSEMBLY ORDER - Detailed Parts List (Refer to Next Page)


1. This area refers to the corresponding illustration

GROUP - FIGURE - PAGE

- **A. GROUP** should be divided with:
 - 00 M5 MULTISPRAY PARTS MANUAL
 - 10 FINAL INSTALLATION
 - 20 HOPPER INSTALLATION
 - **30** TANK INSTALLATION
 - **40** POWER TRAIN INSTALLATION
 - 50 CONTROL INSTALLATION
 - **60** PUMPING TRAIN INSTALLATION
 - **70** FRAME INSTALLATION
 - **80** OPTIONAL INSTALLATION
 - 90 LIFT MIXER INSTALLATION
- B. FIGURE belong to the group. Please see page of contents and each group.
- C. PAGE numbers follow to the right of each figure number.
- 2. The ITEM NUMBER corresponds to the item number shown for the part in illustration. Parts with item number proceeded by a dash (such as: -1, -7, -12 etc.) are not illustrated.
- 3. PARTS NUMBERS that carry a **REED** part number.




PARTS GROUP 00 FIGURE 01 PAGE 02

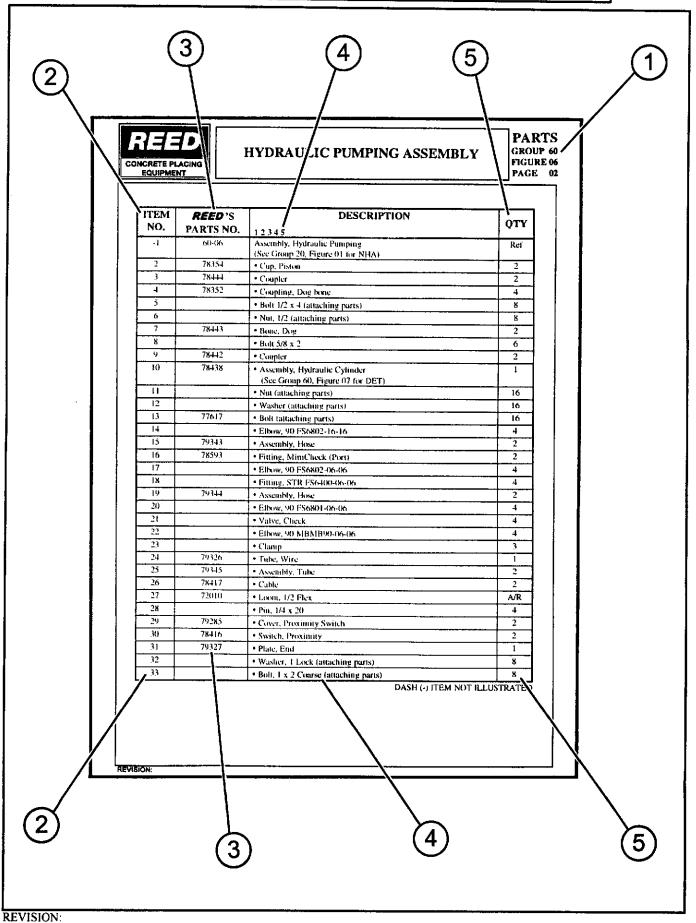



PARTS
GROUP 00
FIGURE 01
PAGE 03

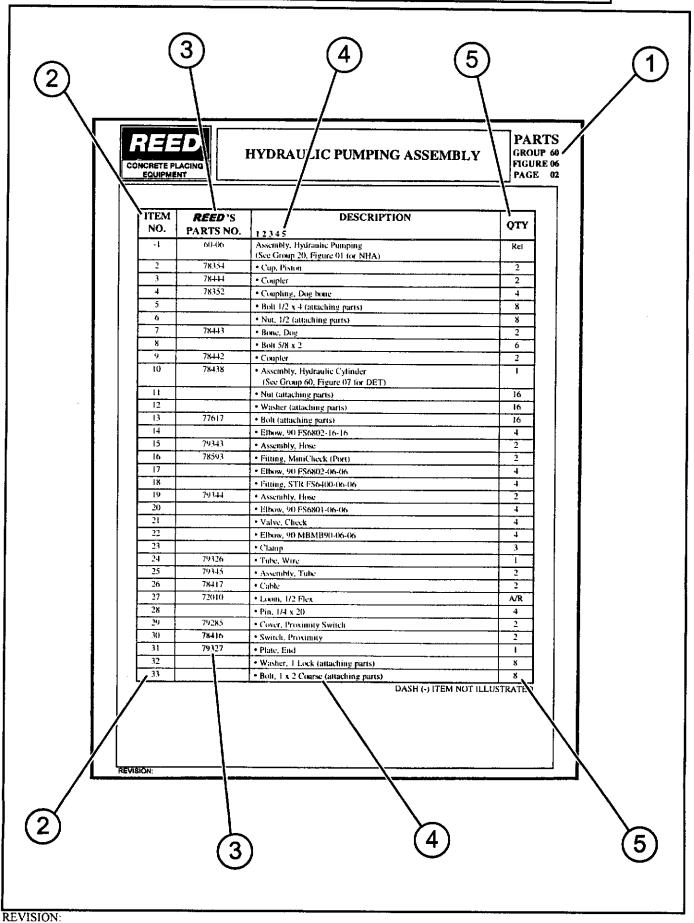



PARTS GROUP 00 FIGURE 01 PAGE 04

4. DESCRIPTION

A. The INDENTURE SYSTEM used in the parts list shows the relationship of one part to another. For a given item, the number of indentures depicts the relationship of the item to the components of the item as follows:

1 2 3 4 5

Assembly (or Installation)

- Detail part of assembly
- Sub-assembly
- Attaching parts for sub-assembly
- • Detail part of sub-assembly
- • Sub-sub-assembly
- • Attaching parts for sub-sub-assembly
- • Detail part of sub-sub-assembly
- ● Sub-sub-sub-assembly
- Attaching parts of sub-sub-assembly
- • Detail part of sub-sub-assembly
- **B.** "See Group 20, Figure 01 For **NHA**"

 Identifies the illustrated parts chapter location; indicates where the Next Higher Assembly (**NHA**) of the item shown.
- C. "See Group 60, Figure 07 For DET" Identifies the illustrated parts chapter location; indicates where the item and its Detailed Breakdown (DET) is shown.
- D. "See Group 30, Figure 05 for REF" or "See Vendor Chapter For REF" Identifies the illustrated parts chapter where the part is, and if listed and illustrated in Vendor Chapter. It is used as a cross-reference (REF).

5. QUANTITY

- A. Reference (REF) indicates the items that is listed previously in the Next Higher Assembly (NHA) and then again in this figure.
- B. As Required (A/R) indicates the parts that is used in a quantity as required.
- C. A number entry indicates the quantity of the part used in its next higher application.
- **6.** Functionally related assemblies are illustrated in phantom(_____) but not listed on the detail parts list page.




HOW TO ORDER PARTS


PARTS GROUP 00 FIGURE 02 PAGE 01

 Always give serial number and model of REED trailer mounted MIXER & PUMP model M5 MULTISPRAY (Refer to each unit name plate shown below). NOTE: This manual is

being released to cover unit starting with serial number 3-97-1-1512 to current production. Some components used on earlier units differ from current productions. Where this occurs, the part is identified by a serial number.

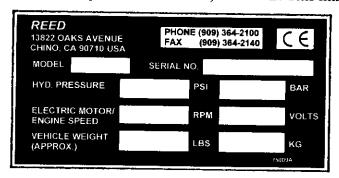


2. Always specify part number and complete name of parts ordered.

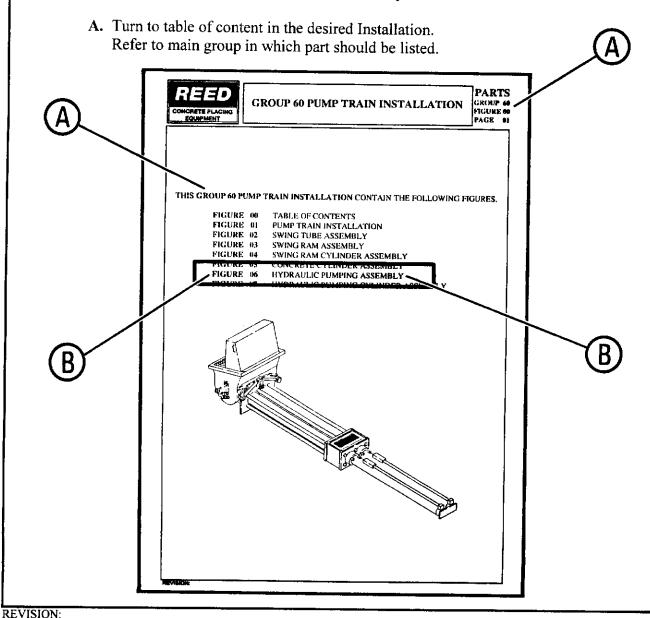



HOW TO ORDER PARTS

PARTS
GROUP 00
FIGURE 02
PAGE 02

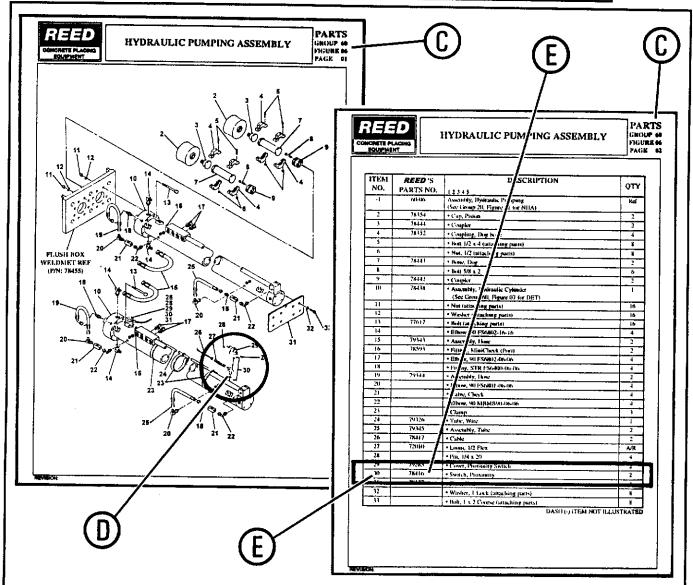

- B. Find title of figure in which the part should be shown. Note figure number.
- C. Turn to corresponding page, find the group and figure.
- **D.** Check your required part and its attaching parts and match with illustration page.
- E. Refer to corresponding item number in the part list page. Part numbers are located in the part number column.
- **F.** When ordering variable or optional miscellaneous parts which are not found this in parts chapter, follow the above outlined procedure of how to order parts.
 - 1). When applicable, give model and serial number of the component for which parts are desired.
 - 2). In a specific, difficult to describe situation, a marked-up photograph or detailed sketch would be helpful.



HOW TO ORDER PARTS

PARTS
GROUP 00
FIGURE 02
PAGE 03

- 3. Do not designate quantity by "set". State specifically how many parts are wanted.
- **4.** Always give complete address and full shipping instructions. Specify shipping instructions, truck freight, air freight. United Parcel Service (UPS), or Air Borne Express, and DHL are available in designated areas.
- 5. TO ORDER
 - A. BY MAIL

Attention: Parts Department

REED

13822 OAKS AVENUE CHINO, CA. 91710

B. BY FAX

(909) 364 - 2140

C. BY PHONE

(909) 364 -2100

- 6. Parts return without authorization will not be accepted. If it is necessary to return parts for any reason, written authorization may be obtained from *REED* Parts Department, Chino, CA. 91710. A Parts Return Authorization form is provided when *REED* deems its necessary to have the part returned for evaluation. The form is issued by the Warranty of Parts Department of *REED*.
 - A. The form will be filled by **REED** unless requesting necessary information and you will receive a copy as well as shipping tag.
 - B. Attach shipping tag to part insert return original invoice.
 - C. Ship part to **REED** PREPAID.
 - **D.** Part must be returned to **REED** within 30 days from date of authorization.

•			
	•		
	•		




M5 MULTISPRAY MIXER & PUMP GROUP 10 FINAL INSTALLATION

PARTS
GROUP 10
FIGURE 00
PAGE 01

GROUP 10 FINAL INSTALLATION CONTAINS THE FOLLOWING FIGURES:


FIGURE 00 TABLE OF CONTENTS
FIGURE 01 FINAL INSTALLATION
FIGURE 02 DECAL ASSEMBLY

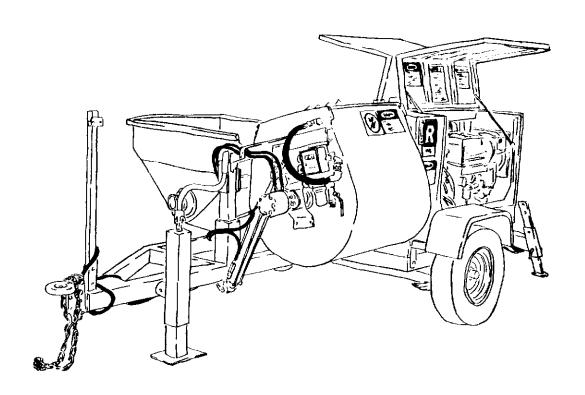



FINAL INSTALLATION

PARTS
GROUP 10
FIGURE 01
PAGE 01

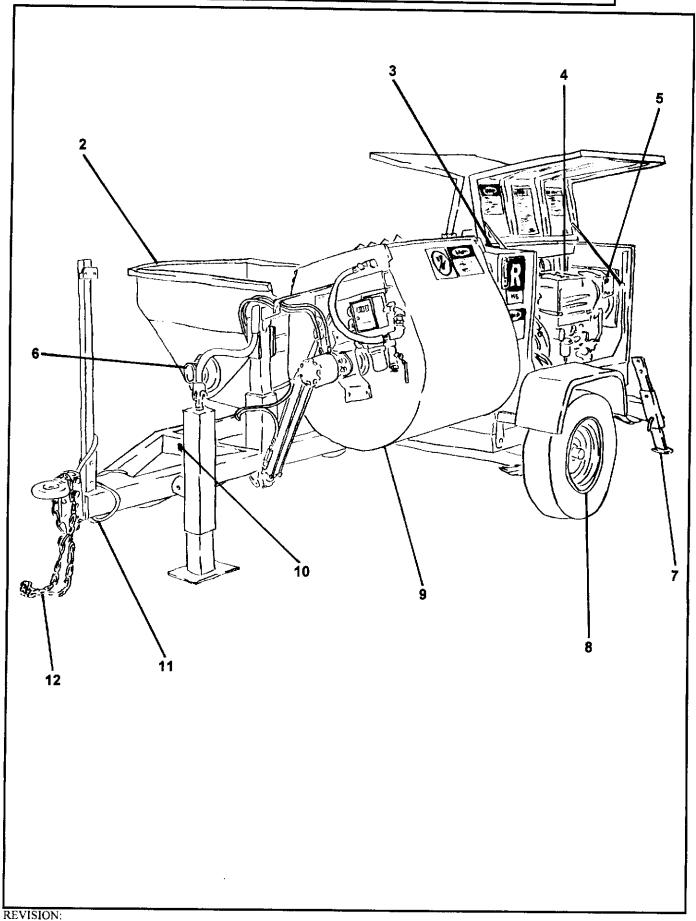




FINAL INSTALLATION

PARTS GROUP 10 FIGURE 01 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
1	7125	Installation, M5 MULTISPRAY Mixer & Pump Final	Ref
2	20-01	• Installation, Hopper (See Group 20, Figure 01 for DET)	1
3	30-01	• Installation, Tank (See Group 30, Figure 01 for DET)	1
4	40-01	• Installation, Power Train (See Group 40, Figure 01 for DET)	1
5	50-01	• Installation, Control (See Group 50, Figure 01 for DET)	1
6	60-01	• Installation, Pumping Train (See Group 60, Figure 01 for DET)	1
7	70-01	• Installation, Frame (See Group 70, Figure 01 for DET)	1
8	80-01	• Installation, Optional (See Group 80, Figure 01 for DET)	1
9	76860	• Installation, Lift Mixer (See Group 90, Figure 01 for DET)	1
10	76861	Kit, Decal (See Group 10, Figure 02 for DET)	1
11	77705	• Kit, Break Away	1
12	71048	• Chain	36




PARTS
GROUP 10
FIGURE 02
PAGE 01

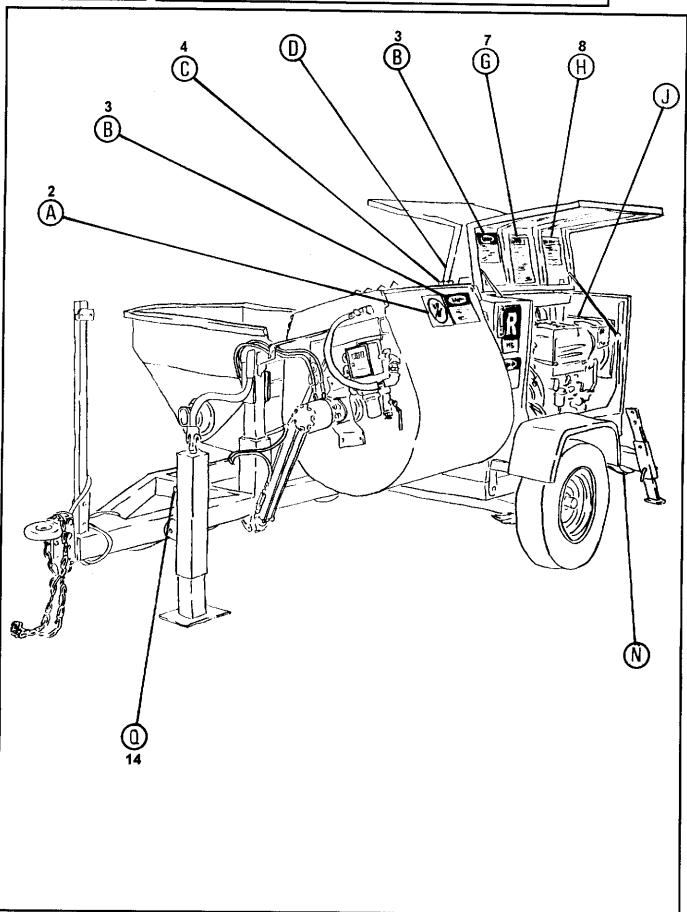




PARTS
GROUP 10
FIGURE 02
PAGE 02

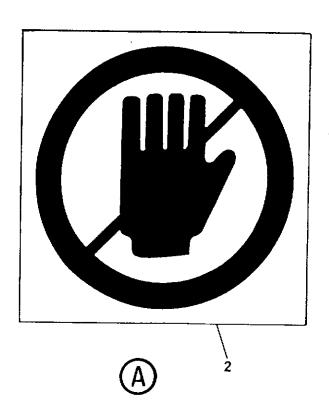

ITEM NO.	<i>REED</i> 'S PARTS NO.	DESCRIPTION 12345	QTY
-1	79714	Kit, M5 Decal (See Group 10, Figure 01 for NHA)	Ref
2	75005	Decal, Danger, Do Not Put Hands	2
3	75081	• Decal, Danger, Do Not Put Hands Or Feet In Hopper At Any Time	2
4	75020	Decal, Hydraulic Oil	1
5	75003	Decal, Warning, Relieve Pressure Before Disassembly	1
6	75017	Decal, Diesel Fuel Only	1
7	75080	• Decal, Warning, This Equipment Operates at High Pressure in	1
8	75082	Decal, Warning, Wear Eye Protection When Operating This	1
9	75083	Decal, Danger, You Must Not Operate This Machine Unless	2
10	75026	• Decal, R M5	2
11	75022	• Decal, The Filter Element Inside This Housing Must be Replaced	1
12	73132	• Decal, REED 4 1/2 Inch	2
13	75096	Decal, REED	1
14	75009	Plate, Serial Number	1
15	76597	Decal, Remote Control Panel	1



PARTS
GROUP 10
FIGURE 02
PAGE 03

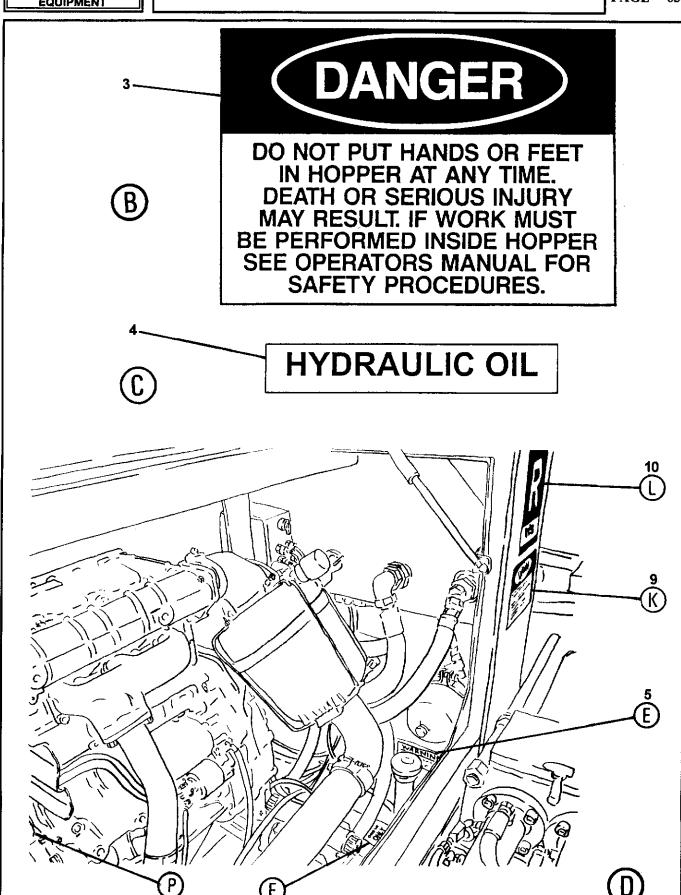



PARTS GROUP 10 FIGURE 02 PAGE 04

WARNING

RELIEVE PRESSURE BEFORE DISASSEMBLY.



ONLY
6

WARNING

THIS EQUIPMENT OPERATES AT HIGH PRESSURE IN THE HYDRAULIC SYSTEM AND CONCRETE DELIVERY SYSTEM. DO NOT ATTEMPT TO OPERATE BEFORE READING INSTRUCTION MANUAL.

KEEP HANDS AND TOOLS OUT OF HOPPER. THE INSIDE AREA OF THE HOPPER OF THIS MACHINE HAS MOVING PARTS WHICH ARE EXTREMELY DANGEROUS. IT IS ESSENTIAL THAT STRICT SAFETY PROCEDURES BE FOLLOWED BEFORE ANY WORK IS DONE INSIDE THE CLOSED HOPPER. THE GRATE ON THE HOPPER IS BOLTED IN A CLOSED POSITION TO RESTRICT ACCESS. IF MAINTENANCE MUST BE PERFORMED INSIDE THE HOPPER THEN PROCEED AS FOLLOWS:

- Turn engine ignition switch key counterclockwise to the "off" position and stop (kill) engine. This procedure will activate a safety device that automatically releases all accumulator circuit hydraulic pressure. To confirm that this device is operational check hydraulic pressure gauges for zero readings before concrete pump can be worked on safely.
- 2. Disconnect swing tube hydraulic cylinder hoses.
- 3. Remove bolts securing hopper grate.

Work inside the hopper may now be performed safely. Upon completion of this work, replace the bolts, securing the hopper grate in a closed position. Reconnect hoses.





PARTS GROUP 20 FIGURE 02 PAGE 05

WARNING

WEAR EYE PROTECTION WHEN OPERATING THIS EQUIPMENT.

THIS EQUIPMENT IS REMOTE CONTROLLED AND MAY START AT ANY TIME. ALWAYS STOP ENGINE BEFORE WORKING ON EQUIPMENT.


IN CASE OF BLOCKAGE IN THE DELIVERY LINE

1. NEVER OPEN A PRESSURIZED COUPLING

2. RELIEVE THE PRESSURE USING THE PROCEDURE IN THE OPERATORS MANUAL.

 \oplus

8

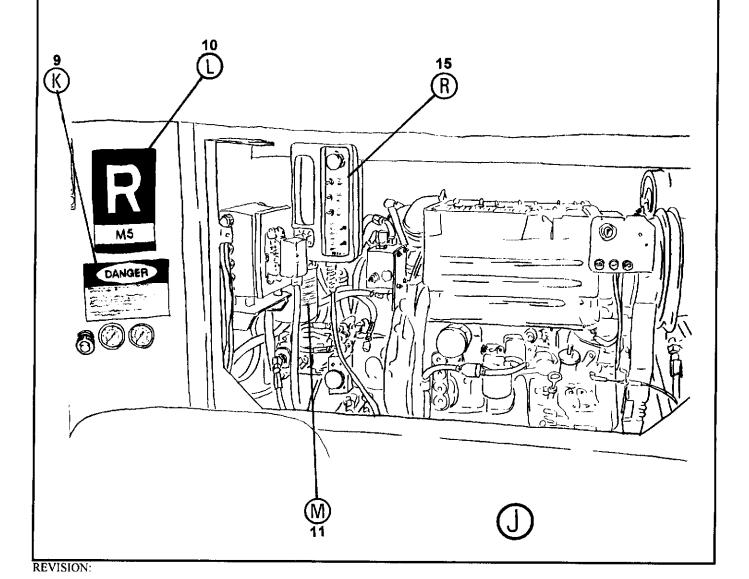



PARTS GROUP 10 FIGURE 02 PAGE 06



YOU MUST NOT OPERATE THIS MACHINE UNLESS YOU ARE QUALIFIED BY TRAINING AND EXPERIENCE IN THE SAFE OPERATION OF THIS MACHINE.

TRAINING INCLUDES COMPLETE KNOWLEDGE OF YOUR EMPLOYER'S WORK RULES, ALL GOVERNMENTAL REGULATIONS, AND MANUFACTURER'S OPERATOR AND SAFETY MANUALS RELATIVE TO THIS MACHINE'S SAFE USE.

AN UNTRAINED OPERATOR SUBJECTS HIMSELF AND OTHERS TO DEATH OR SERIOUS INJURY.



9

THE FILTER ELEMENT INSIDE THIS HOUSING MUST BE REPLACED WITH AN APPROVED TYPE ELEMENT AFTER THE FIRST 50 HOURS OF USE.

FURTHER ELEMENT REPLACEMENTS SHOULD BE MADE AFTER EVERY 500 HOURS OF USE, OR AS NECESSARY. FAILURE TO DO SO MAY RESULT IN SERIOUS DAMAGE TO YOUR MACHINE.


11








PARTS GROUP 10 FIGURE 02 PAGE 07

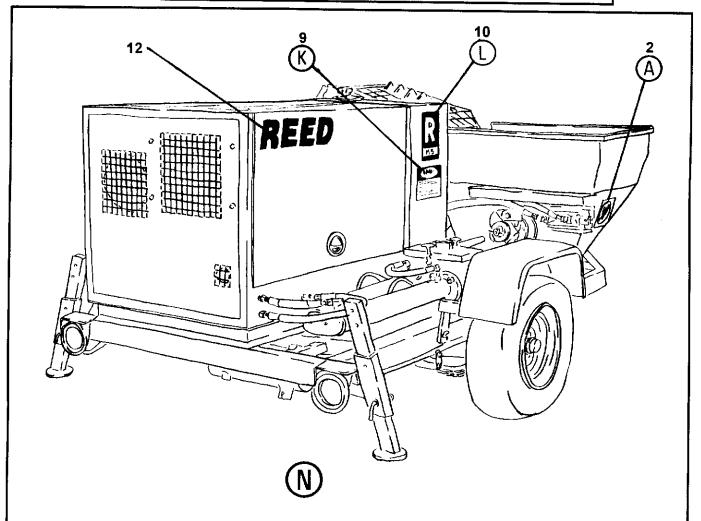


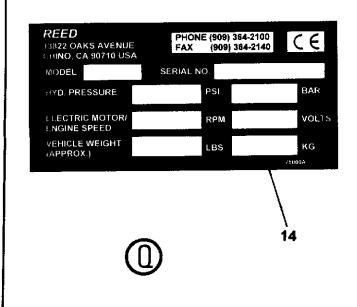





PARTS GROUP 10 FIGURE 02 PAGE 08

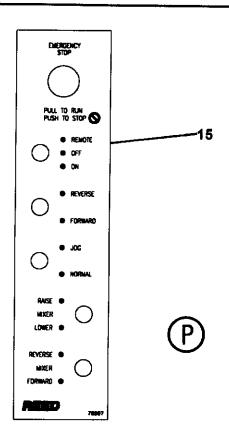

ITEM NO.	REED 'S PARTS NO.	DESCRIPTION	QTY
110.		12345	`
-1	79714	Kit, M5 Decal (See Group 10, Figure 01 for NHA)	Ref
2	75005	Decal, Danger, Do Not Put Hands	2
3	75081	• Decal, Danger, Do Not Put Hands Or Feet In Hopper At Any Time	2
4	75020	Decal, Hydraulic Oil	1
5	75003	Decal, Warning, Relieve Pressure Before Disassembly	1
6	75017	Decal, Diesel Fuel Only	1
7	75080	• Decal, Warning, This Equipment Operates at High Pressure in	1
8	75082	• Decal, Warning, Wear Eye Protection When Operating This	1
9	75083	Decal, Danger, You Must Not Operate This Machine Unless	2
10	75026	• Decal, R M5	2
11	75022	• Decal, The Filter Element Inside This Housing Must be Replaced	1
12	73132	• Decal, REED 4 1/2 Inch	2
13	75096	• Decal, REED	1
14	75009	Plate, Serial Number	1
.15	76597	Decal, Remote Control Panel	1



M5 MULTISPRAY MIXER & PUMP ILLUSTRATED PARTS MANUAL

PARTS
GROUP 10
FIGURE 03
PAGE 01


THIS PAGE INTENTIONALLY	LEFT BLANK.
-------------------------	-------------

	•		
	•		
		÷	



M5 MULTISPRAY MIXER & PUMP GROUP 20 HOPPER INSTALLATION

PARTS GROUP 20 FIGURE 00 PAGE 01

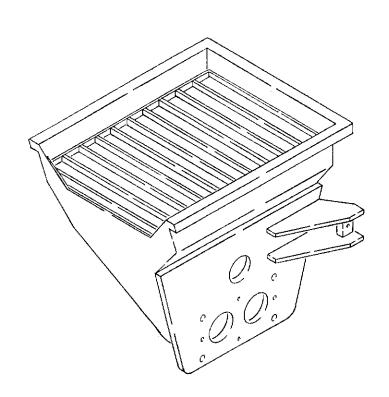


GROUP 20 HOPPER INSTALLATION CONTAINS THE FOLLOWING FIGURES:

FIGURE	00	TABLE OF CONTENTS
FIGURE	01	HOPPER INSTALLATION
FIGURE	02	OPTIONAL REMIXER/AUGER ASSEMBLY
FIGURE	03	OPTIONAL REMIXER/AUGER MOTOR ASSEMBLY
FIGURE	04	OPTIONAL REMIXER/AUGER CONTROL ASSEMBLY
FIGURE	05	OPTIONAL CONTROL VALVE SUBASSEMBLY



HOPPER INSTALLATION

PARTS GROUP 20 FIGURE 01 PAGE 01

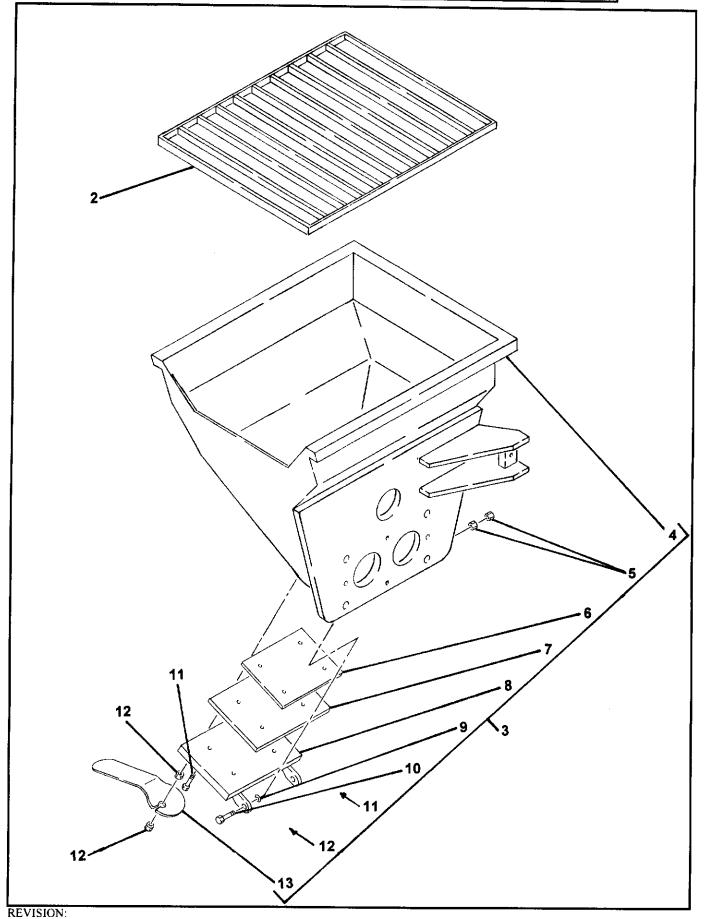



HOPPER INSTALLATION


PARTS GROUP 20 FIGURE 01 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	20-01	Installation, Hopper (See Group 10, Figure 01 for NHA)	Ref
2		• Grate, M5 Hopper	
3		Assembly, Hopper	1
4	76516	• • Weldment, Hopper	1
5		• • Nut, 3/8	4
6	70794	• • Insert, Door	1
7	70248	• • Rubber, Gasket	1
8	70795	• • Door, Hopper With Lift Plate (Lift Plate P/N: 70150)	1
9		• • Washer, 3/8	2
10		• • Bolt, Hex 3/8 - 16 x 1 3/8	2
11		• • Bolt, Hex 5/16 - 188 x 1	4
12		• • Nut, Hex 3/4	2
13	70096	• • Handle, Clean Out Door	1
-14	72850	Assembly, Remixer/Auger (Optional) (See Group 20, Figure 02 for DET)	1
-15	20-04	Assembly, Remixer/Auger Control Valve (Optional) (See Group 20, Figure 04 for DET)	1
-16	71429	Assembly, Vibrator (Optional) (See Group 80, Figure 05 for REF)	1



OPTIONAL REMIXER/AUGER ASSEMBLY

PARTS
GROUP 20
FIGURE 02
PAGE 01

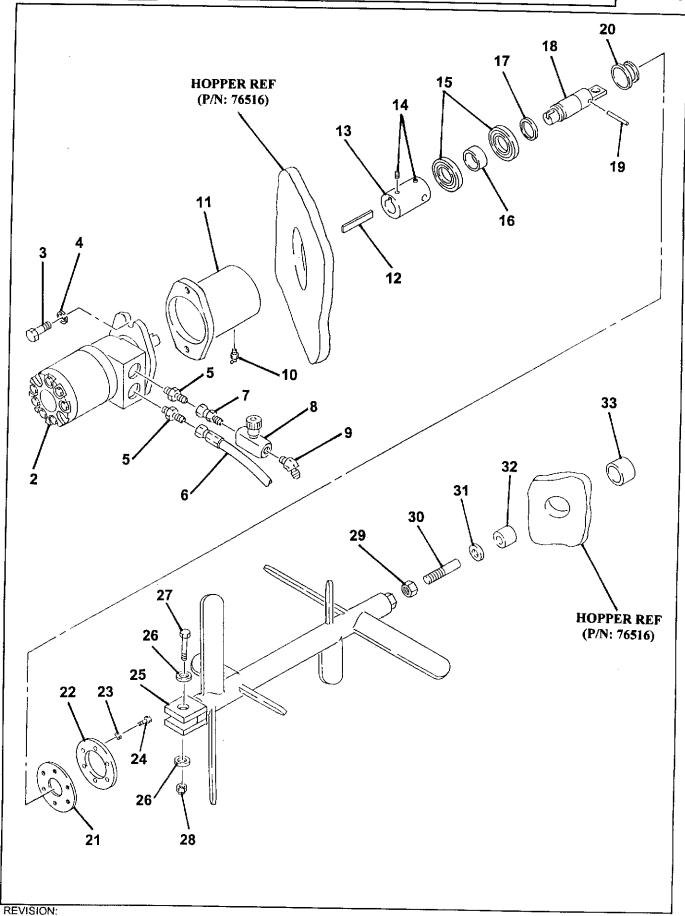



OPTIONAL REMIXER/AUGER ASSEMBLY


PARTS
GROUP 20
FIGURE 02
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	72850	Assembly, Remixer/Auger (Optional)	Ref
		(See Group 20, Figure 01 for NHA)	
2	74529	Assembly, Remixer/Auger Motor (Optional)	1
		(See Group 20, Figure 03 for DET)	
3		Bolt, Hex (attaching parts)	1
4		Washer, Lock (attaching parts)	2
5		• Fitting, STR	2
6	79851	• Kit, Hose	2
7		• Fitting, STR	1
8	74514	Valve, Needle	1
9		• Fitting, 45	1
10	80516	Fitting, Grease	1
11	70226	Housing, Bearing with Flange	1
12	30216	• Key	1
13	70225	Coupling	1
14	80374	• Screw, Set	2
15	71019	• Bearing, Ball	2
16	70215	• Spacer, Long	1
17	70216	• Spacer, Shot	1
18	70224	• Shaft, Agitator	1
19	80298	• Pin, Spring	1
20	71018	• Ring, Wear	1
21	70212	• Seal	1
22	70211	• Flange, Seal	1
23		Washer, Lock (attaching parts)	6
24		Bolt, Hex (attaching parts)	6
25	72851	• Shaft, Agitator with Paddle	1
26		Washer, Lock (attaching parts)	2
27	80156	Screw, Hex Head Cap (attaching parts)	1
28	80019	Nut (attaching parts) Nut (attaching parts)	1
29	80030	• Nut, Hex	1
30	70214	· · · · · · · · · · · · · · · · · · ·	1
31	77877	• Shaft, Idle	1
32	70219	• Spacer	
		• Bearing, Idler	1
33	70210	Housing, Idler Bearing] 1



OPTIONAL REMIXER/AUGER MOTOR ASSEMBLY

PARTS
GROUP 20
FIGURE 03
PAGE 01

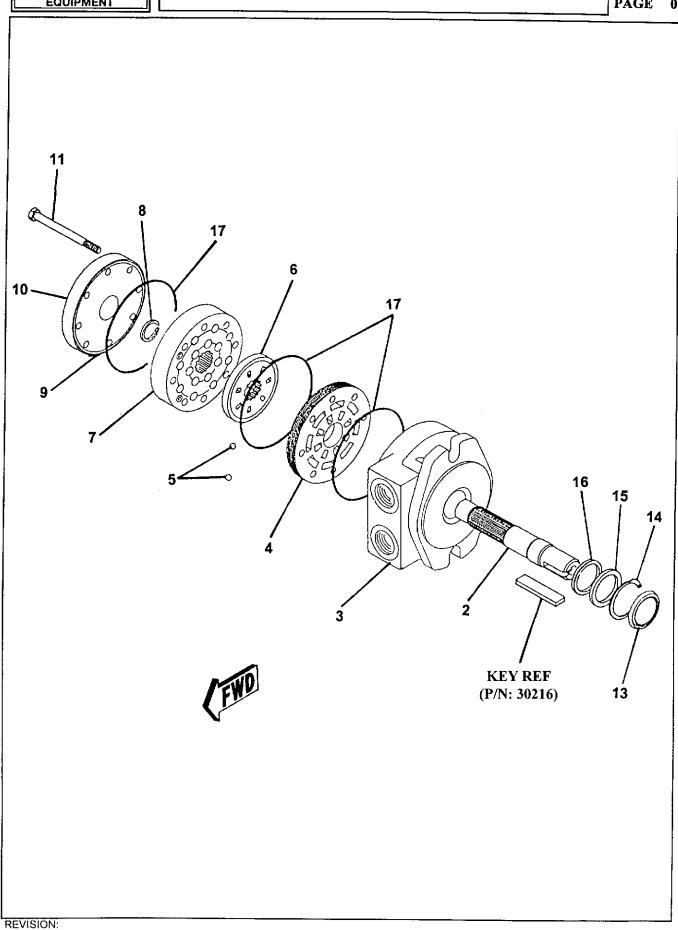



OPTIONAL REMIXER/AUGER MOTOR ASSEMBLY


PARTS
GROUP 20
FIGURE 03
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	74529	Assembly, , Remixer/Auger Motor (Optional) (See Group 20, Figure 02 for NHA)	Ref
2		• Shaft	1
3		Body, Motor	1
4		Plate, Commutator	1
5		Ball, Check Valve	2
6		Valve, Rotary	1
7		Sub-Assembly IGR	1
8		• Ring, Shaft Snap	1
9		• Plug, Vent	1
10		Cover, Motor	1
11		Bolt, Hex (attaching parts)	8
-12	74993	• Kit, Seal	1
13		• • Seal, Dust	1
14		• • Ring, Snap	i i
15		• • Ring, Back Up	1
16		• • Seal, Lip	1
17	· · · · · · · · · · · · · · · · · · ·	• • Seal, Square Ring	3



OPTIONAL REMIXER/AUGER CONTROL VALVE ASSEMBLY

PARTS
GROUP 20
FIGURE 04
PAGE 01

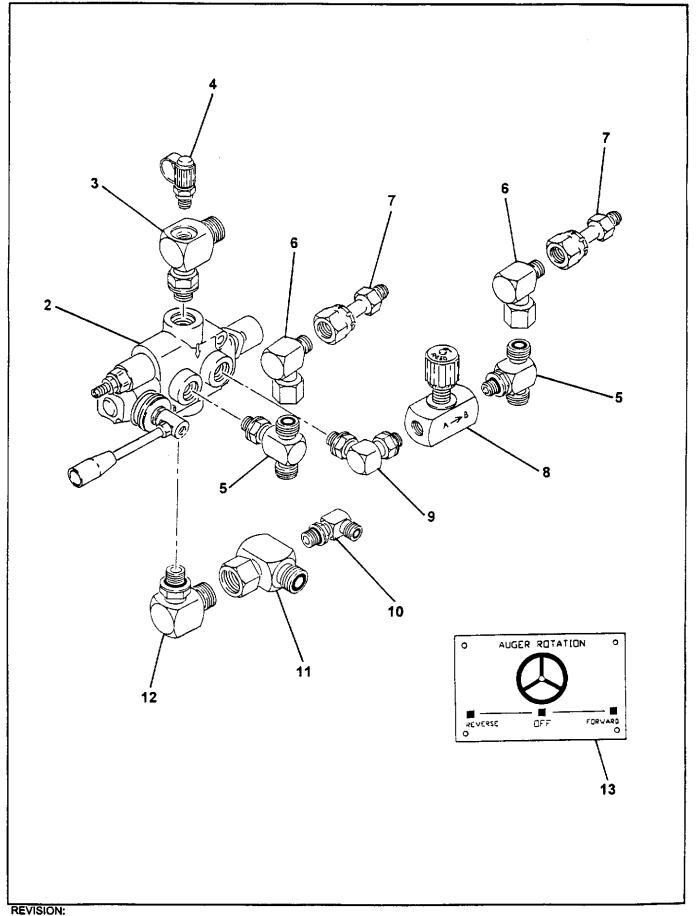



OPTIONAL REMIXER/AUGER CONTROL VALVE ASSEMBLY


PARTS GROUP 20 FIGURE 04 PAGE 02

ITEM NO.	REED 'S PARTS NO.	DESCRIPTION 12345	QTY
-1	20-04	Assembly, Auger Control Valve (Optional) (See Group 20, Figure 01 for NHA)	Ref
2	74584	• Sub-Assembly, Auger Control Valve (Optional) (See Group 20, Figure 05 for DET)	1
3		• Tee, Special Drill 4 SAE FS6801-10-8	1
4	78593	• Fitting, Mini Check (Port)	1
5		• Tee, MJ-MJ-MBT-6	
6		• Fitting, 90 FS6500-6-6	
7		• Fitting, Connector FS6500-6-6	2
8		Controller, Check	1
9		• Fitting, 90 MB-MB90-6-6	1
10		• Fitting, 90 FS6801-4-6	1
11		Tee, Special Drill 6 SAE FS6500-10-10	1
12		• Fitting, 90 FS6801-10-8	1 1
13	79758	Plate, Auger Rotation	1



OPTIONAL REMIXER/AUGER CONTROL VALVE SUBASSEMBLY

PARTS GROUP 20 FIGURE 05 PAGE 01

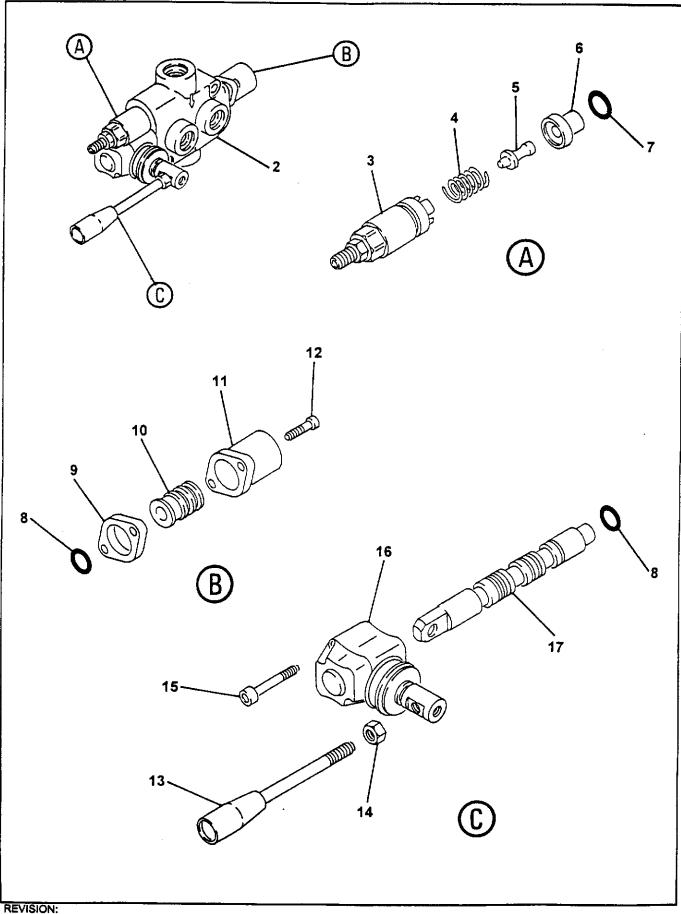



OPTIONAL REMIXER/AUGER CONTROL VALVE SUBASSEMBLY

PARTS GROUP 20 FIGURE 05 PAGE 02

ITEM NO.	REED'S	DESCRIPTION	QTY
110.	PARTS NO.	12345	711
-1	74584	Sub-Assembly, Auger Control Valve (Optional) (See Group 20, Figure 04 for NHA)	Ref
2		Body, Valve	1
3		• Kit, Screw	1
4		• Spring	1
5		• Pin, Screw Kit	1
6		• Ring	1
7		• O-Ring	1
8		• O-Ring	2
9		• Spacer	
10		Kit, Spool Control	1
11	-	Cap, Spool	1
12		Screw, SOC (attaching Parts)	2
13		Handle, Remixer Valve	1
14		Nut (attaching parts)	1
15		• Screw, SOC	2
16		• Lever, L	1
17		• Spool	1



M5 MULTISPRAY MIXER & PUMP ILLUSTRATED PARTS MANUAL

PARTS
GROUP 20
FIGURE 06
PAGE 01

THIS PAGE INTENTIONALLY LEFT BLANK.

REVISION:




M5 MULTISPRAY MIXER & PUMP GROUP 30 TANK INSTALLATION

PARTS
GROUP 30
FIGURE 00
PAGE 01

GROUP 30 HYDRAULIC TANK INSTALLATION CONTAINS THE FOLLOWING FIGURES:


FIGURE	00	TABLE OF CONTENTS
FIGURE	01	TANK INSTALLATION
FIGURE	02	ACCUMULATOR ASSEMBLY
FIGURE	03	FUEL TANK ASSEMBLY
FIGURE	04	D 08 VALVE ASSEMBLY
FIGURE	05	DIRECTIONAL CONTROL VALVE SUBASSEMBLY
FIGURE	06	D 08 SOLENOID VALVE SUBASSEMBLY
FIGURE	07	D 05 VALVE ASSEMBLY
FIGURE	08	D 05 SOLENOID VALVE SUBASSEMBLY
FIGURE	09	HYDRAULIC TANK ASSEMBLY
FIGURE	10	HYDRAULIC MIXER DUMP MANIFOLD ASSEMBLY
FIGURE	11	MIXER DUMP MANIFOLD SOLENOID VALVE SUBASSEMBLY

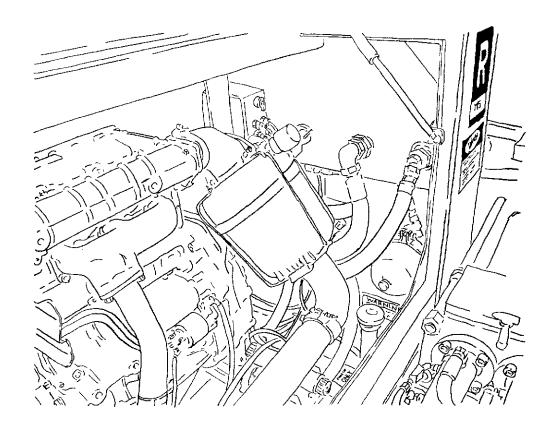



TANK INSTALLATION

PARTS
GROUP 30
FIGURE 01
PAGE 01

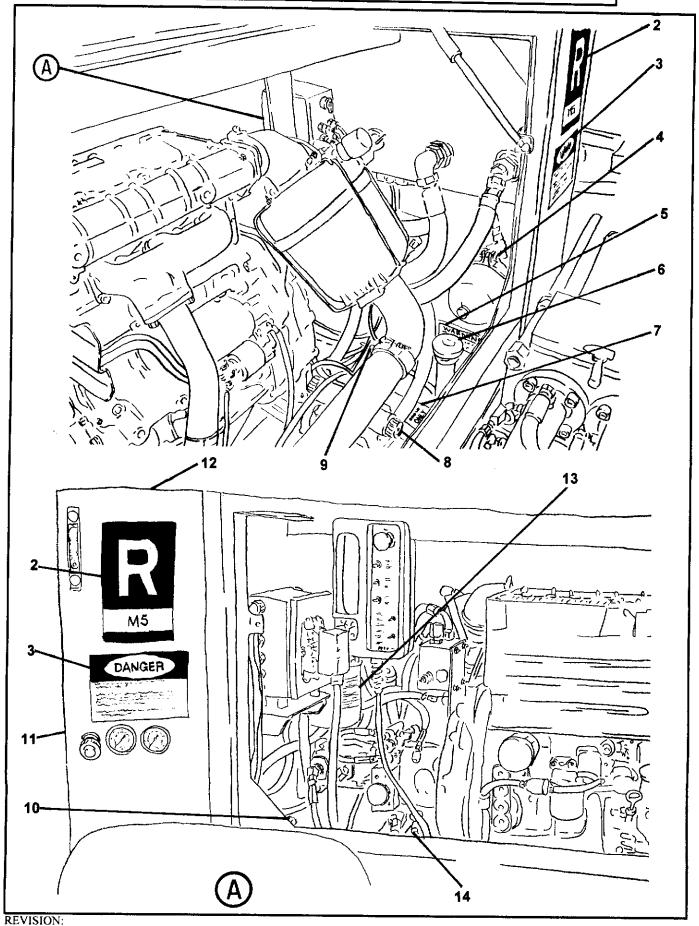



TANK INSTALLATION


PARTS GROUP 30 FIGURE 01 PAGE 02

ITEM	REED'S	DESCRIPTION	OTY
NO.	PARTS NO.	12345	QTY
-1	30-01	Installation, Tank	Ref
		(See Group 10, Figure 01 for NHA)	
2	76892	• Decal, <i>R M5</i>	2
3	75083	Decal, Danger, You Must Not Operate This Machine Unless	2
4	30-02	Assembly, Accumulator	
		(See Group 30, Figure 02 for DET)	1
5	75003	Decal, Warning, Relieve Pressure Before Disassemble	1
6	76857	Assembly, Fuel Tank	1 1
		(See Group 30, Figure 03 for DET)	•
7	75017	Decal, Diesel Only	
8	30-04	Assembly, D 08 Valve	
		(See Group 30, Figure 04 for DET)	'
9	79718	Assembly, Adjustable Flow Control for Mixer	1
10	30-07	Assembly, D 05 Valve	1
		(See Group 30, Figure 07 for DET)	
11	30-09	Assembly, Hydraulic Tank	1 1
		(See Group 30, Figure 09 for DET)	
12	75020	Decal, Hydraulic Oil	1
13	75022	• Decal, The Filter Element Inside This Housing Must be Replaced	1
14	30-10	Assembly, Hydraulic Mixer Dump Manifold	1
_		(See Group 30, Figure 10 for DET)	
-15	76858	• Kit, Hydraulic Hose	1



ACCUMULATOR ASSEMBLY

PARTS
GROUP 30
FIGURE 02
PAGE 01

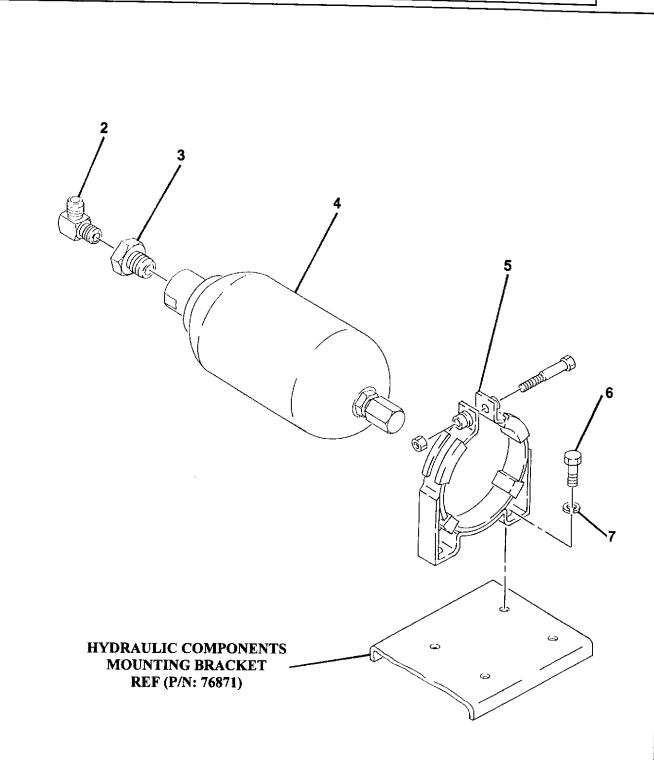



ACCUMULATOR ASSEMBLY


PARTS GROUP 30 FIGURE 02 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	30-02	Assembly, Accumulator (See Group 30, Figure 01 for NHA)	Ref
2		• Fitting, 90	1
3		• Reducer	
4	74515	Accumulator, 1 Gal	- · ·
5	73171	Bracket, Accumulator	$\frac{1}{2}$
6		Bolt, Hex (attaching parts)	4
7		Washer, Lock (attaching parts)	4
-8	71460	Kit, Accumulator Charge (See Group 80, Figure 07 for DET)	Ref
-9	80-08	Kit, Bladder Repair (See Group 80, Figure 08 for DET)	Ref



FUEL TANK ASSEMBLY

PARTS
GROUP 30
FIGURE 03
PAGE 01

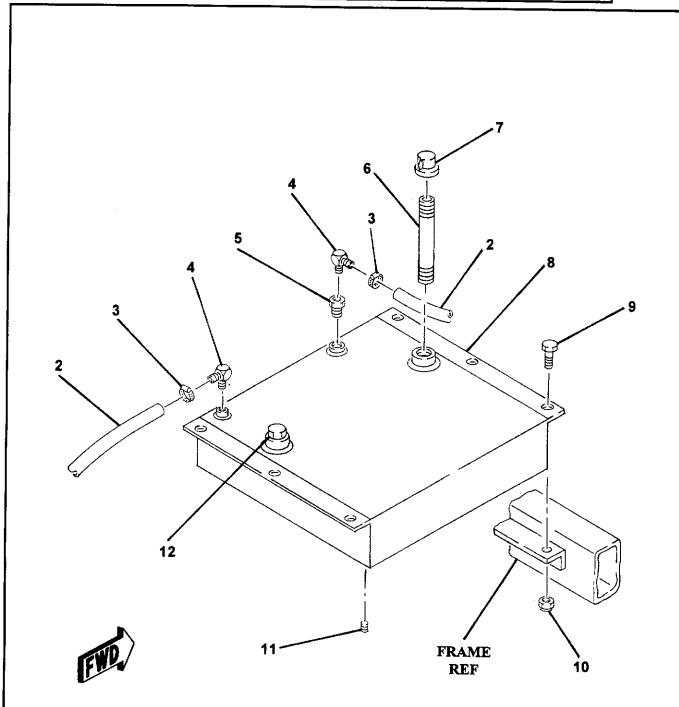



FUEL TANK ASSEMBLY


PARTS
GROUP 30
FIGURE 03
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	76857	Assembly, Fuel Tank	Ref
		(See Group 30, Figure 01 for NHA)	
2	76879	Tube, Fuel Pick Up	A/R
3		Clamp, Mini	2
4		• Fitting, 90	2
5		• Reducer	1
6	71363	Nipple	
7	74710	Cap, Fuel	
8	76872	Weldment, Fuel Tank	1
9		Bolt, Hex (attaching parts)	6
10		• Nut, Lock (attaching parts)	6
11		• Plug, Drain	1
12		• Plug, for Fuel Gage (Optional)	1
-13	73773	• Gage, Fuel (Optional)	1



D 08 VALVE ASSEMBLY

PARTS GROUP 30 FIGURE 04 PAGE 01

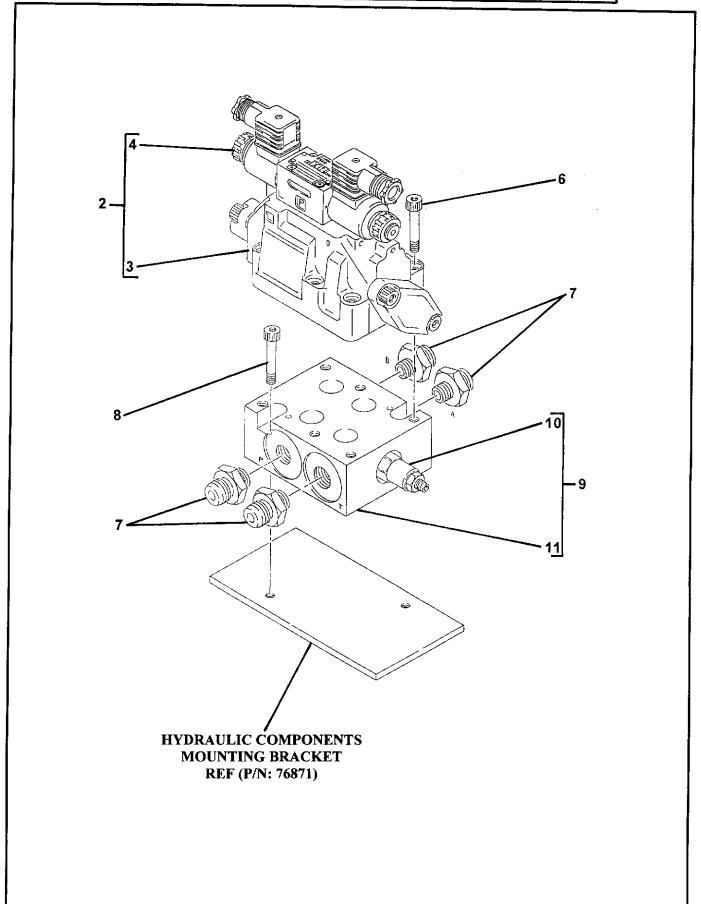



D 08 VALVE ASSEMBLY


PARTS
GROUP 30
FIGURE 04
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	30-04	Assembly, D 08 Valve (See Group 30, Figure 01 for NHA)	Ref
2	74990	Valve, Main	1
3	74937	• • Sub-Assembly, Directional Control Valve (See Group 30, Figure 05 for DET)	1
4	74938	• • Sub-Assembly, Solenoid Valve (See Group 30, Figure 06 for DET)	1
-5	74994	• • Kit, Seal	1
6		• Screw, 1/2 - 13 x 2 1/4	6
7		• Fitting, 90	4
8		• Screw, 1/2 - 13 x 2 1/2	2
9	74251	Assembly, Sub-Plate	1
10	74252	• • Valve, Relief	1
11	74249	• • Sub-Plate	1



DIRECTIONAL CONTROL VALVE SUB-ASSEMBLY

PARTS
GROUP 30
FIGURE 05
PAGE 01

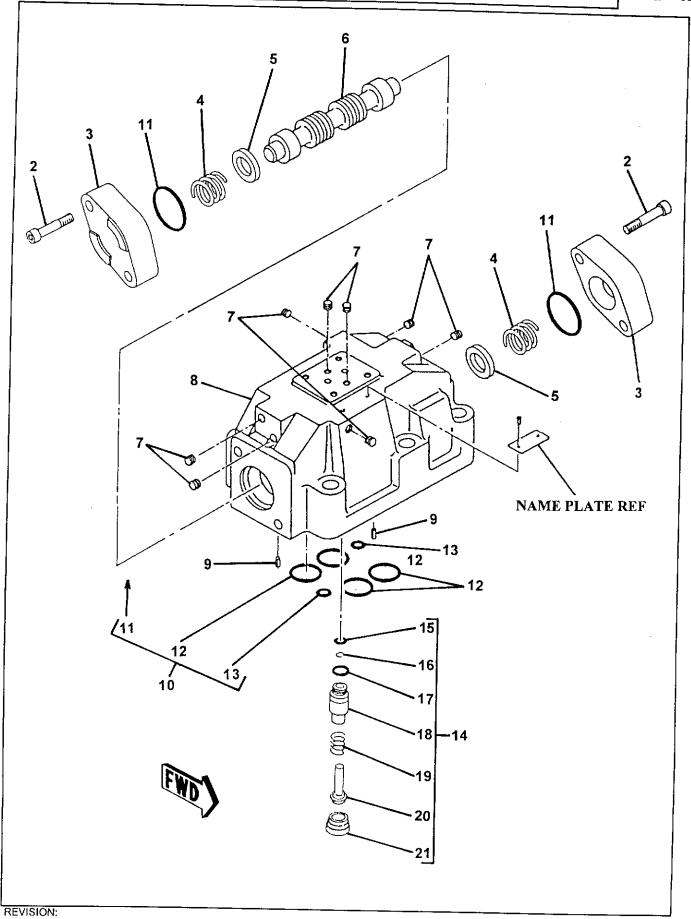



DIRECTIONAL CONTROL VALVE SUB-ASSEMBLY


PARTS
GROUP 30
FIGURE 05
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	74938	Sub-Assembly, Directional Control Valve (See Group 30, Figure 04 for NHA)	Ref
2		• Screw, SOC M10 x 40	1
3		• Cover	
4		Spring, Compression	2
5		• Plate, Spring	2
6		• Spool	6
7		• Plug M6	4
8		Housing, Cartridge	
9		• Pin, Grooved	1
10		• Kit, Seal	1
11		• • O-Ring, 42 x 3	- 1
12		• • O-Ring, 27 x 3	1
13	-	• • O-Ring, 19 x 3	1
14	73147	Sub-Assembly, Pilot Pressure Valve	2
15		• • O-Ring, 12 x 1.5	1
16		• • Circlip, A8	1
17		• • O-Ring	1
18		• • Sleeve	- <u> </u>
19		• • Spring, Compression	1
20		• • Cone	1
21		• • Valve, Seat	<u> </u>



D 08 SOLENOID VALVE SUBASSEMBLY

PARTS
GROUP 30
FIGURE 06
PAGE 01

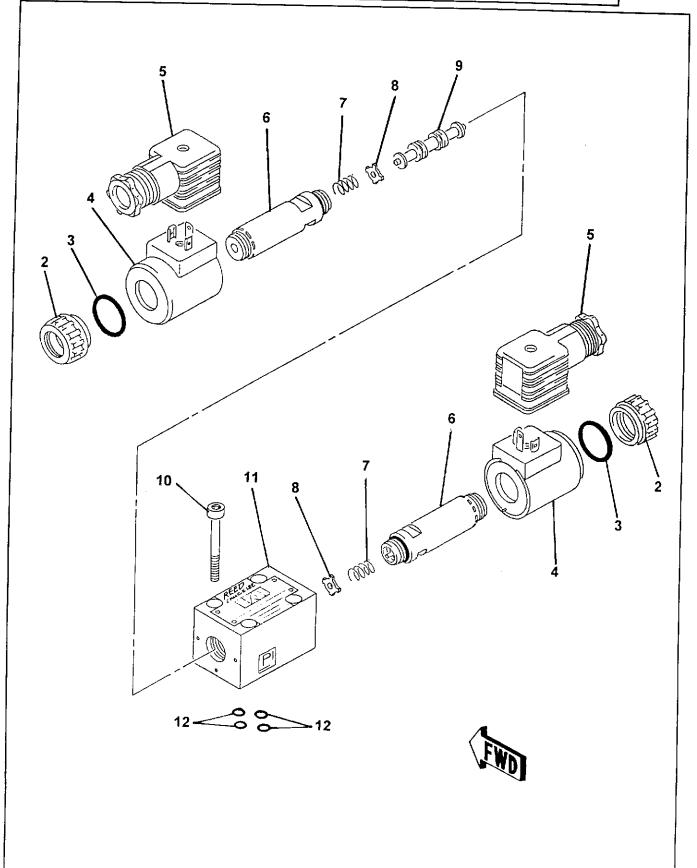



D 08 SOLENOID VALVE SUBASSEMBLY


PARTS
GROUP 30
FIGURE 06
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	74938	Sub-Assembly, D 08 Solenoid Valve (See Group 30, Figure 04 for NHA)	Ref
2		• Cap, Coil	2
3		• O-Ring	2
4		Coil, Solenoid	2
5	74597	Connector, Plug	2
6		Armature	2
7		• Spring	2
8		• Plate, Spring	2
9		Spool	1
10		• Screw, SOC	4
11		Housing, Solenoid Valve	1
12		• O-ring	4



D 05 VALVE ASSEMBLY

PARTS
GROUP 30
FIGURE 07
PAGE 01

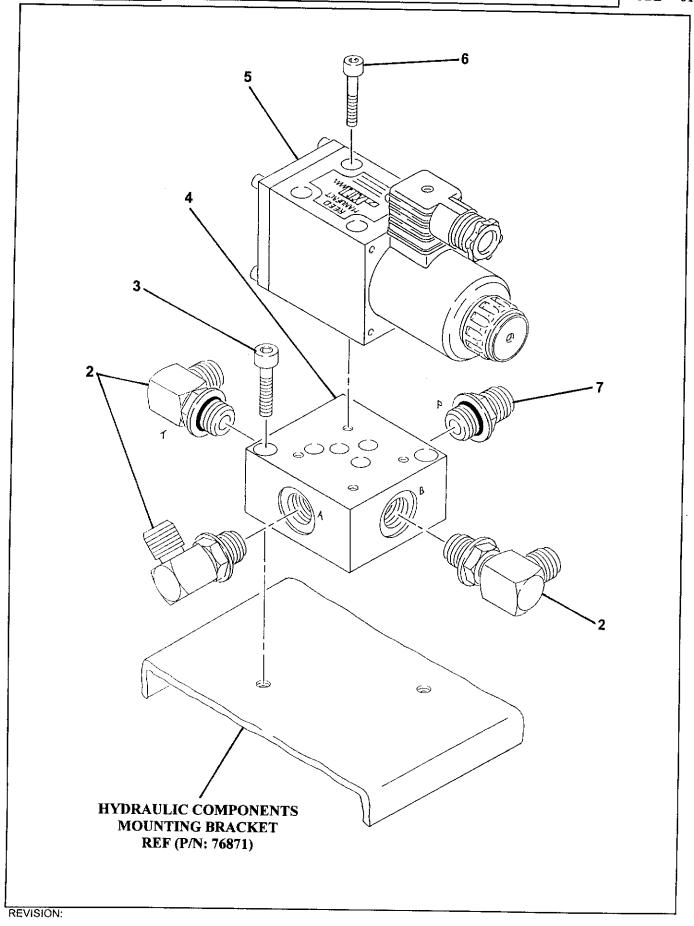



D 05 VALVE ASSEMBLY


PARTS
GROUP 30
FIGURE 07
PAGE 02

ITEM NO.	REED'S	DESCRIPTION	QTY
110.	PARTS NO.	12345	QII
-1	30-07	Assembly, D 05 Valve (See Group 30, Figure 01 for NHA)	Ref
2		• Fitting, 90	3
3	-	• Screw, Cap	2
4	72983	• Sub-Plate, D 05	
5	72984	• Sub-Assembly, D 05 Solenoid Valve (See Group 30, Figure 08 for DET)	1
6		Screw, Cap (attaching parts)	4
7		• Fitting, STR	



D 05 SOLENOID VALVE SUB-ASSEMBLY

PARTS
GROUP 30
FIGURE 08
PAGE 01

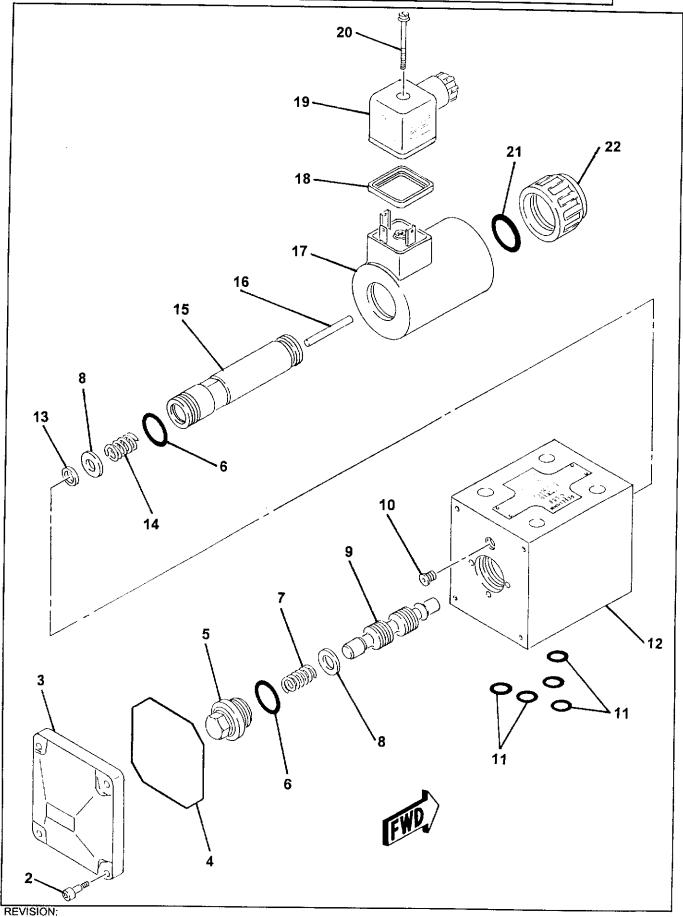



D 05 SOLENOID VALVE SUB-ASSEMBLY


PARTS
GROUP 30
FIGURE 08
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	72984	Sub-Assembly, Solenoid Valve	
		(See Group 30, Figure 07 for NHA)	Ref
2	_	• Screw, M5 -16	4
3		• Cover	
4		• Seal	-
5		Cover, Spring	
6		• O-Ring	$\frac{1}{2}$
7		Spring, Compression	
8		Retainer, Spring	$\frac{1}{2}$
9		• Spool	
10		• Plug	1
11		• O-Ring	$\frac{1}{5}$
12		Housing	1
13		• Disk	1
14		Spring, Compression	
15		Bolt, Special	1
16		• Armature	1
17		Coil, 12 VDC Solenoid	
18		• Seal	1
19	74597	Connector, Plug	1
20		• • Screw (attaching parts)	
21		• O-Ring	1
22		• Nut, Coil	1



HYDRAULIC TANK ASSEMBLY

PARTS GROUP 30 FIGURE 09 PAGE 01

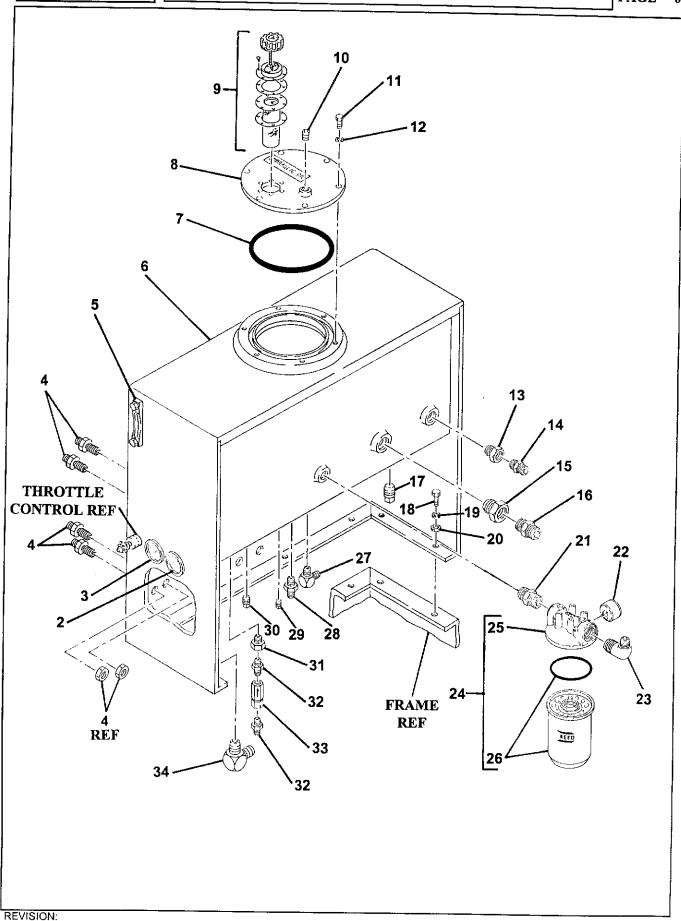



HYDRAULIC TANK ASSEMBLY


PARTS
GROUP 30
FIGURE 09
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	30-09	Assembly, Hydraulic Tank	Ref
	70277	(See Group 30, Figure 01 for NHA)	
2	70366	Gauge, 3,000 PSI Hydraulic	1
3	74562	Gauge, 5,000 PSI Hydraulic	1
4		• Fitting, STR	4
5	74509	Gauge, Sight	1
6	79490	Weldment, Hydraulic Tank	1
7	74004	• O-Ring	1
8	72645	Cover, Tank Top	1
9	74508	Cap, Filler Breather	1
10		• Plug	1
11		• Bolt, Hex	6
12		Washer, Lock	6
13		• Reducer	1
14		• Fitting, STR	- 1
15		• Reducer	
16	·	• Fitting, STR	- 1
17		• Plug	1
18	10 Hard 10 Hard	• Bolt, Hex	8
19	· · · · · · · · · · · · · · · · · · ·	• Washer, Lock	8
20		• Washer, Flat	8
21		• Fitting, STR	1
22	79453	Gauge, Hydraulic Filter	1
23		• Fitting, 90	1
24	79452	Assembly, Return Filter	1
25		• • Cap, Filter	1
26	79554	• • Element, Filter with O-Ring	1
27		• Fitting, 90	
28		• Fitting, STR	1
29		• Plug	1
30		• Plug	1
31		• Reducer	<u></u>
32		• Fitting, STR	2
33	74324	• Valve, Check	1
34		• Fitting, 90	1



HYDRAULIC MIXER DUMP MANIFOLD ASSEMBLY

PARTS
GROUP 30
FIGURE 10
PAGE 01

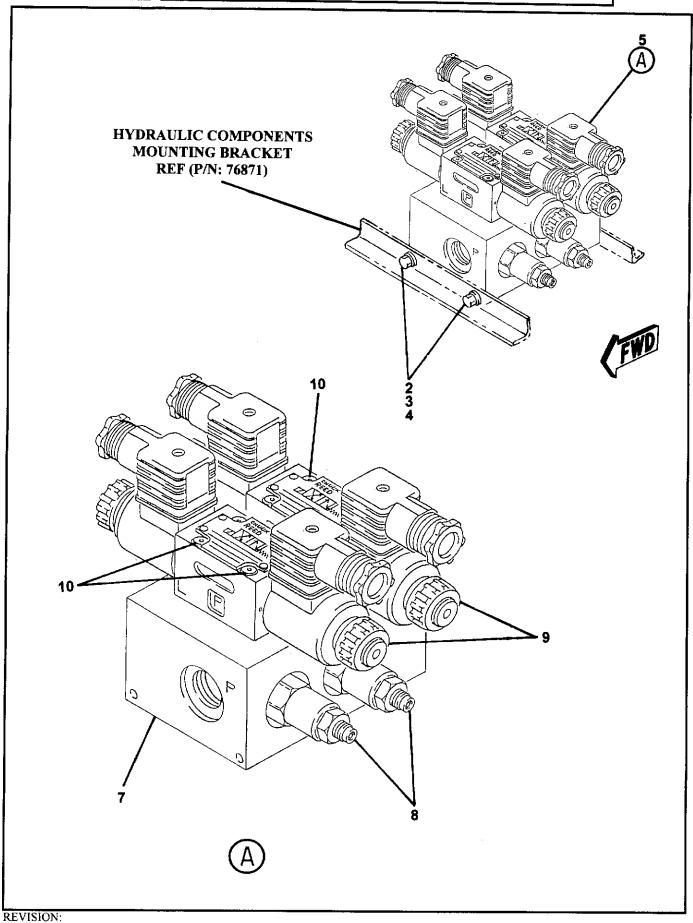



HYDRAULIC MIXER DUMP MANIFOLD ASSEMBLY


PARTS GROUP 30 FIGURE 10 PAGE 02

NO.	REED'S PARTS NO.	DESCRIPTION 12345	QTY
-1	10-10	Assembly, Hydraulic Mixer Dump Manifold (See Group 30, Figure 01 for NHA)	Ref
2		• Bolt, Hex	2
3		Washer, SPL Lock	4
4		• Nut, Hex	
5	76821	Assembly, Mixer Dump Manifold	1
-6	76903	• • Kit, Seal	1
7	76904	• • Block, Manifold	1
8	76905	• • Cartridge, Relief	2
9	76906	Sub-Assembly, Mixer Dump Manifold (See Group 30, Figure 11 for NHA)	2
10		• • Screw, Hex	8



MIXER DUMP MANIFOLD SOLENOID VALVE SUBASSEMBLY

PARTS GROUP 30 FIGURE 11 PAGE 01

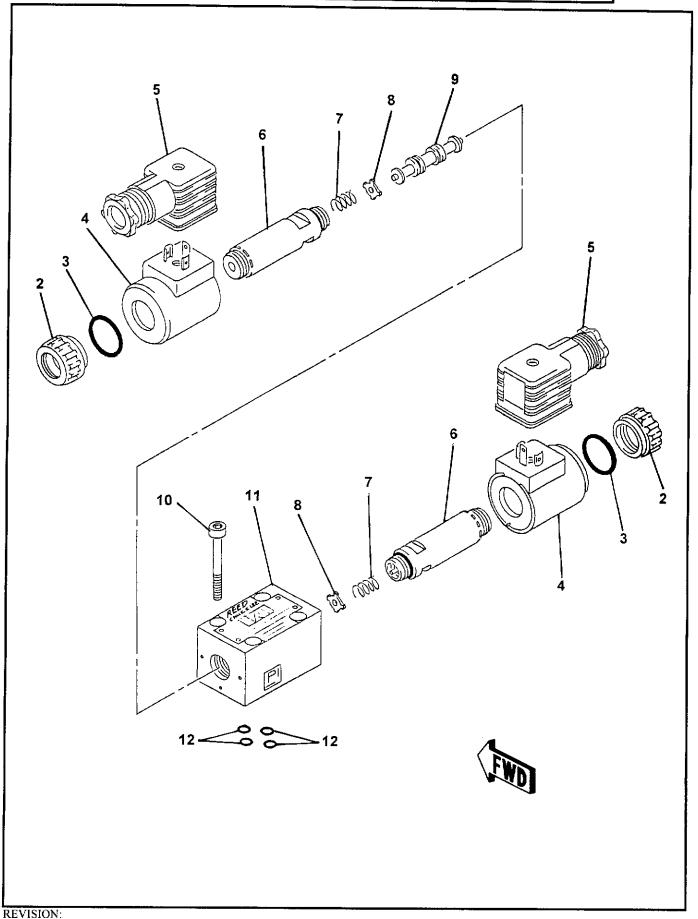



MIXER DUMP MANIFOLD SOLENOID VALVE SUBASSEMBLY

PARTS
GROUP 30
FIGURE 11
PAGE 02

ITEM NO.	REED'S	DESCRIPTION	QTY
NO.	PARTS NO.	12345	VII
-1	76906	Sub-Assembly, Mixer Dump Manifold Solenoid Valve (See Group 30, Figure 10 for NHA)	Ref
2		• Cap, Coil	2
3		• O-Ring	2
4		Coil, Solenoid	1 2
5	74597	Connector, Plug	2
6		Armature	$\frac{1}{2}$
7		• Spring	2
8		• Plate, Spring	
9		• Spool	
10		• Screw, SOC	4
11		Housing, Solenoid Valve	+ 1
12		• O-ring	4



M5 MULTISPRAY MIXER & PUMP ILLUSTRATED PARTS MANUAL

PARTS GROUP 30 FIGURE 12 PAGE 01

THIS PAGE INTENTIONALLY LEFT BLANK.


REVISION:

•		
	r L	
	· •	
	1	
		•



M5 MULTISPRAY MIXER & PUMP GROUP 40 POWER TRAIN INSTALLATION

PARTS
GROUP 40
FIGURE 00
PAGE 01

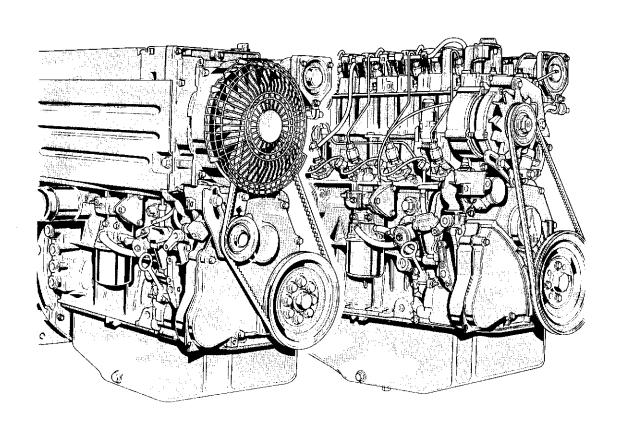

GROUP 40 POWER TRAIN INSTALLATION CONTAINS THE FOLLOWING FIGURES:

FIGURE 00 TABLE OF CONTENTS

FIGURE 01 POWER TRAIN INSTALLATION HYDRAULIC PUMPS ASSEMBLY


FIGURE 03 MAIN PUMP ASSEMBLY

FIGURE 04 UNLOADER MANIFOLD ASSEMBLY BATTERY MOUNTING ASSEMBLY



POWER TRAIN INSTALLATION

PARTS
GROUP 40
FIGURE 01
PAGE 01

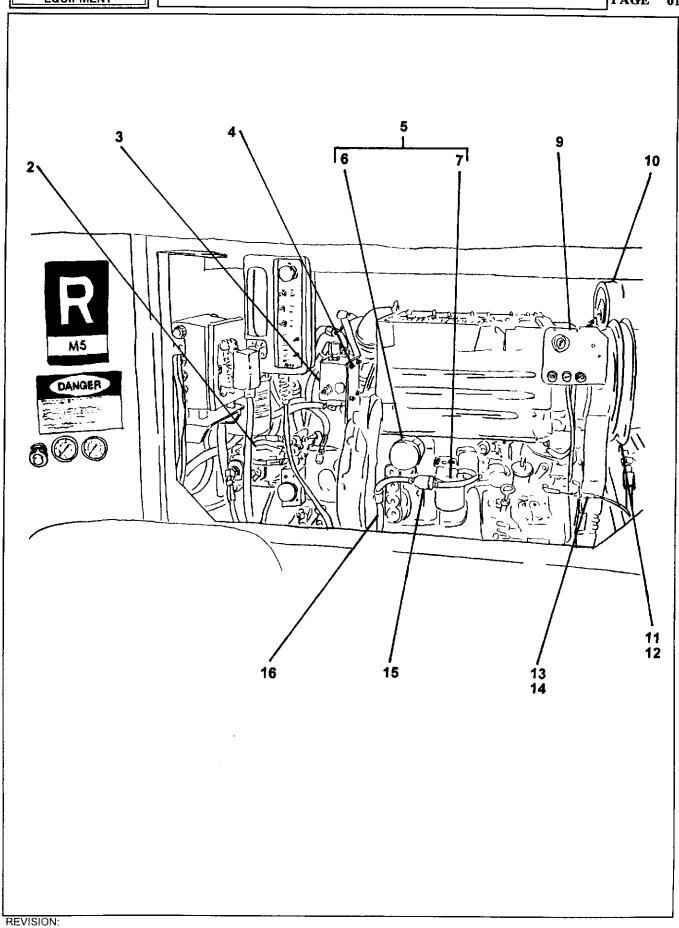



POWER TRAIN INSTALLATION


PARTS
GROUP 40
FIGURE 01
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	40-01	Installation, Power Train	Ref
<u> </u>	10.00	(See Group 10, Figure 01 for NHA)	
2	40-02	Assembly, Main and Auxiliary Pumps	1
	40.04	(See Group 40, Figure 02 for DET)	
3	40-04	Assembly, Unloader Manifold Assembly	1
		(See Group 40, Figure 04 for DET)	
4	76873	Plate, Valve Mounting	1
5	74230	Assembly, Engine	1
		(See Vendor Section, Figure 01 for REF)	
6	72909	• • Element, Oil Filter	1
7	72960	• • Element, Fuel Filter	1
-8	74231	• Kit, Flex Mount	1
9		Control, Engine	1
		(See Group 50, Figure 01 for REF)	
10	76874	Assembly, Hydraulic Oil Cooler	1
11	79534	Weldment, Small Air Intake	1
12	79535	Weldment, Large Air Intake	1
13	78202	Coupler, Throttle Cable	
14	79439	Cable, Throttle Control	1
15	73551	Filter, Inline Fuel	1
16		Hose, Fuel	A/R
-17	40-05	Assembly, Battery Mounting	1
		(See Group 40, Figure 05 for DET)	
-18		Assembly, Wiring Harness	1



HYDRAULIC PUMPS ASSEMBLY

PARTS GROUP 40 FIGURE 02 PAGE 01

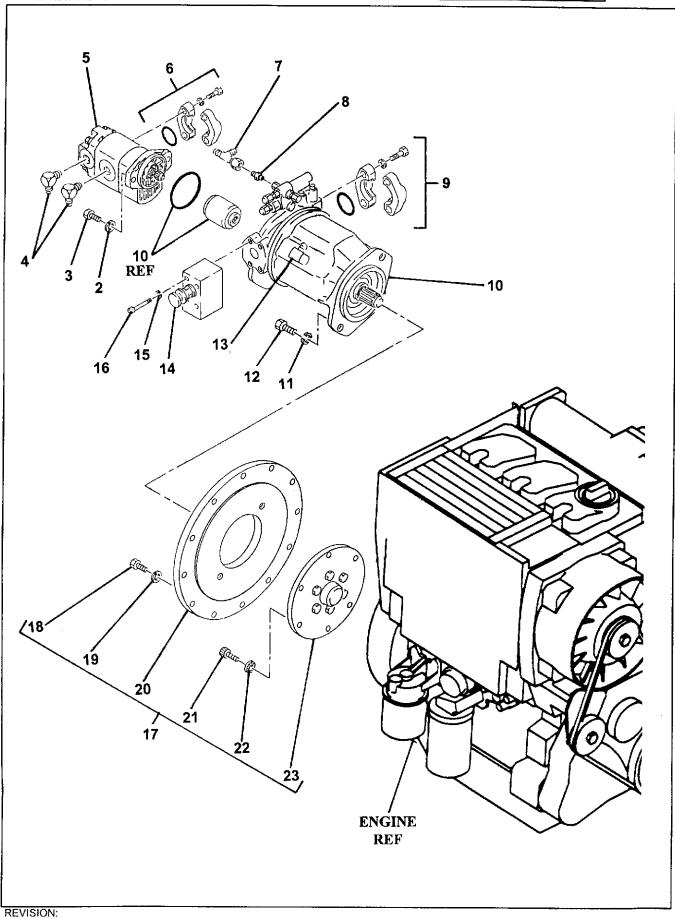



HYDRAULIC PUMPS ASSEMBLY


PARTS
GROUP 40
FIGURE 02
PAGE 02

ITEM	REED 'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	40-02	Assembly, Hydraulic Pump	Ref
	······································	(See Group 40, Figure 01 for NHA)	
2		Washer, Lock	2
3		• Bolt, Hex	2
4		• Fitting, 90	2
5	73156	Assembly, Double Auxiliary Mixer Pump	1
		(See Group 90, Figure 06 for DET)	
6		• Kit, Flange	1
7		• Fitting, Tee	1
8		• Fitting STR	1
9		• Kit, Flange	1
10	79630	Assembly, Main Pump	1
		(See Group 40, Figure 03 for DET)	
		(Also See Vendor Section, Figure 02 for REF)	
11		Washer, Lock (attaching parts)	2
12		Bolt, Hex (attaching parts)	2
13		• Fitting, 90	1
14	79633	Control, Flow	1
15		Washer, Lock (attaching parts)	4
16		Screw, Allen (attaching parts)	4
17	79631	Assembly, Flywheel Coupling	1
18		• • Bolt, Hex	12
19		• • Washer, SPL	12
20		• • Plate, Flywheel	1
21		• • Screw	6
22		• • Washer	6
23		• • Drive, Flywheel	1
-24	79632	Plate, Pump Mounting	1



MAIN PUMP ASSEMBLY

PARTS GROUP 40 FIGURE 03 PAGE 01

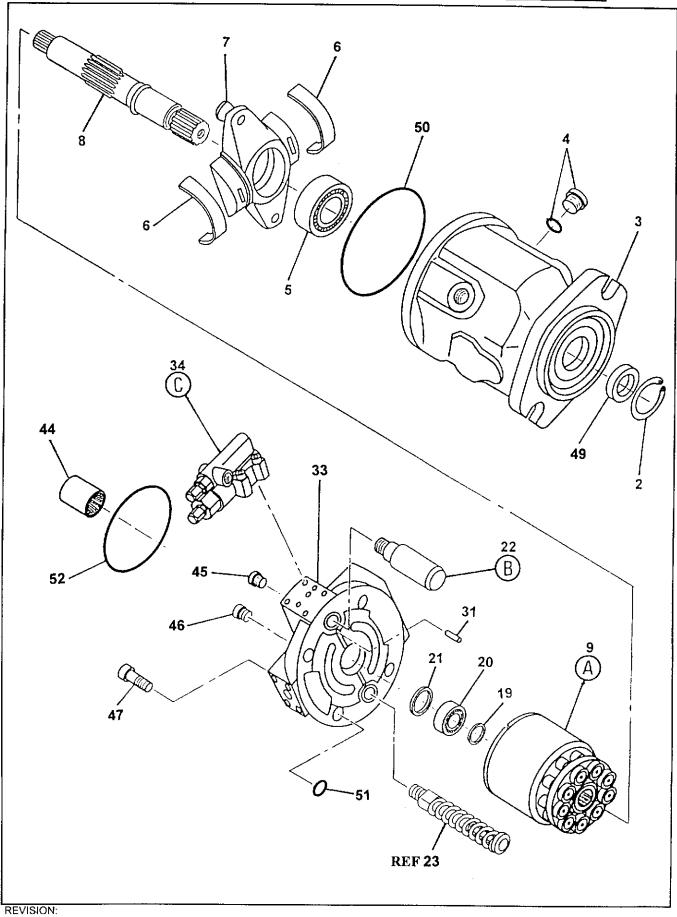



MAIN PUMP ASSEMBLY

PARTS
GROUP 40
FIGURE 03
PAGE 02


ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	79719	Assembly, Main Pump	Ref
2		(See Group 40, Figure 02 for NHA)	117.
l i		• V-Ring, Seeger	1
3		Housing, Pump	1
4		• Plug, O-Ring	1
5		Bearing, Tapered Roller	
6		Bearing, Cradle	2
7		Assembly, Cradle	1
8		Shaft, Drive	i
9		Assembly, Rotary	- 1
23		Assembly, Piston Control	-
33		• Block	1
34		Assembly, Control Valve	i
44		Coupling	1
45		• Plug	
46		• Plug	1
47		Screw, Cap	2
-48		• Kit, Seal	
49		• • Seal, Shaft	<u> </u>
50		• • O-Ring	-
51		• • O-Ring	1
52		• • O-Ring	



REVISION:

MAIN PUMP ASSEMBLY

PARTS
GROUP 40
FIGURE 03
PAGE 03

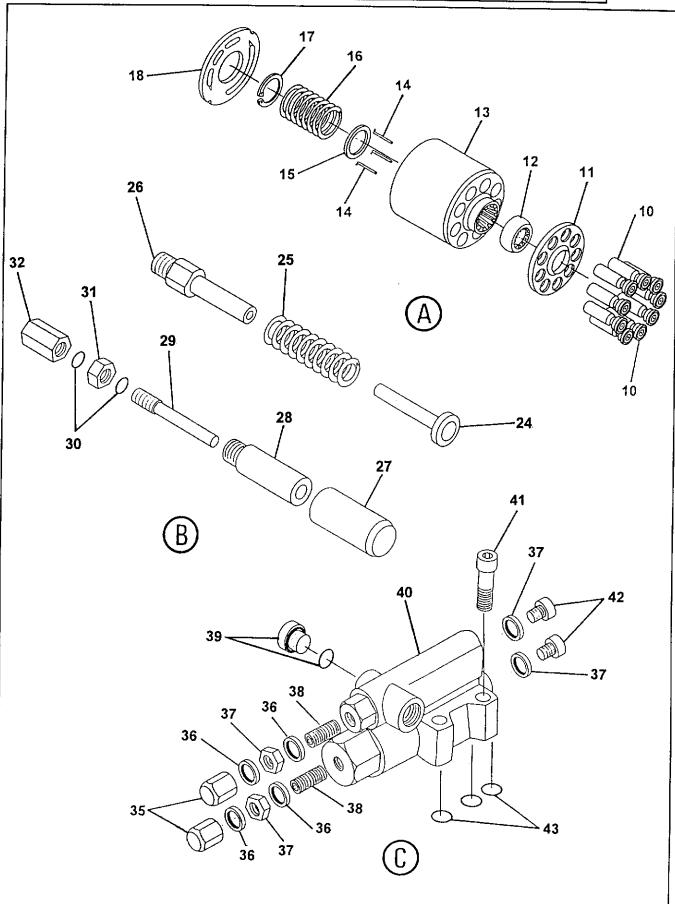



MAIN PUMP ASSEMBLY


PARTS
GROUP 40
FIGURE 03
PAGE 04

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-9		Assembly, Rotary	1
10		• • Piston	9
11		• • Plate, Retaining	1
12		• • Ball, Retaining	
13		• • Barrel	1
14		• • Pin, Pressure	3
15		• • Disc, Retaining Clip	
16		• • Spring	
17		• • Ring, Retaining	
18		• • Plate, Lens	1
-23		Assembly, Piston Control	1
24		• • Piston, Counter	
25		• • Spring	1
26		• • Guide, Counter Piston	<u>1</u>
27		• • Piston, Counter	1
28		• • Guide, Counter Piston	1
29		• • Screw, Max Volume Adjustment	1
30		• • O-Ring	2
31		• • Nut, Lock	1
32		• • Nut, Acorn	1
-34		Assembly, Control Valve	1
35		• • Nut, Acorn	2
36		• • O-Ring	3
37		• • Nut, Jam	2
38		• • Screw, Adjusting	2
39		• • Plug, O-Ring	1
40		• • Body, Control Valve	1
41		• • Screw, Cap (attaching parts)	4
42		• • Plug	2
43		• • O-Ring	3



UNLOADER MANIFOLD ASSEMBLY

PARTS GROUP 40 FIGURE 04 PAGE 01

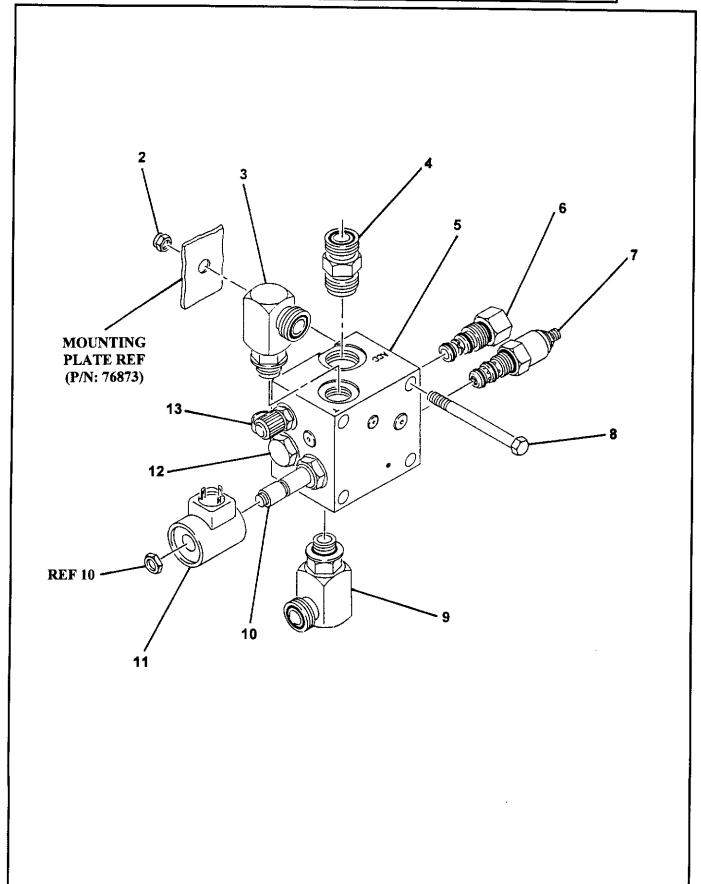



UNLOADER MANIFOLD ASSEMBLY


PARTS GROUP 40 FIGURE 04 PAGE 02

ITEM	REED'S	DESCRIPTION	OTH
NO. PARTS NO		12345	QTY
-1	40-04	Assembly, Unloader Manifold (See Group 40, Figure 01 for NHA)	Ref
2		• Nut, Nylock 5/16 x 18	4
3		• Fitting, MB-MJ90-12-12	1
4		• Fitting, STR FS6400-12-10	2
5	72803	Manifold, Unloader	1
6	73203	Valve, Directional Control	1
7	73155	Cartridge, Unloader	1
8		• Bolt, Hex 5/16 - 18 x 3 3/4	4
9		• Fitting, MB-MJ90-12-12	1
10	73143	Cartridge, Solenoid Valve	1
11	73184	• • Coil, 12 VDC	1
12	73140	Cartridge, Check Valve	1
13	78593	• Fitting, Mini Check (Port)	1



BATTERY MOUNTING ASSEMBLY

PARTS
GROUP 40
FIGURE 05
PAGE 01

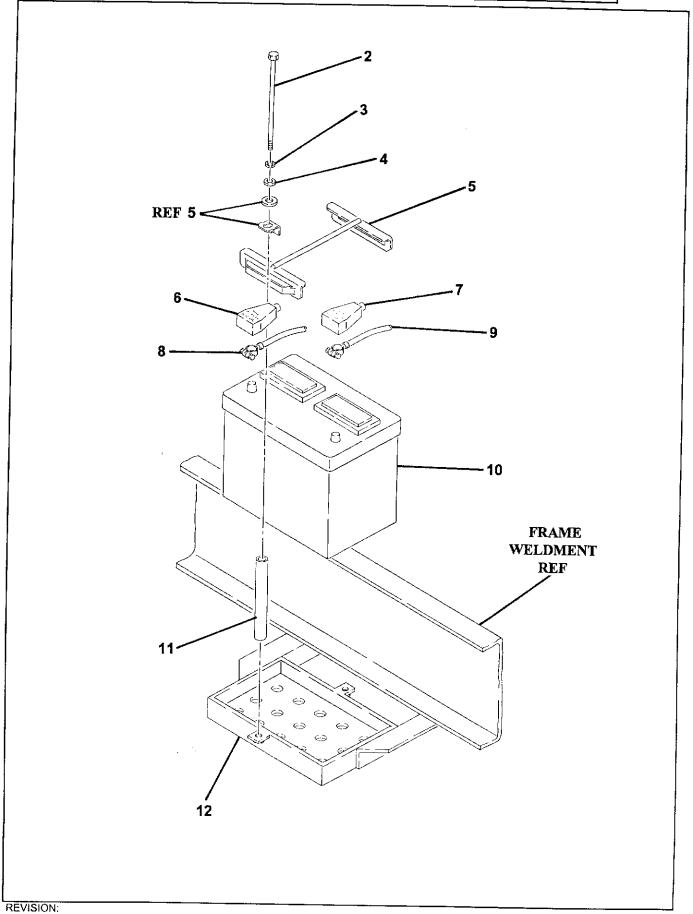



BATTERY MOUNTING ASSEMBLY

PARTS
GROUP 40
FIGURE 05
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	40-05	Assembly, Battery Mounting (See Group 40, Figure 01 for NHA)	Ref
2		• Bolt, Hex	2
3		Washer, Lock	2
4		Washer Flat	$\frac{1}{2}$
5	72945	Hold Down, Battery	
6	77720	Insulator, Negative Battery Cover (Black)	
7	77719	Insulator, Positive Battery Cover (Red)	1
8	75116	Cable, Negative Battery 24" (Black)	- '
9	72016	Cable, Positive Battery 24" (Red)	
10	72013	Battery	1
11	73753	Spacer, Battery Mounting	2
12	76585	Weldment, Battery Box	1



M5 MULTISPRAY MIXER & PUMP ILLUSTRATED PARTS MANUAL

PARTS
GROUP 40
FIGURE 06
PAGE 01

PIHT	DΔ	CE	MTE	NTIO	MATT	V T	EFT BL	A NITZ
\mathbf{c}	\mathbf{r}	UC.	HNIEL	VIIO	NALL	. Y I	.B.B.J. B.L.	ANK

REVISION:

•	
-	
:	
	i I
	1



M5 MULTISPRAY MIXER & PUMP GROUP 50 CONTROLS INSTALLATION

PARTS
GROUP 50
FIGURE 00
PAGE 01


GROUP 50 CONTROLS INSTALLATION CONTAINS THE FOLLOWING FIGURES:

FIGURE 00 TABLE OF CONTENTS

FIGURE 01 CONTROLS INSTALLATION CONTROL BOX ASSEMBLY

FIGURE 03 MIXER AND PUMP REMOTE CONTROL ASSEMBLY


FIGURE 04 ON/OFF 100 FOOT REMOTE ASSEMBLY

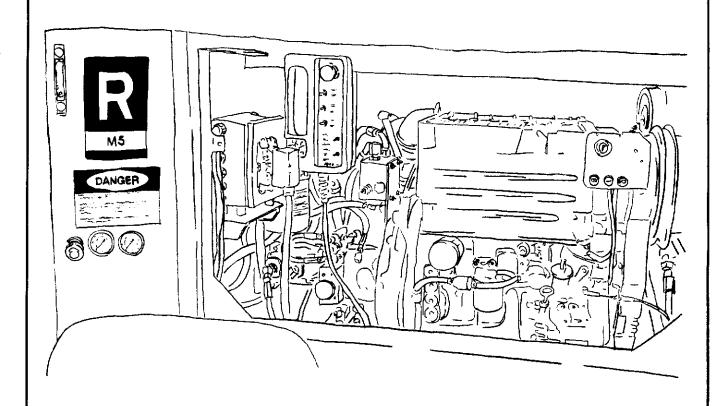



CONTROL INSTALLATION

PARTS
GROUP 50
FIGURE 01
PAGE 01

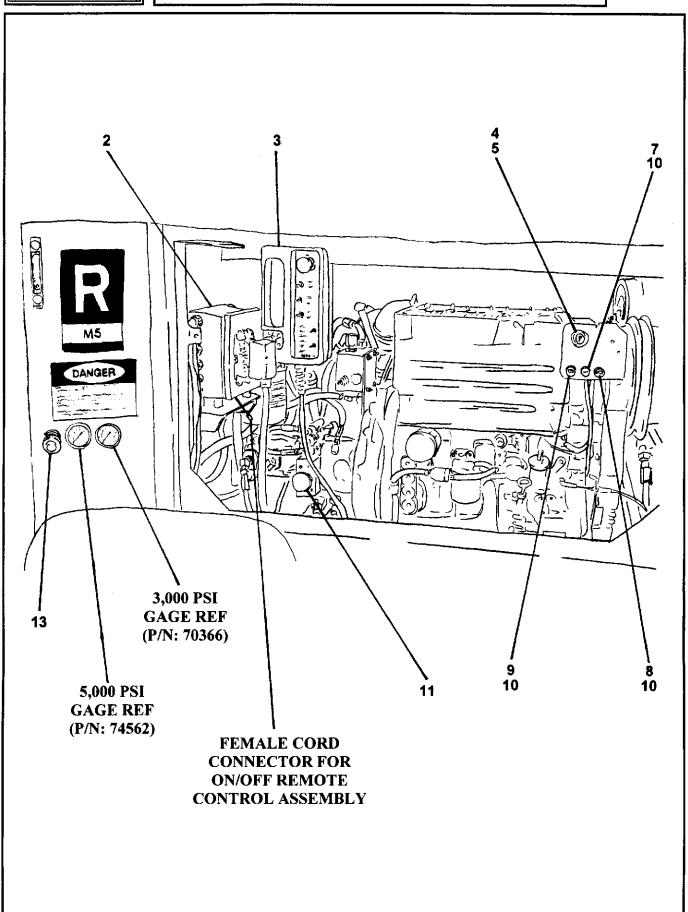



CONTROL INSTALLATION


PARTS
GROUP 50
FIGURE 01
PAGE 02

ITEM REED'S		DESCRIPTION	QTY		
NO.	PARTS NO.	12345	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \		
-1	50-01	Installation, Control (See Group 10, Figure 01 for NHA)			
2	76859	Assembly, Control Box (See Group 50, Figure 02 for DET)	1		
3	76900	Assembly, Mixer and Pump Remote Control (See Group 50, Figure 03 for DET)	1.		
4	72946	Switch, Ignition	1		
5	71155	• • Key (Pair)	1		
-6	72862	Gage, Proximity Switch (See Group 60, Figure 05 for REF)	1		
7		• Indicator, Oil Temperature	1		
8		• Indicator, Low Oil	1		
9		Indicator, Battery	1		
10		Bulb, Indicator	3		
11	79633	Assembly, Flow Control (See Group 40, Figure 02 for REF)	1		
-12	74333	Assembly, ON/OFF 100Foot Remote Control (See Group 50, Figure 04 for DET)	1		
13	79439	Control, Cable Throttle (See Group 40, Figure 01 for REF)	1		



CONTROL BOX ASSEMBLY

PARTS GROUP 50 FIGURE 02 PAGE 01

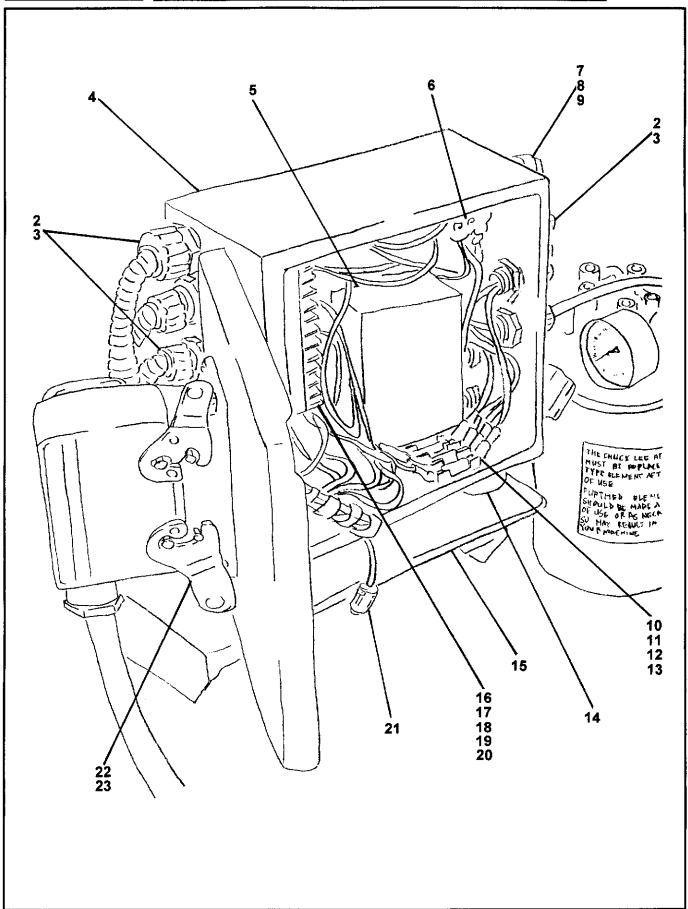



CONTROL BOX ASSEMBLY


PARTS
GROUP 50
FIGURE 02
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	76859	Assembly, Control Box	Ref
		(See Group 50, Figure 01 for NHA)	
2	10522	Relief, Strain	9
3	10528	• Nut, 1/2	9
4	76897	• Box, Control	1
5	70752	Box, Universal Black	1
6	72816	Relay, DC Power	1
7	79897	Switch, Selector S-M-S	1
8	79890	• Plate, Mounting	2
9	79892	Plate, Mounting	1
10	72819	Holder, Fuse	4
11	72828	• Fuse, 5 AMP	2
12	90829	• Fuse, 10 AMP	1
13	90836	• Fuse, 15 AMP	1
14	73748	Mount, Resilient Bumper	4
15	76898	Mounting, Plate	1
16	72821	Rail, Terminal	1
17	72820	Terminal	21
18	72823	• End, Terminal	2
19		• Screw, 10 - 32 x 1/4	2
20	72824	• Jumper	6
21	75759	Connector, Female Cord for ON/OFF Remote Control	1
22		Cover, for Mixer and Pump Remote Control	1
23		Base, for Mixer and Pump Remote Control	1
-24		Wiring, Engine harness	Ref
		(See Group 40, Figure 01 for REF)	



MIXER AND PUMP REMOTE CONTROL ASSEMBLY

PARTS
GROUP 50
FIGURE 03
PAGE 01

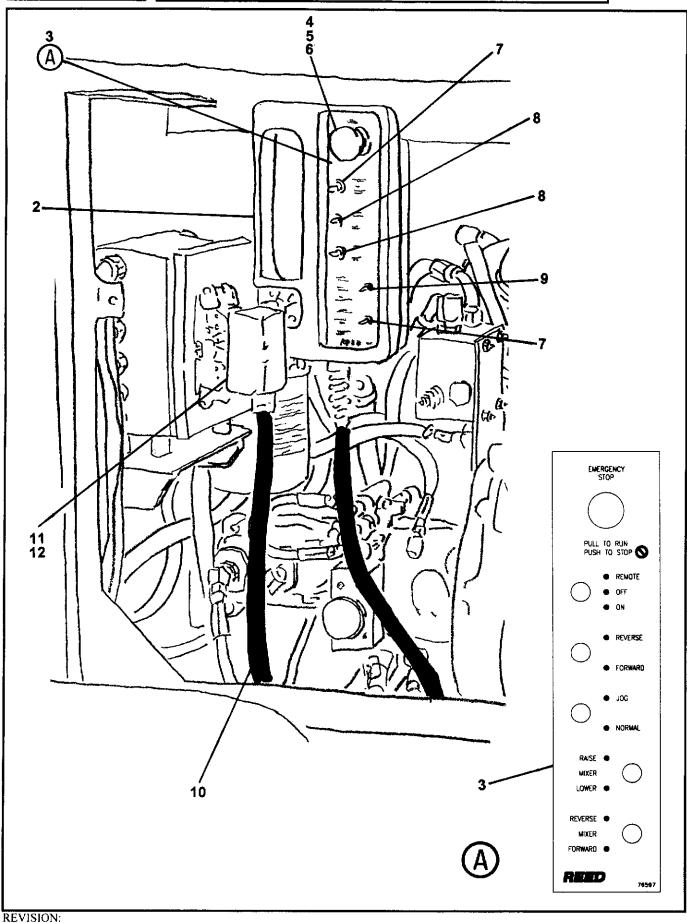



MIXER AND PUMP REMOTE CONTROL ASSEMBLY


PARTS
GROUP 50
FIGURE 03
PAGE 02

ITEM	REED'S	DESCRIPTION	OTTV
NO.	PARTS NO.	12345	QTY
-1	76900	Assembly, Mixer and Pump Remote Control (See Group 50, Figure 01 for NHA)	Ref
2	76563	Enclosure, Remote Control	1
3	76597	Nameplate, Remote Control	1
4	79894	Switch, Emergency Stop	1
5	79892	Base, Mounting	1
6	79896	Contact, Normal	1
7	72965	• Switch, ON - OFF - ON	2
8	72963	• Switch, ON - OFF	2
9	72964	Switch, Momentary - OFF	1
10		• Wire, 20 FT Yellow	1
11		Hood, Side Entry	1
12		Plug, Connector	1



ON/OFF 100 FOOT REMOTE CONTROL ASSEMBLY

PARTS
GROUP 50
FIGURE 04
PAGE 01

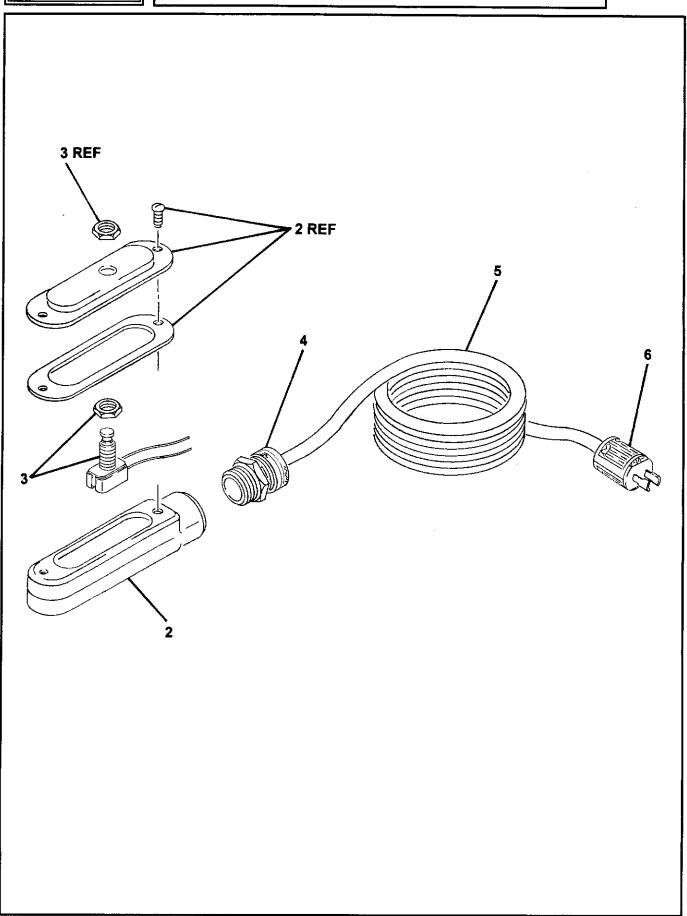



ON/OFF 100 FOOT REMOTE CONTROL ASSEMBLY

PARTS GROUP 50 FIGURE 04 PAGE 02

ITEM NO.	REED'S PARTS NO.		
-1	74333	Assembly, ON/OFF 100 Foot Remote Control (See Group 50, Figure 01 for NHA)	Ref
2	72005	Housing, Remote Control	1
3	72011	Switch, ON/OFF Push Button	1
4	10522	• Relief, Strain	1
5	72006	Cord, 100 Foot Extension (Orange)	1
6	75758	Connector, Male End Cord	1



M5 MULTISPRAY MIXER & PUMP ILLUSTRATED PARTS MANUAL

PARTS
GROUP 50
FIGURE 05
PAGE 01


TITC	DACE	TATECO	TOTAL	A T Y X F 1		
$1 \mathrm{HI}$	PAUE	IIN I EF	N I ION	ALLY 1	EFT BI	.ANK

	· · · · · · · · · · · · · · · · · · ·	
	i e e e e e e e e e e e e e e e e e e e	
,		



M5 MULTISPRAY MIXER & PUMP GROUP 60 PUMPING TRAIN INSTALLATION FIGURE 00

PARTS GROUP 60 PAGE 01

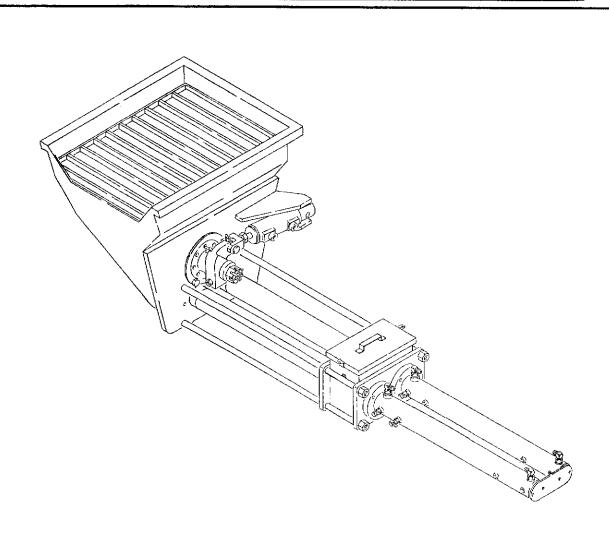


GROUP 60 PUMPING TRAIN INSTALLATION CONTAINS THE FOLLOWING FIGURES:

FIGURE	00	TABLE OF CONTENTS
FIGURE	01	PUMPING TRAIN INSTALLATION
FIGURE	02	SWING VALVE ASSEMBLY
FIGURE	03	SWING RAM CYLINDER SUB-ASSEMBLY
FIGURE	04	CONCRETE CYLINDER ASSEMBLY
FIGURE	05	FLUSHBOX ASSEMBLY
FIGURE	06	HYDRAULIC DRIVE CYLINDER ASSEMBLY
FIGURE	07	HYDRAULIC DRIVE CYLINDER SUB-ASSEMBLY



PUMPING TRAIN INSTALLATION

PARTS
GROUP 60
FIGURE 01
PAGE 01

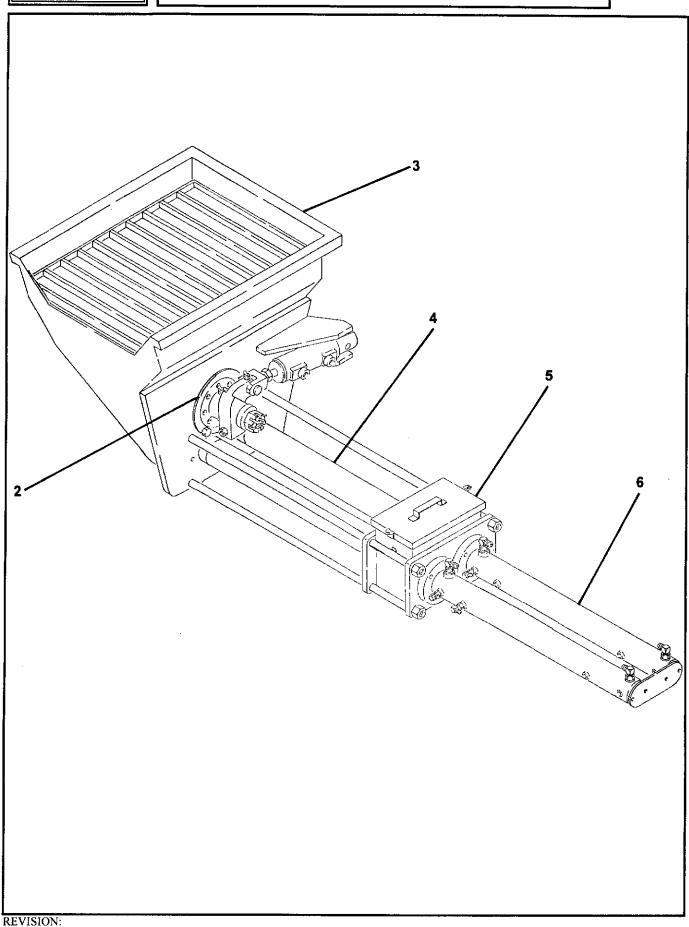




PUMPING TRAIN INSTALLATION

PARTS GROUP 60 FIGURE 01 PAGE 02

ITEM REED'S NO. PARTS NO.		DADTS NO			
110.		12345			
-1	60-01	Installation, Pumping Train (See Group 10, Figure 01 for NHA)	Ref		
2	60-02	Assembly, Swing Valve (See Group 60, Figure 02 for DET)	1		
3	20-01	• Installation, Hopper (See Group 20, Figure 01 for REF)	Ref		
4	60-04	Assembly, Concrete Cylinder (See Group 60, Figure 04 for DET)	1		
5	60-05	Assembly, Flushbox (See Group 60, Figure 05 for DET)	1		
6	60-06	Assembly, Hydraulic Drive Cylinder (See Group 60, Figure 06 for DET)	. 1		
-7	72862	Gage, Proximity Switch (See Group 50, Figure 02 for REF)	1		
8	79537	Assembly, Main Valve (See Group 60, Figure 08 for DET)	1		



PARTS
GROUP 60
FIGURE 02
PAGE 01

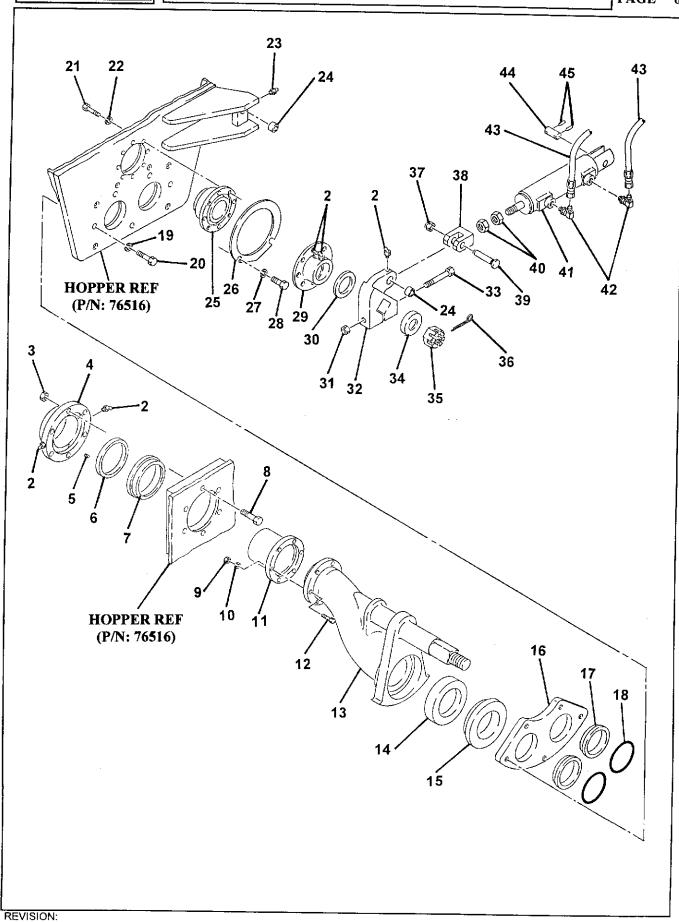




PARTS
GROUP 60
FIGURE 02
PAGE 02

ITEM	REED'S	DESCRIPTION	OTV
NO.	PARTS NO.	12345	QTY
-1	60-02	Assembly, Swing Valve (See Group 60, Figure 01 for NHA)	Ref
2		• Fitting, Grease 45	5
3		• Nut, 1/2	6
4	79651	Outlet, Flange	1
5		• Pin, Spring	4
6	71340	Seal, Outlet Housing	1
7	71341	Housing, Outlet Seal	1
8		• Bolt, Hex 1/2 x 2 1/2	6
9		• Nut, 3/8	6
10		Washer, Lock	6
11	79652	Outlet, Chromed	1
12		• Bolt, 3/8 x 1 1/2	6
13	76864	Weldment, Swing Tube	1
14	72285	Seal, Double Lip	1
15	72384	• Ring, Wear	1
16	71251	• Plate, Wear	1
17	71254	• Ring, Anti Chip	2
18	71247	• O-Ring	2
19		Washer, Lock	5
20		• Bolt, Hex 3/4 x 1 3/4	. 5
21		• Bolt, Hex 9/16 x 2 3/4	4
22		Washer, Lock	4
23		• Fitting, Grease STR	1
24	71011	• Race, Inner	2
25	73564	Seal Flange Bearing	1
26	71384	• Ring, Locator	1
27		Washer, Lock	2
28		• Bolt, Hex 3/4 x 2	2
29	70124	Bearing, Flange	1
30	70141	Washer, Thrust	1



PARTS
GROUP 60
FIGURE 02
PAGE 03

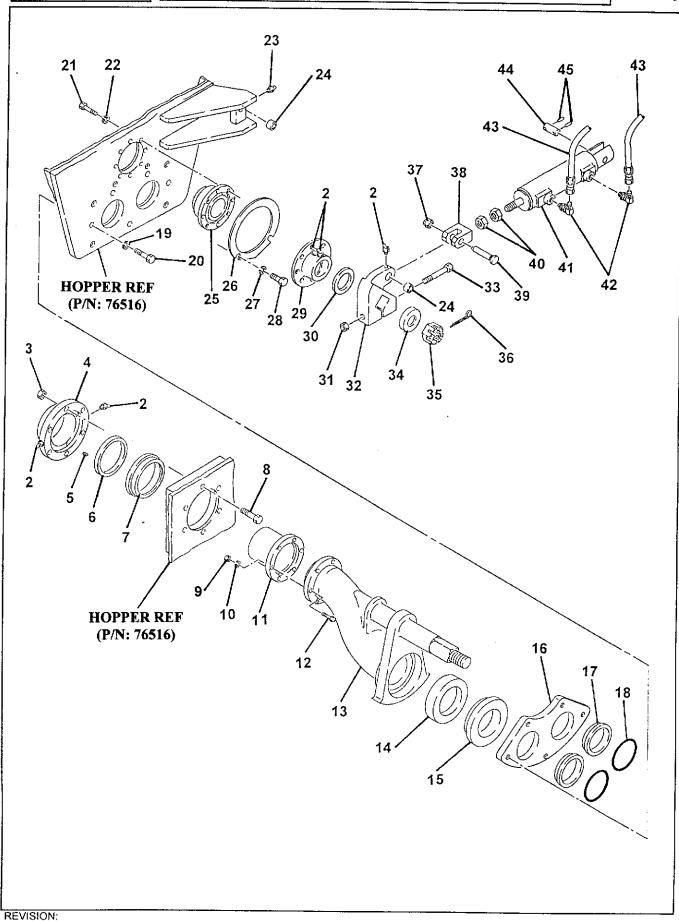




PARTS GROUP 60 FIGURE 02 PAGE 04

ITEM	REED'S	DESCRIPTION	-
NO.	PARTS NO.	12345	QTY
31		• Nut, 5/8	1
32	71234	Crank, Bell	1
33		• Bolt, Hex 5/8 x 5 3/4	4
34	70125	• Spacer, Nut	1
35	70825	• Nut, Castle 1 1/2	1
36		• Pin, Safety	1
37		• Nut, 3/4	1
38	70143	• Clevis	1
39	70142	• Pin, Clevis	1
40		• Nut, Hex	2
41	71487	Sub-Assembly, Swing Ram Cylinder (See Group 60, Figure 03 for DET)	1
42		• Fitting, 90	
43		Assembly, Hose	2
44		• Pin, Cylinder	1
45		• Pin, Roller	2



SWING RAM CYLINDER SUB-ASSEMBLY

PARTS
GROUP 60
FIGURE 03
PAGE 01

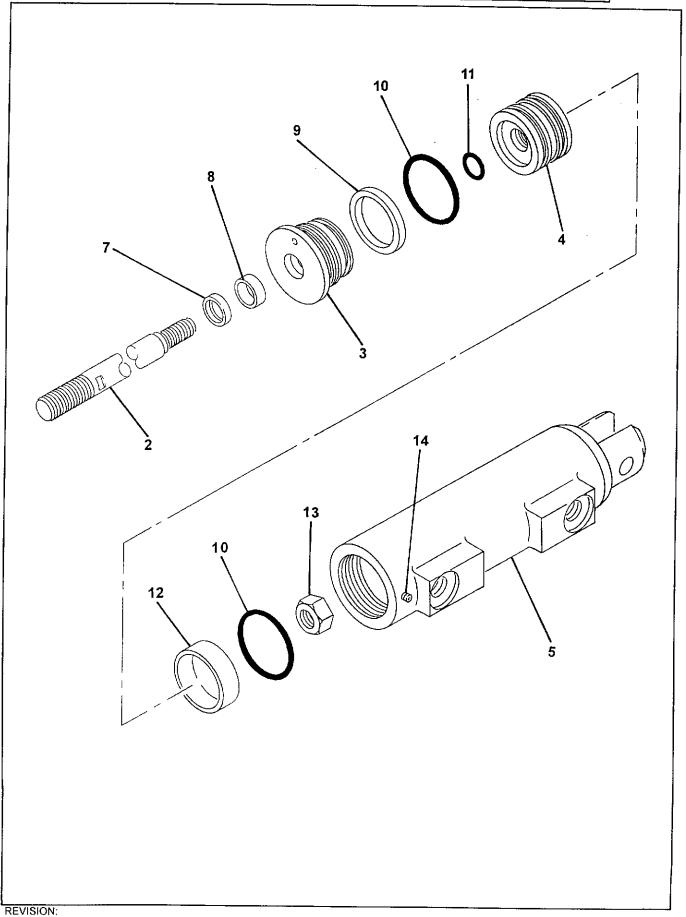



SWING RAM CYLINDER SUB-ASSEMBLY


PARTS
GROUP 60
FIGURE 03
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	71487	Sub-Assembly, Swing Ram Cylinder	Ref
2		(See Group 60, Figure 03 for NHA)	
		• Rod, Cylinder	1
3		Retainer, Seal	1
4	·	• Piston	1
5		Weldment, Cylinder Barrel	1
-6		• Kit, Seal	1
7		• • Wiper, Rod	1
8		• • Seal, Rod	1
9		• • Seal, Static	1
10		• • Seal, Piston	2
11		• • Seal, Static	1
12		• • Ring, Wear	1
13		• • Nut, Piston	1
14	-	• • Screw, Allen Head	1



CONCRETE CYLINDER ASSEMBLY

PARTS
GROUP 60
FIGURE 04
PAGE 01

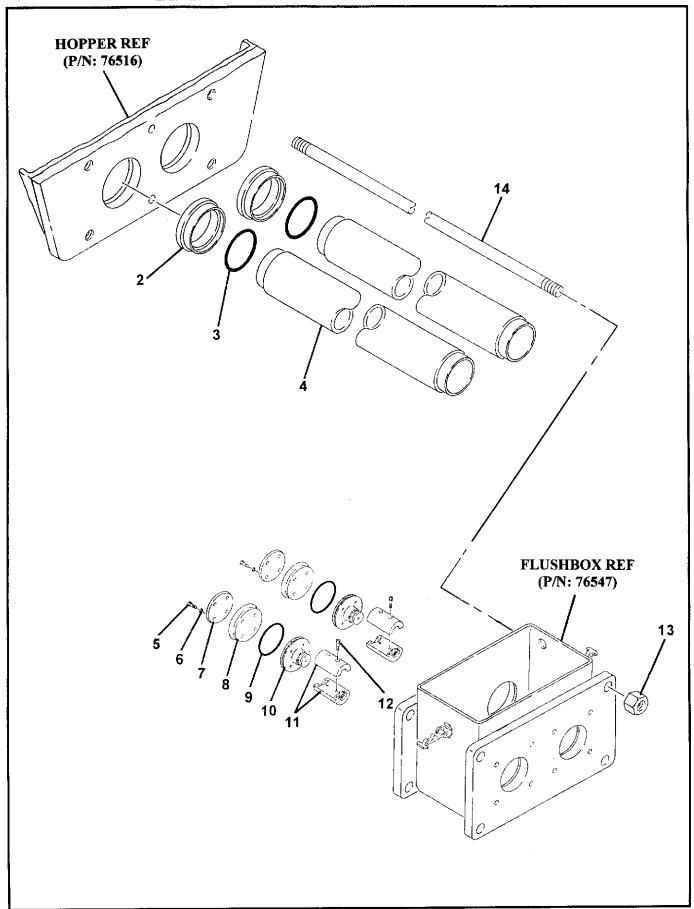



CONCRETE CYLINDER ASSEMBLY


PARTS GROUP 60 FIGURE 04 PAGE 02

ITEM NO.	<i>REED</i> 'S PARTS NO.	DESCRIPTION	QTY
		12345	
-1	60-04	Assembly, Concrete Cylinder (See Group 60, Figure 01 for NHA)	Ref
2	71257	Adapter, Concrete Cylinder	2
3	71249	• O-Ring	2
4	79653	Cylinder, Concrete	2
5		• Bolt, 3/8 - 20 x 1 1/2	8
6		• Washer, Lock	8
7	71235	• Plate, Piston	2
8	76500	Cup, Piston	2
9	71339	• O-Ring	2
10	71233	Adapter, Concrete Piston	2
11	70077	Coupling, Piston	4
12		• Screw, Cap 1/2 - 20 x 3	4
13		• Nut	4
14	76862	• Rod, Tie	4



FLUSHBOX ASSEMBLY

PARTS
GROUP 60
FIGURE 05
PAGE 01

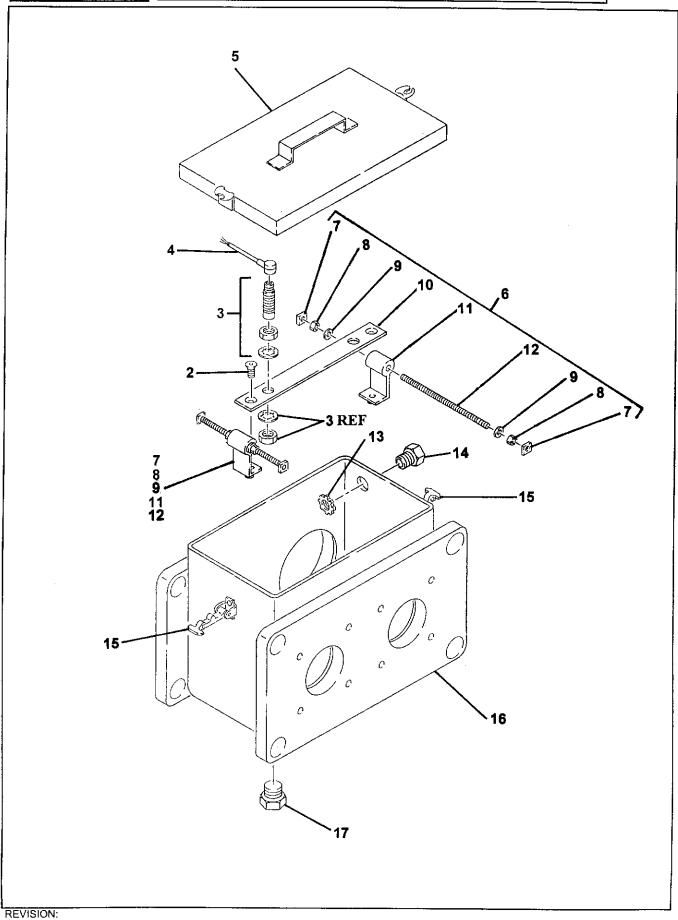



FLUSHBOX ASSEMBLY


PARTS GROUP 60 FIGURE 05 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO. PARTS NO.		12345	QTY
-1	60-05	Assembly, Flushbox (See Group 60, Figure 01 for NHA)	Ref
2		• Screw	2
3	77998	Sensor, Proximity Switch	2
4	77990	Cable, Proximity Switch	2
5	77320	Top, Flushbox	1
6	76561	Kit, Proximity Sensor Mount	1
7		• • Nut, Rectangle	4
8		• • Nut, Hex	4
9		• • Washer, Lock	4
10	71324	• • Bracket, Mounting	1
11	72940	• • Angle, Mounting	2
12	72806	• • Rod, Threaded	2
13	10528	• Nut	1
14	73783	Conduit, Fitting	1
15	13002	• Fastener, Cover	2
16	71300	Weldment, Flush Box	1
17	10282	• Plug, Drain	1
-18	71933	Lid, Flushbox Liquid Cooled	1



HYDRAULIC DRIVE CYLINDER ASSEMBLY

PARTS GROUP 60 FIGURE 06 PAGE 01

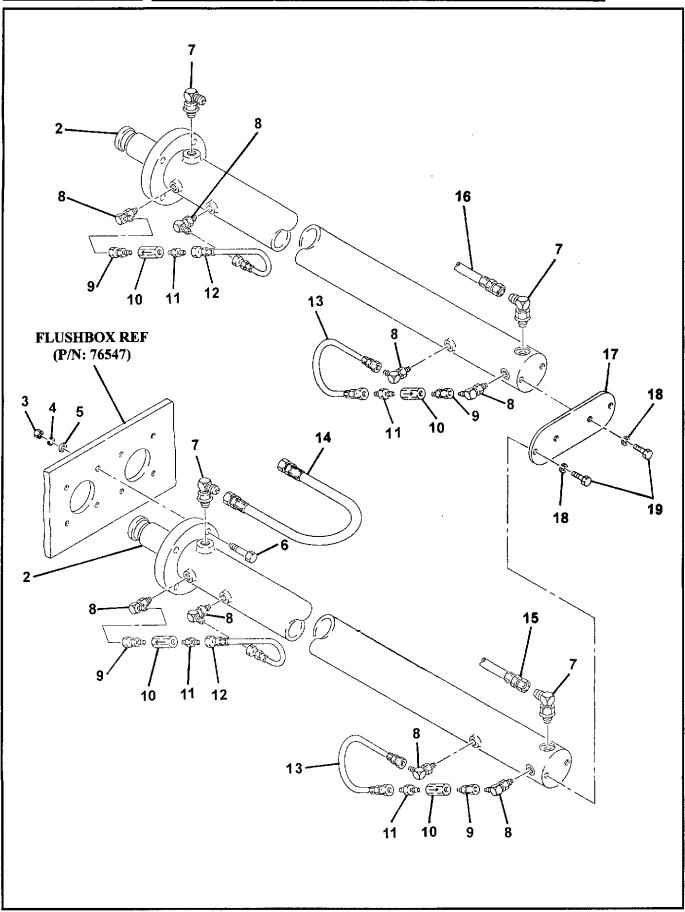



HYDRAULIC DRIVE CYLINDER ASSEMBLY


PARTS GROUP 60 FIGURE 06 PAGE 02

ITEM	REED'S	DESCRIPTION	OWN
NO.	PARTS NO.	12345	QTY
-1	60-06	Assembly, Hydraulic Drive Cylinder (See Group 60, Figure 01 for NHA)	Ref
2	73120	Sub-Assembly, Hydraulic Drive Cylinder (See Group 60, Figure 07 for DET)	1
3		• Nut, Hex (attaching parts)	8
4		Washer, Lock (attaching parts)	8
5		Washer, Flat (attaching parts)	8
6		Bolt (attaching parts)	8
7		• Fitting, 90	4
8		• Fitting, 90	8
9		• Fitting, STR	4
10	74587	Valve, Check	4
11		• Fitting, STR	4
12	74615	Assembly, Hose	2
13	79469	Assembly, Hose	2
14	79461	Assembly, Hose	1
15		Assembly, Hose	1
16		Assembly, Hose	1
17	71401	Plate, End	1
18		Washer, Lock (attaching parts)	4
19		Bolt, Hex (attaching parts)	4



HYDRAULIC DRIVE CYLINDER SUB-ASSEMBLY

PARTS
GROUP 60
FIGURE 07
PAGE 01

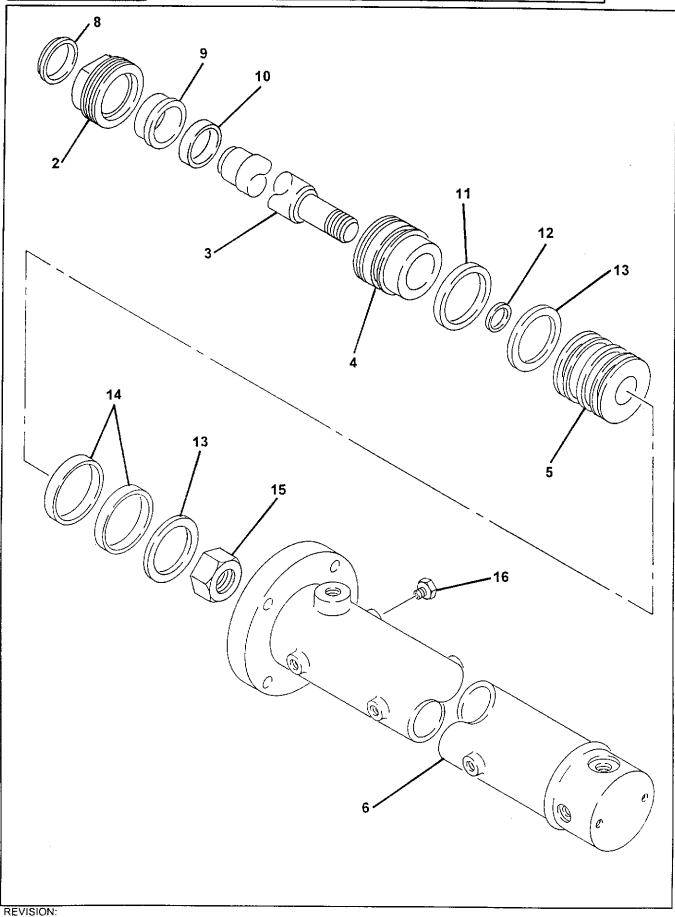



HYDRAULIC DRIVE CYLINDER SUB-ASSEMBLY

PARTS
GROUP 60
FIGURE 07
PAGE 02

ITEM	REED'S	DESCRIPTION	QTY
NO. PARTS NO.		12345	
-]	79646	Sub-Assembly, Hydraulic Drive Cylinder (See Group 60, Figure 06 for NHA)	Ref
2		Nut, Retaining	1
3		Rod, Cylinder	1
4		• Retainer	1
5		• Piston	1
6		Weldment, Cylinder Barrel	1
-7	76977	• Kit, Seal	1
8		• • Wiper, Rod	1
9		• • Bearing, Rod	1
10		• • Ring, Wear	1
11		• • Seal, Static	1
12		• • Seal, Static	1
13		• • Seal, Piston	2
14		• • Ring, Wear	2
15		• • Nut, Piston	1
16		• Plug	4



M5 MULTISPRAY MIXER & PUMP ILLUSTRATED PARTS MANUAL

PARTS
GROUP 60
FIGURE 08
PAGE 01

THIS P	AGFI	NTFNTI	$\bigcap N A T 1$	IVI	TET DI	ANTZ

REVISION:




M5 MULTISPRAY MIXER & PUMP GROUP 70 FRAME INSTALLATION

PARTS GROUP 70 FIGURE 00 PAGE 01

GROUP 70 FRAME INSTALLATION CONTAINS THE FOLLOWING FIGURES:


TABLE OF CONTENTS
FRAME INSTALLATION
AXLE AND BRAKE ASSEMBLY
NON-OPERATOR SIDE ELECTRIC BRAKE ASSEMBLY
OPERATOR SIDE ELECTRIC BRAKE ASSEMBLY

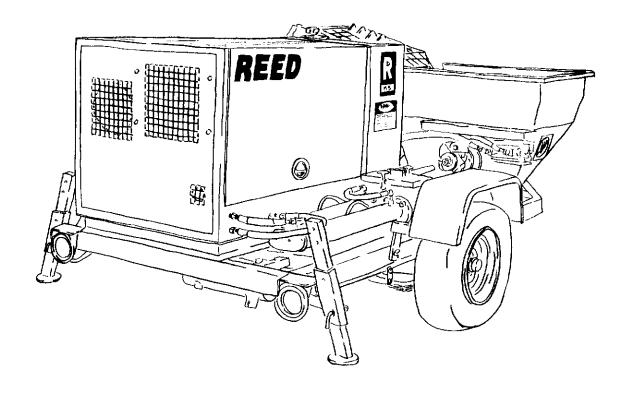



FRAME INSTALLATION

PARTS
GROUP 70
FIGURE 01
PAGE 01

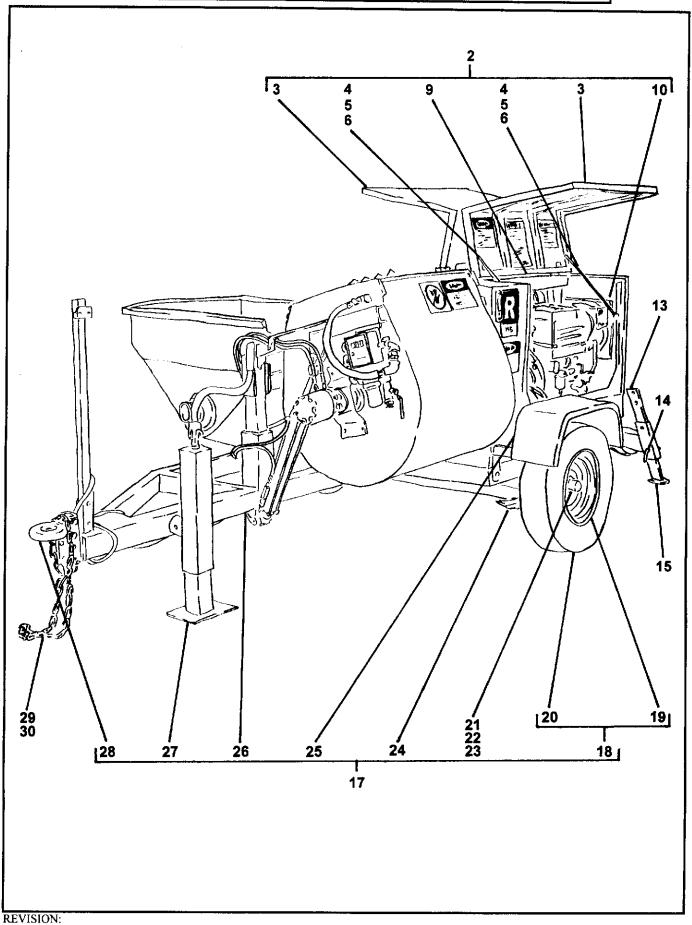



FRAME INSTALLATION


PARTS
GROUP 70
FIGURE 01
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	70-01	Installation, Frame	Ref
		(See Group 10, Figure 01 for NHA)	
2	76866	Assembly, Engine Cover Frame	1
3	76875	• • Cover, Hinged Engine	2
4	76889	• • Spring, Gas Cylinder	4
5	76890	• • Stud, Ball	4
6	78750	• • Bracket, Door Gas Cylinder	4
-7	76871	Plate, Hydraulic Component Mounting	1
-8	76876	• • Mount, Remote	1
9	76840	• • Weldment, Engine Cover Frame	1
10	76566	• • Weldment, Rear Door	1
-11	76894	• • Hinge, Door	4
-12	73767	• • Latch, D-Ring with Key	2
13	73276	Outer, Outrigger Tube	2
14	73287	Weldment, Outrigger Inner	2
15	73859	Pin, Outrigger Safety	2
-16	30258	Light, Electrical Tail	2
17	76852	Assembly, Frame	Ī
18	73212	• • Assembly, Wheel and Tire	2
19	73555	• • • Wheel	1
20	73554	• • • Tire	1
21	76867	Assembly, Axle and Brake	1
		(See Group 70, Figure 02 for DET)	
22	76869	• • Kit, U-Bolt	1
23	76870	• • Kit, Hanger	1
24	76868	• • Assembly, 3000 lbs Spring	2
25	76825	• • Weldment, Fender	2
26	76580	• • Weldment, Frame	1
27	75711	• • Assembly, 8000 lbs Jack	1
28	71051	• • Lunette, Eye	1
		(See Group 90, Figure 01 for REF)	
29	71049	Chain, CWR	36
30	71048	Clevis, Double	2



AXLE AND BRAKE ASSEMBLY

PARTS GROUP 70 FIGURE 02 PAGE 01

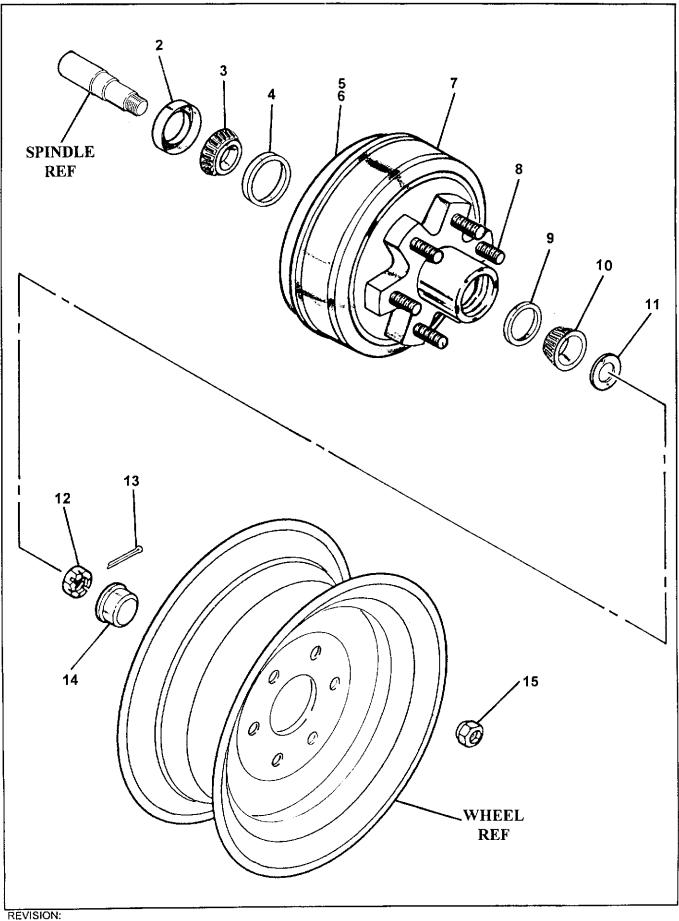



AXLE AND BRAKE ASSEMBLY


PARTS
GROUP 70
FIGURE 02
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	76867	Assembly, Axle and Brake (See Group 70, Figure 01 for NHA)	Ref
2		• Seal, Grease	1
3		Bearing, Inner	1
4		Cup, Inner Bearing	1
5	70-03	Assembly, Non-Operator Electric Brake (See Group 70, Figure 03 for DET)	1
6	70-04	Assembly, Operator Electric Brake (See Group 70, Figure 04 for DET)	1
7	<u>.</u>	Assembly, Hub and Drum	2
8		Bolt, Wheel	6
9		Cup, Outer Bearing	1
10		Bearing, Outer	1
11		Washer, Spindle	1
12		• Nut, Spindle 1 x 1/4	1
13		• Pin, Cotter	1
14		• Cap, Dust	I
15		• Nut, Wheel	6



NON OPERATOR SIDE ELECTRIC BRAKE ASSEMBLY

PARTS GROUP 70 FIGURE 03 PAGE 01

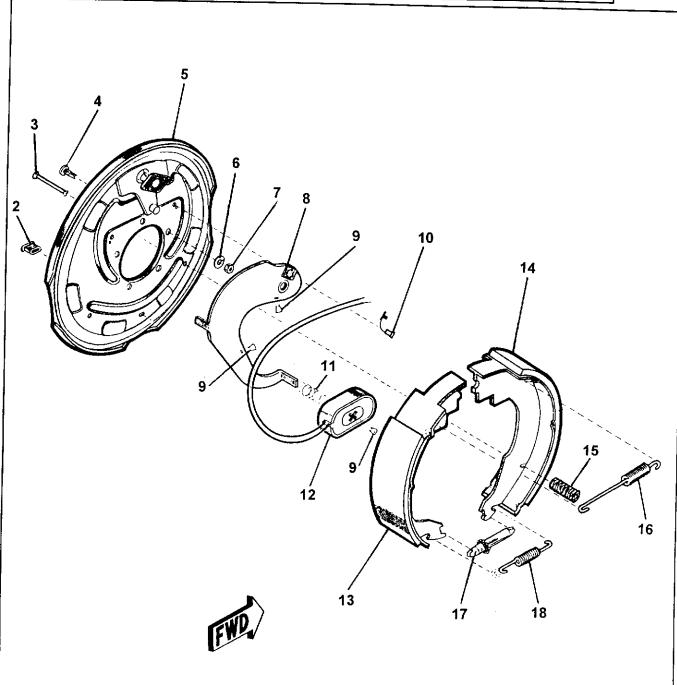



NON OPERATOR SIDE ELECTRIC BRAKE ASSEMBLY

PARTS
GROUP 70
FIGURE 03
PAGE 02


ITEM NO.	<i>REED</i> 'S PARTS NO.	DESCRIPTION	QTY
-1		12345	
- 1	70-03	Assembly, Non-Operator Side Electric Brake	Ref
2		(See Group 70, Figure 02 for NHA)	
		Slot, Plug Adjust	1
3		Pin, Shoe Hold down	1
4		• Stud, Brake Mounting 3/8 x 24	5
5		Assembly, Baking Plate	1
6		Washer, Brake Lock	5
7		Nut, Brake Mounting	5
8		Lever, Non-Operator Side	1
9		Clip, Wire and Magnet	3
10		Relief, Strain	2
11		Spring, Magnet	1
12		Sub-Assembly, Magnet	1
13		Shoe and Lining, Primary	1
14		Shoe and Lining, Secondary	1
15		Spring, Shoe Hold down	1
16	_	Spring, Shoe Retractor	1
17		Sub-Assembly, Adjuster Screw	1
18		Spring, Adjuster Screw	



REVISION:

OPERATOR SIDE ELECTRIC BRAKE ASSEMBLY

PARTS
GROUP 70
FIGURE 04
PAGE 01

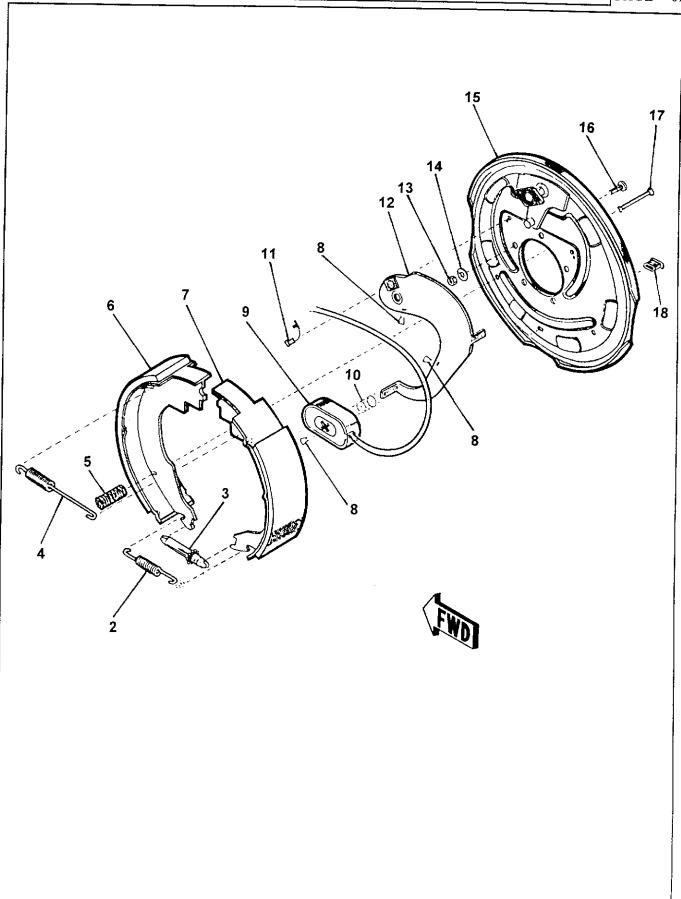



OPERATOR SIDE ELECTRIC BRAKE ASSEMBLY

PARTS GROUP 70 FIGURE 04 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	70-04	Assembly, Operator Side Electric Brake (See Group 70, Figure 02 for NHA)	Ref
2		Spring, Adjuster Screw	
3		Sub-Assembly, Adjuster Screw	
4		Spring, Shoe Retractor	1
5		Spring, Shoe Hold down	1
6		Shoe and Lining, Secondary	1
7		Shoe and Lining, Primary	1
8		Clip, Wire and Magnet	3
9		Sub-Assembly, Magnet	1
10		Spring, Magnet	1
11		Relief, Strain	2
12		• Lever, Operator Side	1
13		Nut, Brake Mounting	5
14		Washer, Brake Lock	5
15		Assembly, Baking Plate	1
16		• Stud, Brake Mounting 3/8 x 24	5
17		• Pin, Shoe Hold down	1
18		Slot, Plug Adjust	1



M5 MULTISPRAY MIXER & PUMP ILLUSTRATED PARTS MANUAL

PARTS GROUP 70 FIGURE 05 PAGE 03

THIS PAGE INTENTIONALLY LEFT BLANK.


REVISION:

!		· · · · · · · · · · · · · · · · · · ·
i i		
! !		
ı		
' '		
:		
! !		
:		
:		
:		
:		
'		
•		
· ·		
:		
!		
i I		
:		
!		
:		
:		
•		



M5 MULTISPRAY MIXER & PUMP GROUP 80 OPTIONAL INSTALLATION

PARTS GROUP 80 FIGURE 00 PAGE 01

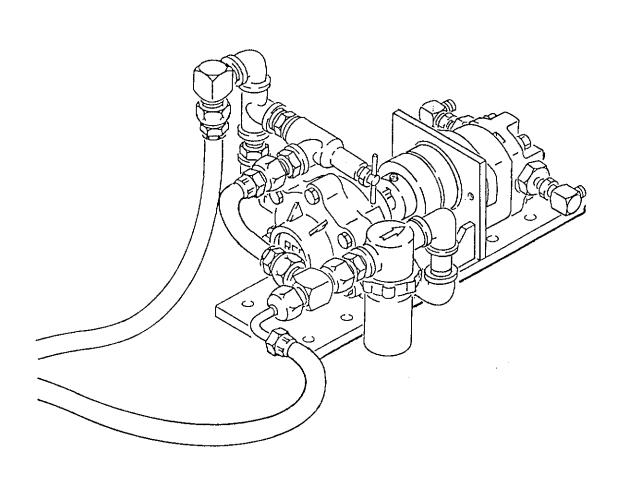


GROUP 80 OPTIONAL INSTALLATION CONTAINS THE FOLLOWING FIGURES:

FIGURE	00	TABLE OF CONTENTS
FIGURE	01	OPTIONAL INSTALLATION
FIGURE	02	WASH PUMP ASSEMBLY
FIGURE	03	WASH WATER PUMP ASSEMBLY
FIGURE	04	WASH PUMP MOTOR ASSEMBLY
FIGURE	05	HOPPER VIBRATOR ASSEMBLY
FIGURE	06	ACTUATOR BRAKES ASSEMBLY
FIGURE	07	ACCUMULATOR CHARGE KIT
FIGURE	08	BLADDER REPAIR KIT
FIGURE	09	NON-OPERATOR SIDE HYDRAULIC BRAKE ASSEMBLY
FIGURE	10	OPERATOR SIDE HYDRAULIC BRAKE ASSEMBLY
FIGURE	11	12 VOLT LUBE PUMP ASSEMBLY
FIGURE	12	STIRRING PADLE LUBRICATION PUMP ASSEMBLY
FIGURE	13	OPTIONAL TOO KIT ASSEMBLY



OPTIONAL INSTALLATION

PARTS GROUP 80 FIGURE 01

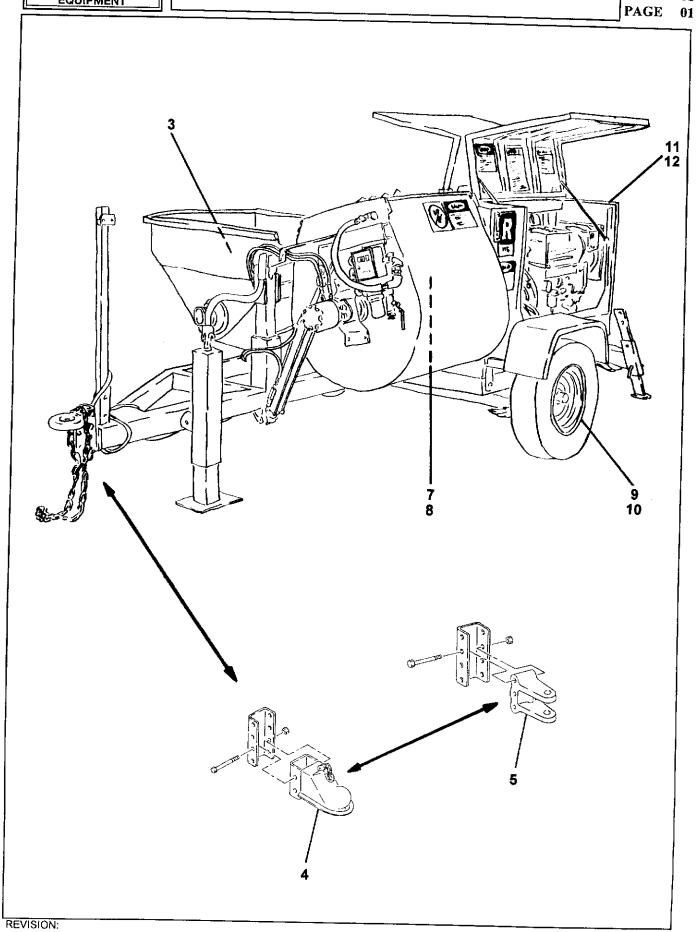



OPTIONAL INSTALLATION


PARTS
GROUP 80
FIGURE 01
PAGE 02

ITEM	REED'S	DESCRIPTION	· · · · · · · · · · · · · · · · · · ·
NO.	PARTS NO.	12345	QTY
-1	80-01	Installation, Optional	Ref
		(See Group 10, Figure 01 for NHA)	Rei
-2	77528	Assembly Wash Pump	1
		(See Group 80, Figure 02 for DET)	_
3	71429	Assembly, Hopper Vibration	- i
		(See Group 80, Figure 05 for DET)	•
4	71050	Assembly, Adjustable 1 Inch Clevis	 - ₁ -
5	71099	Assembly, Adjustable Ball Coupler 2 5/16"	- -
-6	75413	Assembly, Actuator Brake	-
		(See Group 80, Figure 06 for DET)	'
7	71460	• Kit, Accumulator Charge	<u> </u>
		(See Group 80, Figure 07 for DET)	1
8	80-08	• Kit, Bladder Repair	
		(See Group 80, Figure 08 for DET)	'
9	80-09	Assembly, Non-Operator Side Hydraulic Brake	
		(See Group 80, Figure 09 for DET)	1
10	80-10	Assembly, Operator Side Hydraulic Brake	
		(See Group 80, Figure 10 for DET)	'
11	78736	Assembly, Lube Pump	-
		(See Group 80, Figure 11 for DET)	'
12	800065	Assembly, Lubrication Pump with Stirring Paddle	- - - - - - - - - - - - - -
		(See Group 80, Figure 12 for DET)	1
-13	79020	Assembly, Optional Tool Kit	- l
		(See Group 80, Figure 13 for DET)	'
		. , , , , , , , , , , , , , , , , , , ,	



WASH PUMP ASSEMBLY

PARTS
GROUP 80
FIGURE 02
PAGE 01

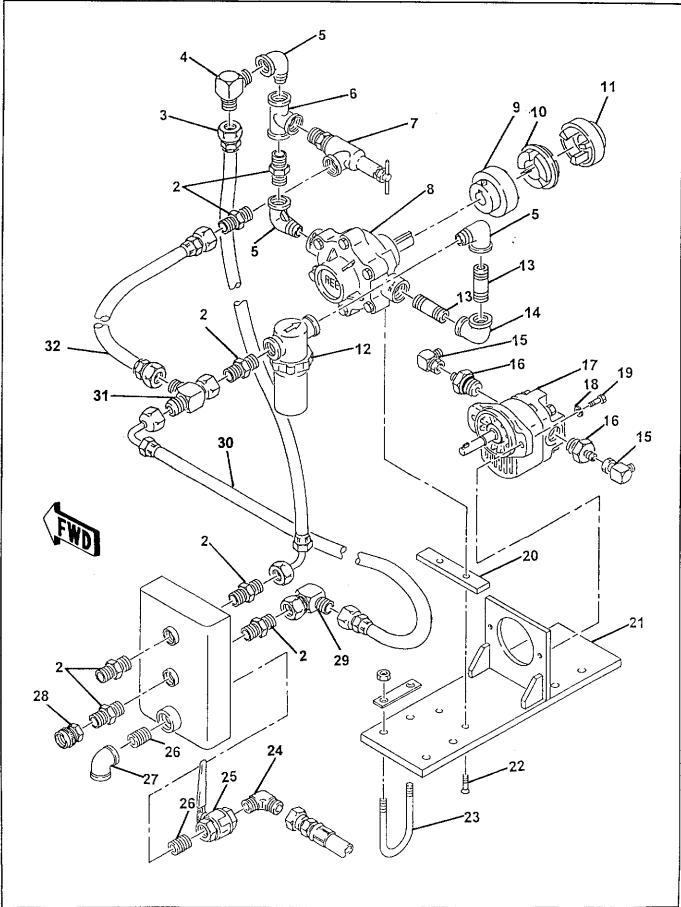



WASH PUMP ASSEMBLY


PARTS GROUP 80 FIGURE 02 PAGE 02

ITEM	REED'S	DESCRIPTION	OWN
NO.	PARTS NO.	12345	QTY
-1	77528	Assembly, Wash Pump	Ref
		(See Group 80, Figure 01 for NHA)	
2	70842	• Fitting, STR	7
3		Assembly, Hose	1
4		• Fitting, 90	1
5	56412	• Street, 3/4	3
6	10228	• Tee, 3/4	1
7	78128	Valve, Relief	1
8	78157	Assembly Wash Water Pump	1
		(See Group 80, Figure 03 for DET)	
9	78154	Coupling, Wash Pump	1
10	78155	• Spider	1
11	78153	Coupling, Wash Motor	1
12	78158	Strainer	l
13	20144	• Nipple, 3/4 x 3	2
14		• Elbow, 90 3/4	1
15		• Fitting, 90 FS6801-6-6	2
16		• Reducer, MB-FB-10-6	2
17	78152	Assembly Wash Pump Motor	1
		(See Group 80, Figure 04 for DET)	
18		Washer (attaching parts)	2
19		Bolt (attaching parts)	2
20	78772	Plate, Wash Pump	1
21	78789	Weldment, Wash Pump	1
22		• Screw, 1 1/2 (attaching parts)	2
23		• U-Bolt, 1/4 x 20	4
24		• Fitting, 90	1
25	13186	Valve, Ball	1
26		• Nipple	2
27		• Elbow, 90	l
28	12061	• Connector	1
29		• Fitting, 90	1
30		Assembly, Hose	I
31		• Tee	1
32		Assembly, Hose	1



WATER PUMP ASSEMBLY

PARTS GROUP 80 FIGURE 03 PAGE 01

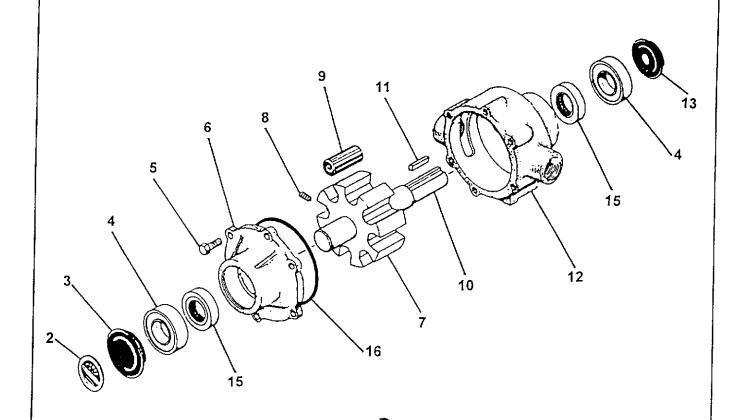



WATER PUMP ASSEMBLY


PARTS
GROUP 80
FIGURE 03
PAGE 02

ITEM NO.	REED'S PARTS NO.	DESCRIPTION 12345	QTY
- I	78157	Assembly, Wash Water Pump (See Group 80, Figure 02 for NHA)	Ref
2		Plate, Name	1
3		Cover, Bearing Rear	1
4		Bearing, Sealed Bowl	2
5		Endplate, (Ni-Resist) with Seal	1
6		Bolt, Hex (attaching parts)	6
7		Rotor, (Ni-Resist) with Shaft	1
8		Screw, Set (attaching parts)	1
9		Roller, Teflon	1
10		• Shaft	1
11		• Key	1
12		Body, (Ni-Resist) with Seal	1
13		Cover, Bearing Shaft	1
-14		• Kit, Seal	1
15		• • Seal, Buna	2
16		• • Gasket, End Plate O-Ring	1



WASH PUMP MOTOR ASSEMBLY

PARTS
GROUP 80
FIGURE 04
PAGE 01

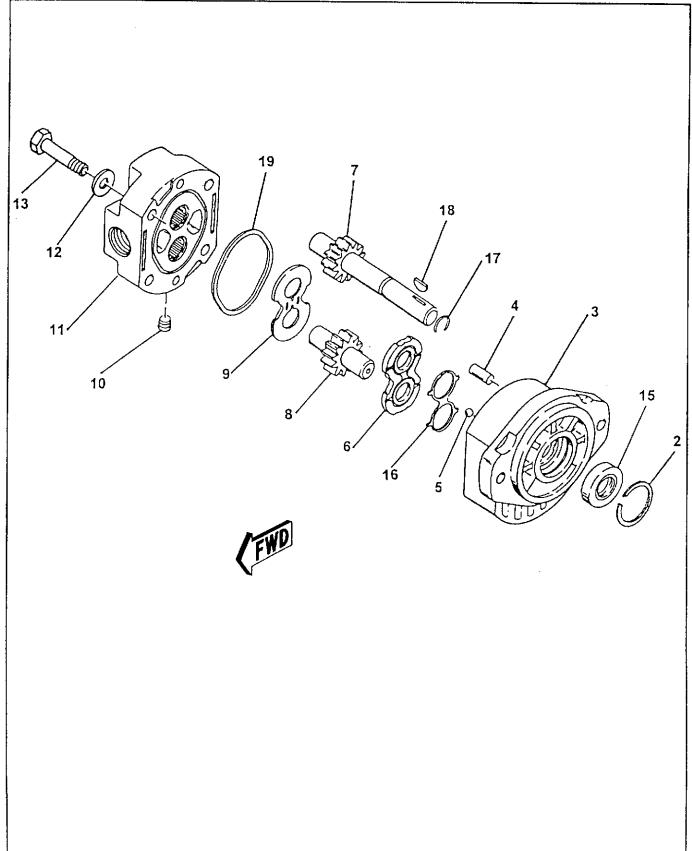



WASH PUMP MOTOR ASSEMBLY


PARTS
GROUP 80
FIGURE 04
PAGE 02

ITEM NO.	REED'S PARTS NO.	DESCRIPTION	QTY
110.		12345	Def
-1	78152	Assembly, Wash Pump Motor (See Group 80, Figure 02 for NHA)	Ref
2		Retainer	l
3		Assembly, Body	1
4		• Pin, Dowel	2
5		Bearing, Ball	2
6		• Plate, Wear	- 1
7		Gear, Driven Wear	1
8		Gear, Driven	1
9		• Plate, Thrust	1
10		• Plug, Pipe	4
11		Assembly, Cover	1
12		Washer (attaching parts)	4
13		Screw, Hex (attaching parts)	
14		• Kit, Seal	1
15		• • Brush	1
16		• • Cap, Brush	1
17		• • Gasket	1
18		• • Cover, Brush	1



HOPPER VIBRATOR ASSEMBLY

PARTS
GROUP 80
FIGURE 05
PAGE 01

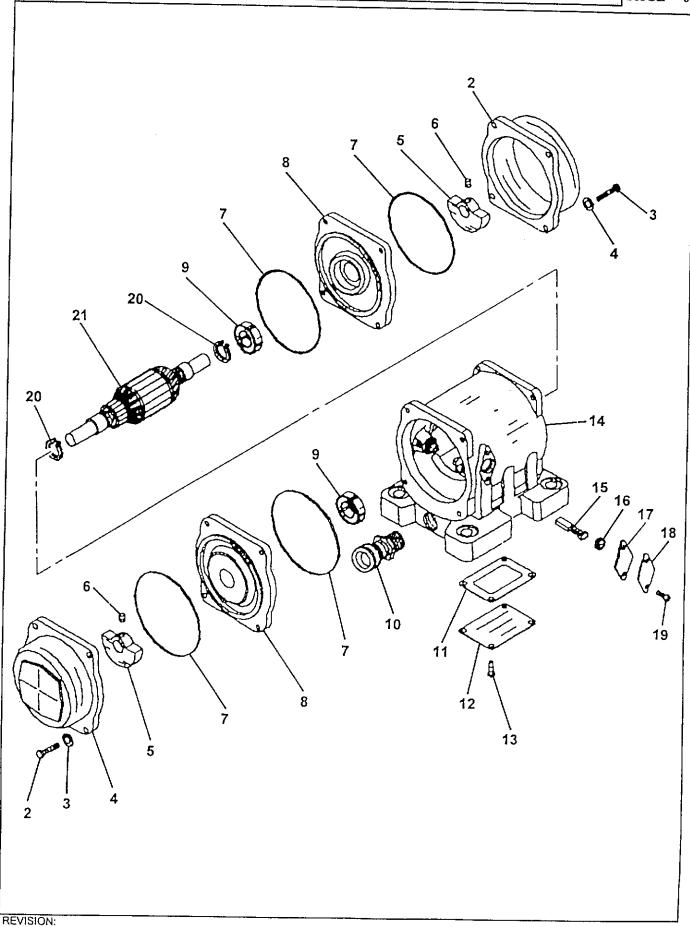



HOPPER VIBRATOR ASSEMBLY

PARTS
GROUP 80
FIGURE 05
PAGE 02


ITEM	REED'S	DESCRIPTION		
NO.	PARTS NO.	12345	QTY	
-1	71429	Assembly, Hopper Vibrator		
		(See Group 80, Figure 01 for NHA)	Ref	
2		Cap, End	2	
3		Bolt (attaching parts)	8	
4		Washer, Lock (attaching parts)	8	
5	··· <u>··</u>	• Weight	2	
6		Screw, Set (attaching parts)	$\frac{2}{2}$	
7		• O-Ring	4	
8	<u></u>	• Bell, End	2	
9		Bearing	2	
10		Holder, Cord	1	
11		• Gasket	1	
12		• Cover, Box		
13		Screw (attaching parts)	4	
14		• Sub-Assembly, Housing		
15		• Brush	1	
16		• Cap, Brush	2	
17	-	• Gasket	2	
18		• Cover, Brush		
19		Screw (attaching parts)	2	
20		• Ring, Snap	4	
21			2	
		Assembly, Armature	1	



REVISION:

ACTUATOR BRAKES ASSEMBLY

PARTS
GROUP 80
FIGURE 06
PAGE 01

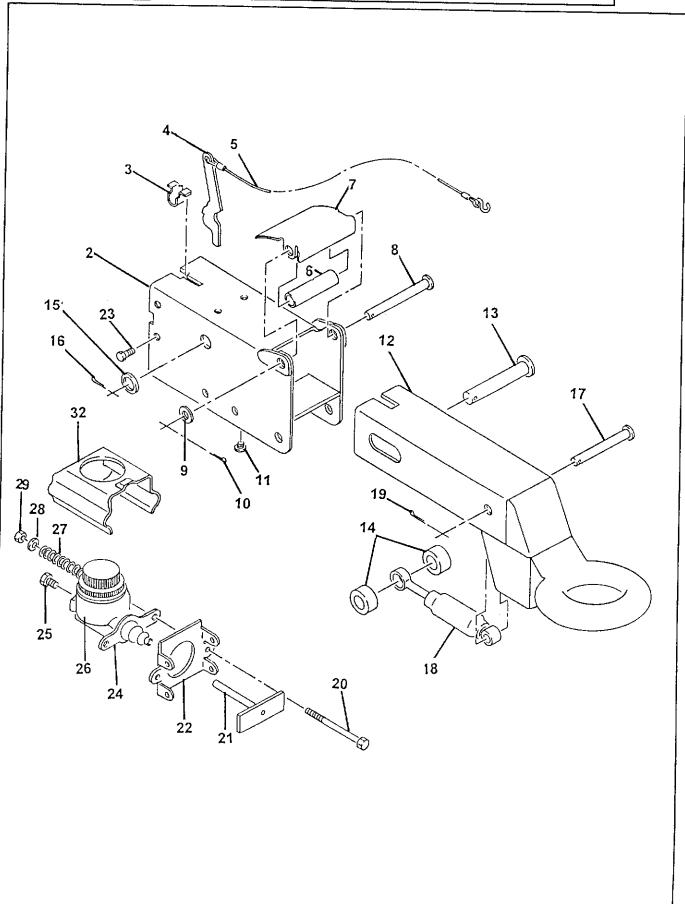



ACTUATOR BRAKES ASSEMBLY

PARTS
GROUP 80
FIGURE 06
PAGE 02


ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	75413	Assembly, Actuator Brakes	D.C
2		(See Group 80, Figure 01 for NHA)	Ref
3		• Case, Outer	
		Spring, Brakeway	
4		Lever, Breakway Pin	
5		• • S-Hook	- i
6		• Roller, Front	1
7		Cover, Front Roller	1
8		• Pin, Front Roller	
9		Washer, Front Roller Pin	
10		• Pin, Cotter 1/8 x 3/4	1
11		• Bearing	2
12		• Lunette Eye, Inner Side	
13		• Pin, Master	' _
14		Roller, Rear	2
15		Washer, Master Pin	
16		• Pin, Cotter 1/8 x 3/4	
17		• Pin, Damper	1
18		• Damper	- 1
19		• Pin, Cotter 1/8 x 3/4	- 1
20		• Bolt, Hex 3/8 NC x 5	2
21		• Rod, Push	1
22		Plate, Cylinder Mounting	
23		• Bolt, 5/16 x 1/2 Self Topping	$-\frac{1}{4}$
24		Cylinder, Master	1
25		Connector, 1/16 Orifice	i
26		Cap, Master Cylinder with Gasket	- 1
27		• Spring	2
28		• Washer, 3/8	
29		• Nut, hex 3/8 NC	2 2



REVISION:

ACCUMULATOR CHARGE KIT

PARTS GROUP 80 FIGURE 07 PAGE 01

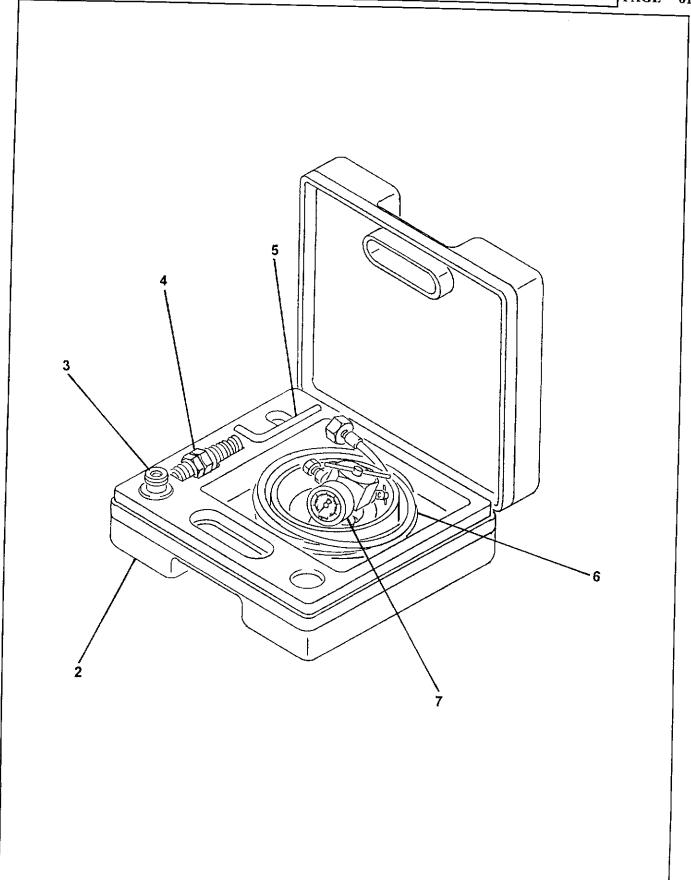



ACCUMULATOR CHARGE KIT


PARTS
GROUP 80
FIGURE 07
PAGE 02

ITEM NO.	REED'S PARTS NO.	DESCRIPTION 12345	QTY
-1	71460	Kit, Accumulator Charge (See Group 80, Figure 01 for NHA)	Ref
2		Case, Charge Kit	1
3		Adapter, FPK / SB	1
4		Adapter, G4	
5	<u> </u>	• Wrench, Allen	1
6		Hose, Charging	1
7		Unit, FPK Charging and Gaging	- 1



BLADDER REPAIR KIT

PARTS
GROUP 80
FIGURE 08
PAGE 01

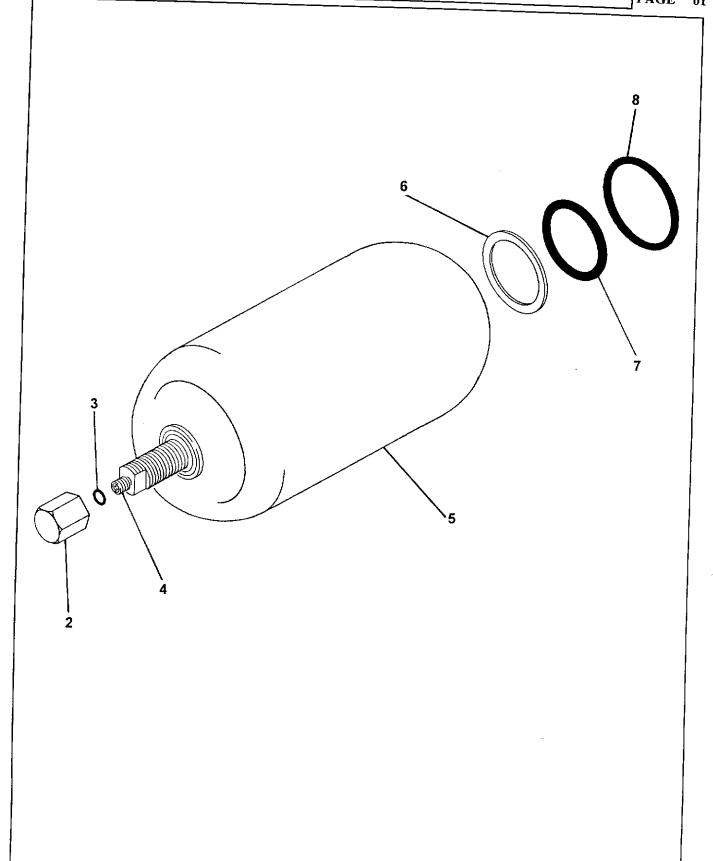



BLADDER REPAIR KIT

PARTS GROUP 80 FIGURE 08


PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	80-08	Kit, Bladder Repair (See Group 80, Figure 01 for NHA)	Ref
2		Cap, Valve Seal	- <u>- </u>
3		• O-Ring	1
4		Core, Gas Valve	
5	74516	Bladder, 1 Gal	1
6		• Ring, Flat	1
7		• O-Ring	1
8		• Ring, Back Up	1



NON-OPERATOR SIDE HYDRAULIC BRAKE ASSEMBLY

PARTS GROUP 80 FIGURE 09 PAGE 01

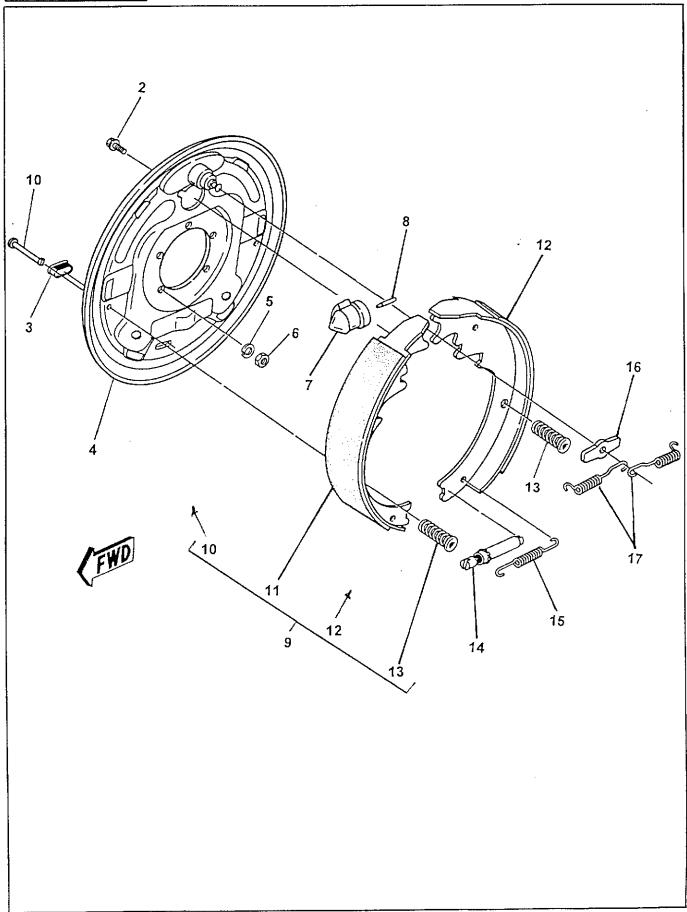



NON-OPERATOR SIDE HYDRAULIC BRAKE ASSEMBLY


PARTS
GROUP 80
FIGURE 09
PAGE 02

ITEM NO.	REED'S PARTS NO.	DESCRIPTION 12345	QTY
-1	80-09	Assembly, Non-Operator Side Hydraulic Brake (See Group 80, Figure 01 for NHA)	Ref
2		Screw, with Washer	1
3		• Plug	2
4		Plate, Backing	- I
5		Washer, Lock (attaching parts)	5
6		Nut, Brake Mounting (attaching parts)	5
7		Cylinder, Non-Operator Side Brake	1
8		• Rod, Push	
9		Kit, Non-Operator Side Shoe and Lining	1
10		• • Pin, Shoe Hold Down	2
11		• • Primary, Non-Operator Side	
12		Secondary, Non-Operator Side	1
13		• • Pin, Shoe Hold Down	2
14		Assembly, Adjuster	1
15		Spring, Adjusting Screw	1
16		Washer, Anchor Post	
17		Spring, Retractor	2



OPERATOR SIDE HYDRAULIC BRAKE ASSEMBLY

PARTS
GROUP 80
FIGURE 10
PAGE 01

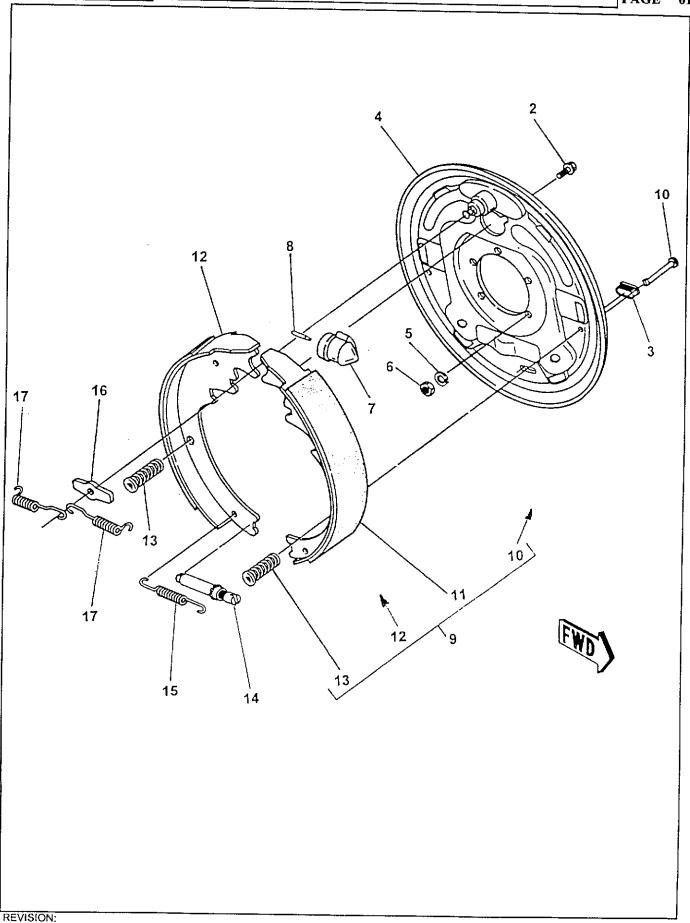



OPERATOR SIDE HYDRAULIC BRAKE ASSEMBLY


PARTS
GROUP 80
FIGURE 10
PAGE 02

ITEM NO.	REED'S PARTS NO.	DESCRIPTION 12345	QTY
-1	80-10	Assembly, Operator Side Hydraulic Brake (See Group 80, Figure 01 for NHA)	Ref
2		Screw, with Washer	
3		• Plug	2
4		Plate, Backing	· · · · · · · · · · · · · · · · · · ·
5		Washer, Lock (attaching parts)	1
6		Nut, Brake Mounting (attaching parts)	5
7		Cylinder, Operator Side Brake	5
8		• Rod, Push	1
9	······································	Kit, Operator Side Shoe and Lining	<u> </u>
10		Pin, Shoe Hold Down	
11		• • Primary, Operator Side	2
12	·	Secondary, Operator Side	1
13		• • Pin, Shoe Hold Down	1
14		Assembly, Adjuster	2
15		• Spring, Adjusting Screw	1
16		· · · · · · · · · · · · · · · · · · ·	1
17		• Washer, Anchor Post	1
	<u> </u>	Spring, Retractor	2



LUBE PUMP ASSEMBLY

PARTS
GROUP 80
FIGURE 11
PAGE 01

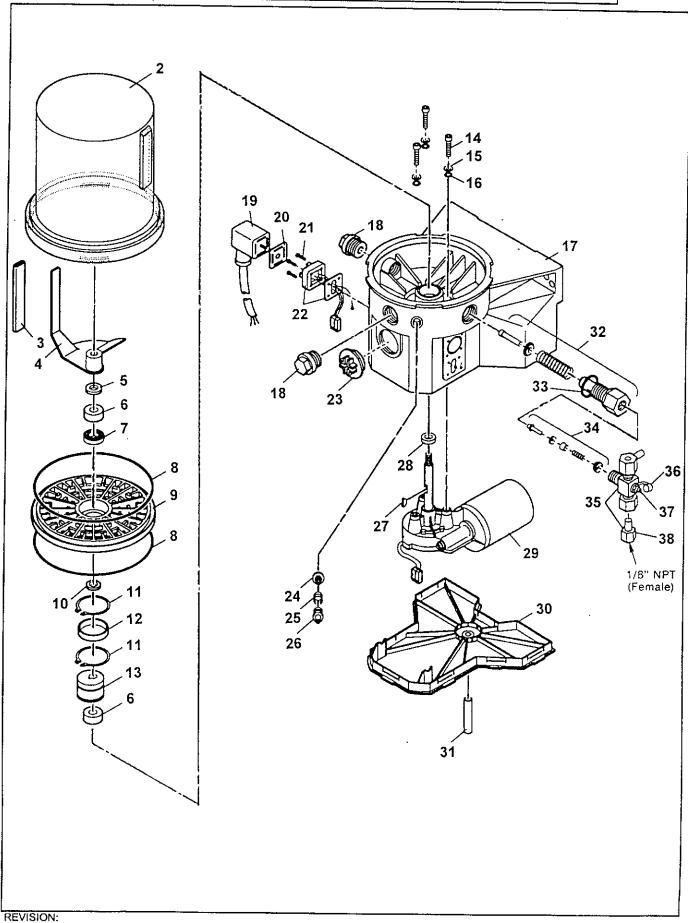




LUBE PUMP ASSEMBLY

PARTS
GROUP 80
FIGURE 11
PAGE 02

NO.	REED'S PARTS NO.	DESCRIPTION 12345	QT
-1	78736	Assembly, Lube Pump	
		(See Group 80, Figure 01 for NHA)	Ref
2		Reservoir	1
3		House	1
4		Paddle, Stirring	1
5		Washer	
6		• Ring, Bearing	2
7		Bearing	
8		• O-Ring	2
9		Plate, Intermediate	- - <u>-</u>
10		• Shim	- + · · ·
11		• Ring, Snap	2
12		• Ring, Inner	1
13		• Cam, Eccentric	
14		• Screw	3
15		Washer	3
16		• O-Ring	3
17		Housing, Pump	1
18		• Plug, Cloosure	2
19		Socket with Cord	1
20		Packing, Flat	1
21		• Screw	4
22		• Plug	1
23		Plug, Sealing	
24		• Insert, Filter	
25		• Spring	<u>'</u>
26		• Fitting, Grease	1
27		• Key, Woodruff	1
28		• Seal, Radial	1
29		• Motor, 12VDC	1
30		• Cover, Housing	1
31		• Hose	1
32		• Element, Pump	
33		• Gasket	 _
34		Valve, Check	1
35		• Assembly, Pressure Reliese	1
36		• Cap, Grease	1
37		• Fitting, Grease	1
38		• Assembly, Adapter for Relief	1



PARTS
GROUP 80
FIGURE 12
PAGE 01

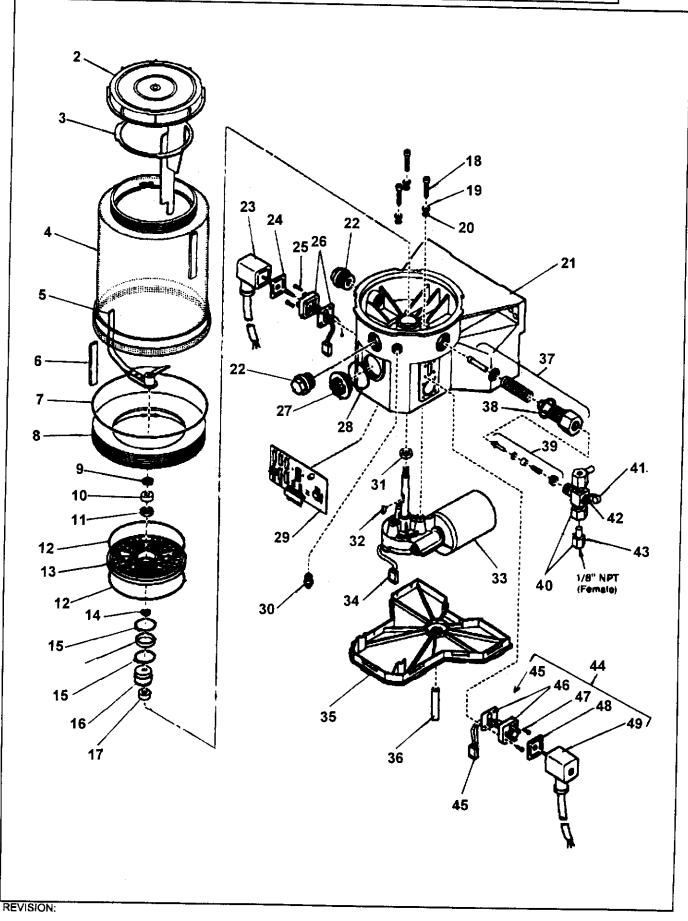




PARTS
GROUP 80
FIGURE 12
PAGE 02

ITEM	REED'S	DESCRIPTION	OTV
NO.	PARTS NO.	12345	QTY
-1	800065	Assembly, Lubrication Pump	Ref
		(See Group 80, Figure 01 for NHA)	
2		• Lid	j
3		Paddle, Fixed	1
4		Reservoir	1
5		Paddle, Stirring	1
6		• Hose	1
7		• O-Ring	1
8		Adapter	1
9		• Washer	1
10		Ring, Bearing	2
11		Bearing	1
12		• O-Ring	2
13		Plate, Intermediate	1
14		• Shim	1
15		• Ring, Snap	2
16		• Ring, Inner	1
17		Cam, Eccentric	1
18		• Screw	3
19	<u> </u>	• Washer	3
20		• O-Ring	3
21		Housing, Pump	1
22		Plug, Closure	2
23		Socket with Cord	1
24		• Packing, Flat	1
25		• Screw	4
26		• Plug	1
27	-	Plug, Sealing	1
28		• O-Ring	1
29		Board, Printed Circuit	1
30		• Fitting, Grease	1
31		Seal, Radial	1
32		• Key, Wood Ruff	1
33		Motor, 12 VDC	1
34		Plug. Motor	1
35		Cover, Housing	1



PARTS GROUP 80 FIGURE 12 PAGE 03

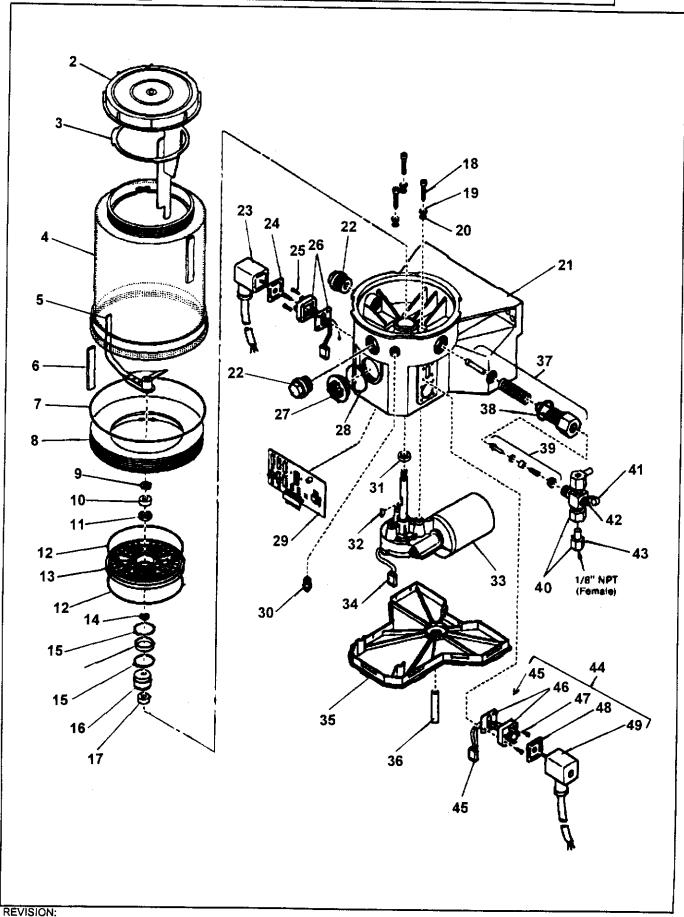




PARTS GROUP 80 FIGURE 12 PAGE 04

ITEM NO.	REED'S	DESCRIPTION	
	PARTS NO.	12345	QTY
36		• Hose	
37		• Element, Pump	
38		Gasket	
39		Valve, Check	1
40		Assembly, Pressure Release	1
41		Cap, Grease	1
42		Fitting, Grease	
43		Adapter for Relief	<u> </u>
44		Assembly, Optional Pressure Relief Valve	
45		• • Cord, Optional Power	1
46		• • Plug. Optional	
47		• • Screw, Optional	4
48		• • Packing, Optional Flat	1
49		• • Socket, Optional	1



OPTIONAL TOOL KIT ASSEMBLY

PARTS
GROUP 80
FIGURE 13
PAGE 01

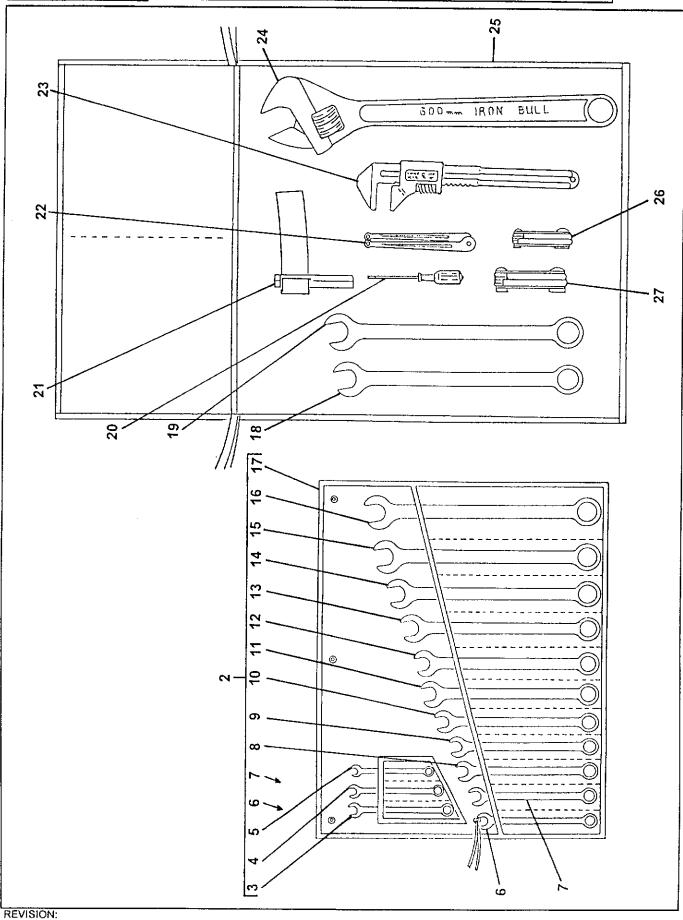



OPTIONAL TOOL KIT ASSEMBLY

PARTS
GROUP 80
FIGURE 13
PAGE 02

NO.		DESCRIPTION	
1	PARTS NO.	12345	QTY
-1	79020	Assembly, Optional Tool Kit	Ref
		(See Group 80, Figure 01 for NHA)	Kei
2	79037	• Kit, Wrench	1
3		• • Wrench, 1/2 Inch	
4		• • Wrench, 7/16 Inch	
5		• • Wrench, 3/8 Inch	1
6		• • Wrench, 9/16 Inch	
7		• • Wrench, 5/8 Inch	
8		• • Wrench, 11/16 Inch	1
9		• • Wrench, 3/4 Inch	1
10		• • Wrench, 13/16 Inch	1
11		• • Wrench, 7/8 Inch	1
12		• • Wrench, 15/16 Inch	1
13		• • Wrench, 1 Inch	1
14		• • Wrench, 1-1/16 Inch	
15		• • Wrench, 1-1/8 Inch	1
16		• • Wrench, 1-1/4 Inch	1
17		• • Wrap, Plastic	1
18	79036	• Wrench, 1-3/8 Inch	1
19	79028	• Wrench, 1-1/2 Inch	1
20	79038	• Screwdriver	1
21	79814	Wrench, Strap (for Filter)	1
22	79325	• Wrench, Spanner	
23	79031	• Wrench, Monkey	1
24	79032	Wrench, Adjustable 24 Inch	1
25	77502	Bag, Tool	1
26	79030	• Set, Metric Allen Key (2-8 mm)	1
27	79029	• Set, Standard Allen Key (3/16-3/8 Inch)	1



M5 MULTISPRAY MIXER & PUMP ILLUSTRATED PARTS MANUAL

PARTS
GROUP 80
FIGURE 14
PAGE 01

THIS PAGE	INTENTIO	JATIVI	FET DI AND

REVISION:

•	
•	
	,
•	




M5 MULTISPRAY MIXER & PUMP GROUP 90 LIFT MIXER INSTALLATION

PARTS GROUP 90 FIGURE 00 PAGE 01

GROUP 90 LIFT MIXER INSTALLATION CONTAINS THE FOLLOWING FIGURES:


FIGURE	00	TABLE OF CONTENTS
FIGURE	01	LIFT MIXER INSTALLATION
FIGURE	02	WATER PLUMBING ASSEMBLY
FIGURE	03	WATER METER ASSEMBLY
FIGURE	04	MIXER WELDMENT ASSEMBLY
FIGURE	05	MIXING BLADE ASSEMBLY
FIGURE	06	DOUBLE AUXILIARY MIXER PUMP ASSEMBLY
FIGURE	07	LIFT MIXER CYLINDER ASSEMBLY
FIGURE	08	MIXER MOTOR ASSEMBLY

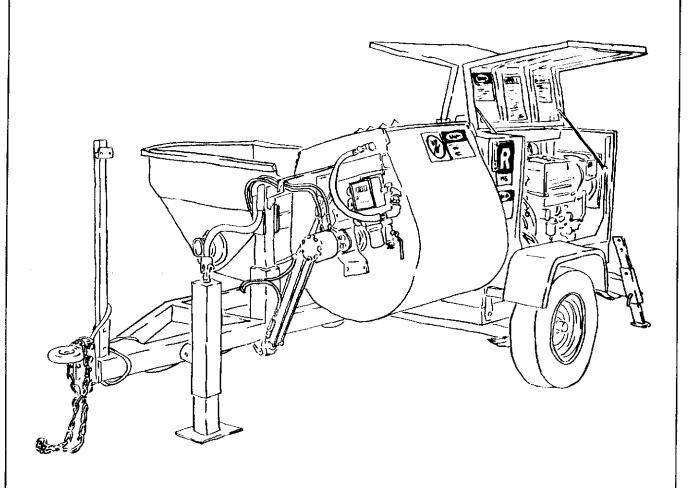



LIFT MIXER INSTALLATION

PARTS
GROUP 90
FIGURE 01
PAGE 01

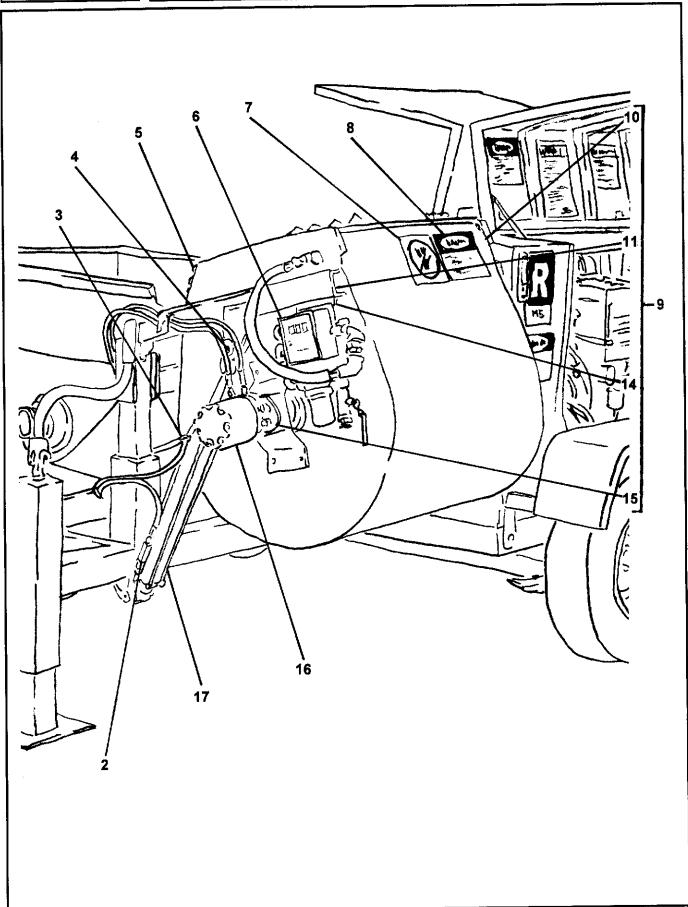



LIFT MIXER INSTALLATION


PARTS GROUP 90 FIGURE 01 PAGE 02

ITEM	REED'S	DESCRIPTION	QTY
NO.	PARTS NO.	12345	QII.
-1	76860	Installation, Lift Mixer (See Group 10, Figure 01 for NHA)	Ref
2	76885	• Fuse, Velocity	2
3	78593	• Fitting, Mini Check (Port)	1
4	76882	• Pin, Pivot	1
5	76893	Extension, Lip Mixer	1
6	90-02	Assembly, Water Plumbing (See Group 90, Figure 02 for DET)	1
7	75005	Decal, Danger, Do Not Put Hands	1
8	75081	• Decal, Danger, Do Not Put Hands Or Feet In Hopper At Any Time	1
9	76877	• Weldment, Mixer	1
10	97010	Assembly, Mixer Weldment (See Group 90, Figure 04 for DET)	1
11	72202	• • Weldment, Side Tube	2
-12	72205	• • Weldment, Cylinder Ear	2
-13	72220	• • Weldment, Mixer Shaft	1
14	79686	• • Bracket, Water Meter	1
15	72221	• • Weldment, Motor Adapter	1
16	79715	Assembly, Double Auxiliary Mixer Pump (See Group 90, Figure 06 for DET)	1
17	72218	Assembly, Lift Mixer Cylinder (See Group 90, Figure 07 for DET)	2
-18	72222	Assembly, Mixer Motor (See Group 90, Figure 08 for DET) (Also See Group 40, Figure 01 for REF)	2
-19	79718	Valve, flow control	1
-20	76878	Weldment, Pivot Frame	1



WATER PLUMBING ASSEMBLY

PARTS GROUP 90 FIGURE 02 PAGE 01

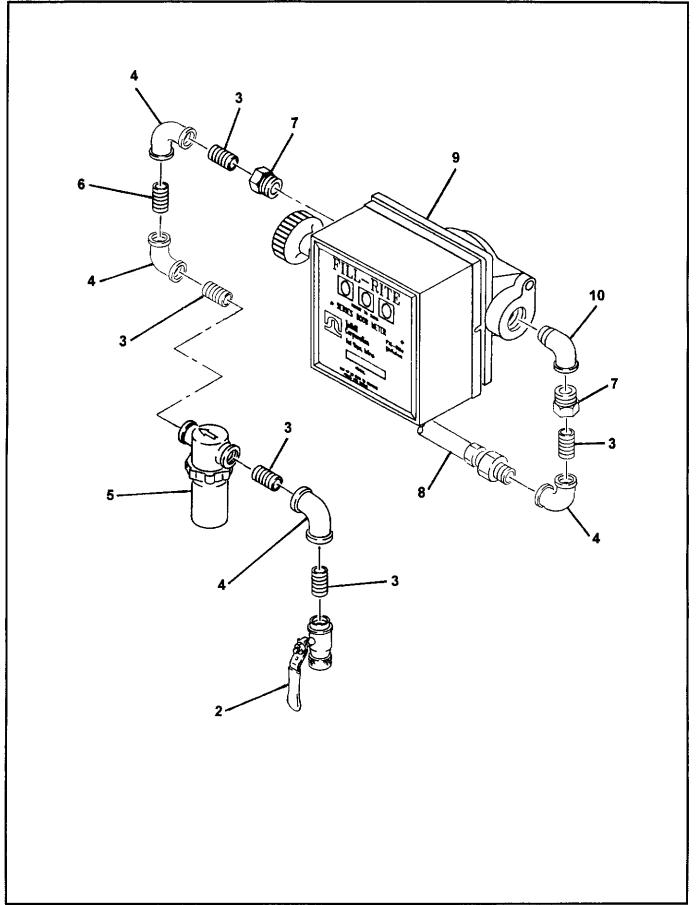



WATER PLUMBING ASSEMBLY


PARTS GROUP 90 FIGURE 02 PAGE 02

ITEM	REED'S	DESCRIPTION	OTTO
NO.	PARTS NO.	12345	QTY
-1	90-02	Assembly, Water Plumbing (See Group 90, Figure 01 for NHA)	Ref
2	13186	Valve, Ball	1
3	20144	• Nipple, 3/4	5
4	20143	• Elbow, 3/4	4
5	78158	Strainer	1
6		• Nipple, 3/4	1
7		• Bushing, 1 x 3/4	2
8		Assembly, Hose	1
9	71428	Assembly, Water Meter (See Group 90, Figure 03 for DET)	1
10	56412	• Elbow, Street 3/4	1



WATER METER ASSEMBLY

PARTS GROUP 90 FIGURE 03 PAGE 01

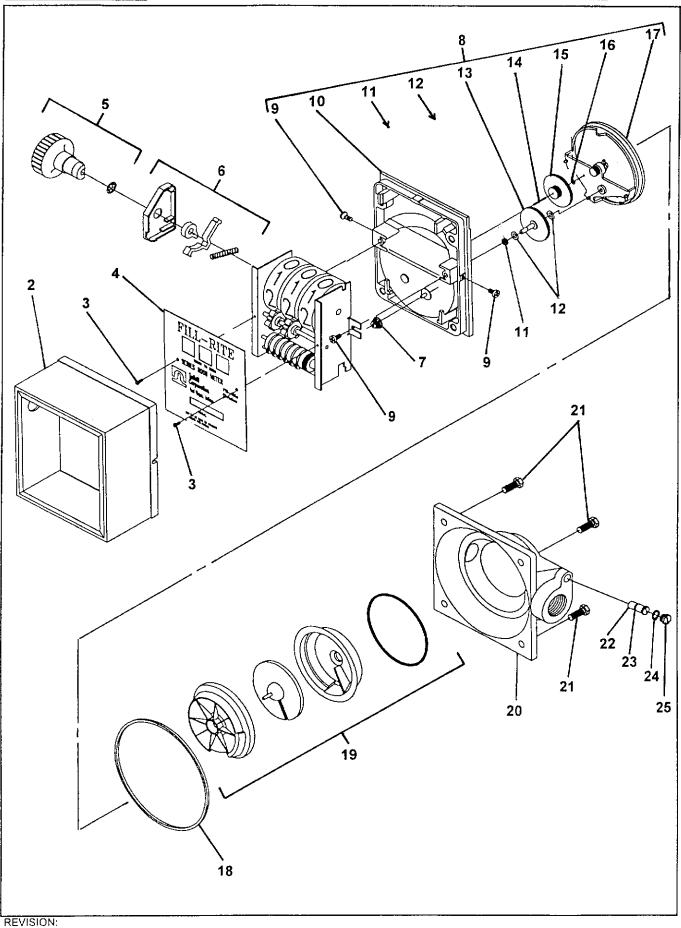



WATER METER ASSEMBLY


PARTS
GROUP 90
FIGURE 03
PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	71428	Assembly, Water Meter	Ref
		(See Group 90, Figure 02 for NHA)	Rei
2		Cover, Counter	1
3		• Screw, #4 - 40 x 1/4	2
4		• Face, Counter	1 1
5		Assembly, Knop	1
6		• Counter	1 1
7		Bevel, Pinion	1
8		Assembly, Cover	1
9		• • Screw, #8 - 32 x 5/16	4
10		• • Cover, Meter	
H		• • O-Ring	1
12		• • Washer	2
13		• • Gear, Drive	1
14		• • Shaft, Cluster Gear	1
15		• • Gear, Cluster	1
16		• • Washer	1
17		• • Frame, Gear	1
18		• O-Ring	1
19	· • · · · · · · · · · · · · · · · · · ·	Assembly, Meter Chamber	1
20		Housing, Outlet	1
21		• Screw, Hex 5/16 - 18 x 7/8	4
22		Screw, Calibration	1
23		O-Ring for Calibration Screw	1
24	<u></u>	• O-Ring	1
25		• Screw, Seal	I
-26	-70-	• Kit, Repair (Included Items: 7, 11, 12, 13, 14, 15, 16, 17, 18, 19, 23 and 24)	1



MIXER WELDMENT ASSEMBLY

PARTS GROUP 90 FIGURE 04 PAGE 01

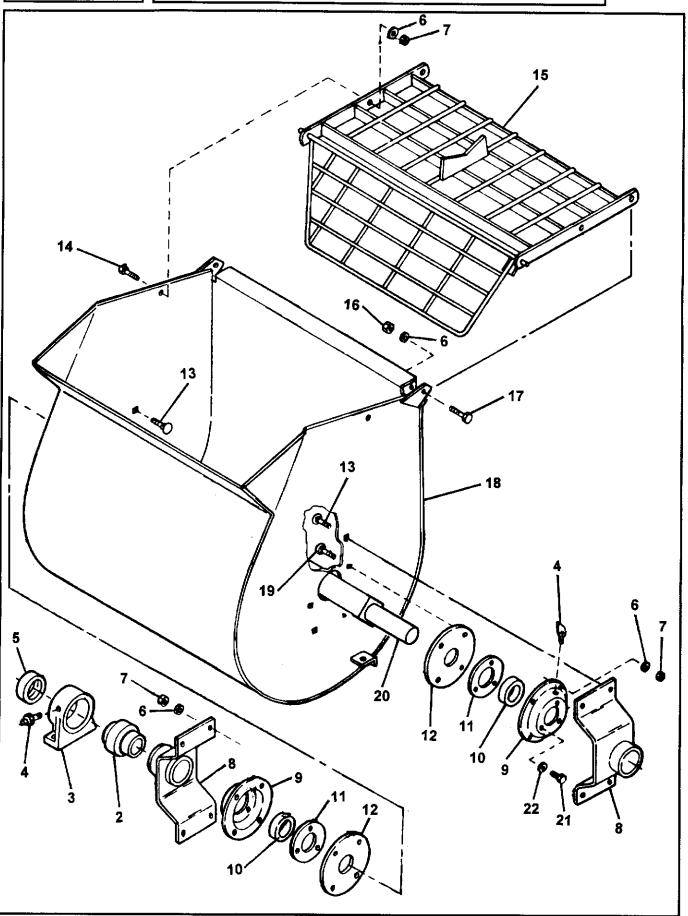



MIXER WELDMENT ASSEMBLY


PARTS
GROUP 90
FIGURE 04
PAGE 02

ITEM	REED'S	DESCRIPTION	QTY
NO.	PARTS NO.	12345	¥
-1	97010	Assembly, Mixer Weldment	Ref
		(See Group 90, Figure 01 for NHA)	
2		Bearing, Drum Shaft	1
3		Hanger, Bearing	1
4		Fitting, Grease	2
5		Collar, Locking	1
6		• Washer, 3/8	19
7		• Nut, Hex 3/8-16	17
8		Assembly, Bearing Support	2
9		Housing, Seal	2
10		• Seal, Shaft	2
11		Retainer, Seal	2
12		• Seal, Drum	2
13		• Capscrew, Flat 3/8-16 X 1	8
14		• Capscrew, Hex 3/8-16 X 1	1
15		Assembly, Grill	1
16		• Nut, 3/8 Cone Lock	2
17		• Capscrew, Hex 3/8-16 X 2 Gr 5	2
18		Weldment, Drum Shell	1
19		• Capscrew, Flat 3/8-16 X 1 1/4	8
20	90-05	Assembly, Mixing Blade	1
		(See Group 90, Figure 05 for NHA)	<u> </u>
21		• Capscrew, Hex 1/4-28 X 1 Gr 5	16
22		Washer, 1/4 Spring Lock	6



MIXING BLADES ASSEMBLY

PARTS
GROUP 90
FIGURE 05
PAGE 01

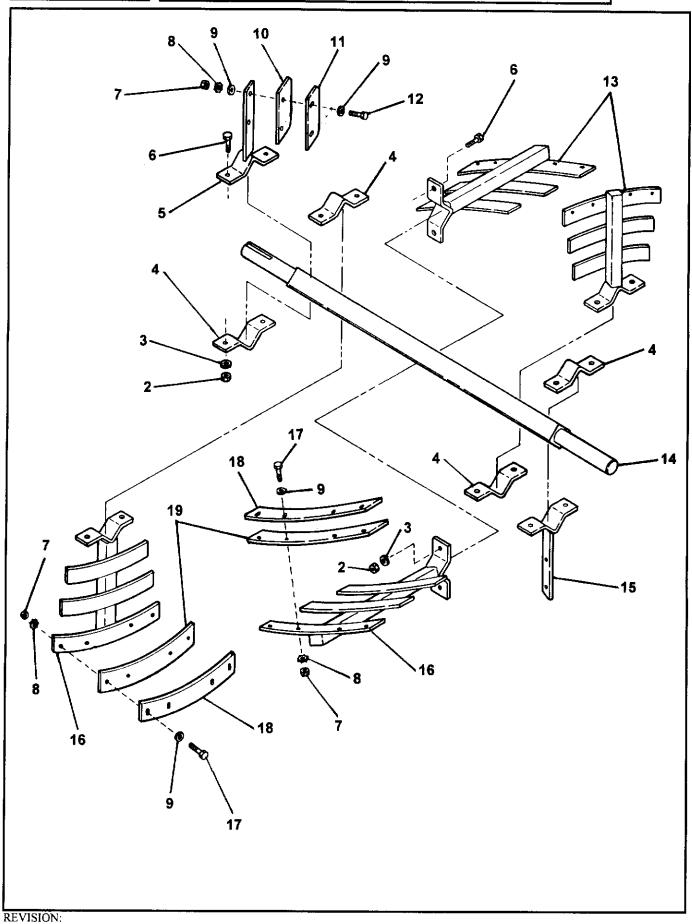



MIXING BLADES ASSEMBLY


PARTS GROUP 90 FIGURE 05 PAGE 02

ITEM	REED'S	DESCRIPTION	QTY
NO.	PARTS NO.	12345	QII
-1	90-05	Assembly, Mixing Blade	Ref
		(See Group 90, Figure 01 for NHA)	
2		• Nut, Hex 5/8-11	10
3		Washer, 5/8 Spring Lock	10
4		Cap, Mixing Arm	4
5		Assembly, Side Arm	1
6		• Capscrew, Hex 5/8-11 X 2 Gr 5	10
7		• Nut, Hex 3/8-16	20
8		Washer, 3/8 Spring Lock	20
9		• Washer, 3/8 Flat	20
10		Wiper, Drum End	2
11		Plate, End Wiper Backing	2
12		• Capscrew, Hex 3/8-16 X 1 3/4 Gr 5	4
13		Assembly, Mixing Arm	2
14		Shaft, Drum	1
15		Assembly, Side Arm	1
16		Assembly, Mixing Arm	2
17		• Capscrew, Hex 3/8-16 X 1 1/2 Gr 5	16
18		Plate, Wrap Wiper Backing	4
19		Wiper, Drum Wrap	4



DOUBLE AUXILIARY MIXER PUMP ASSEMBLY

PARTS GROUP 90 FIGURE 06 PAGE 01

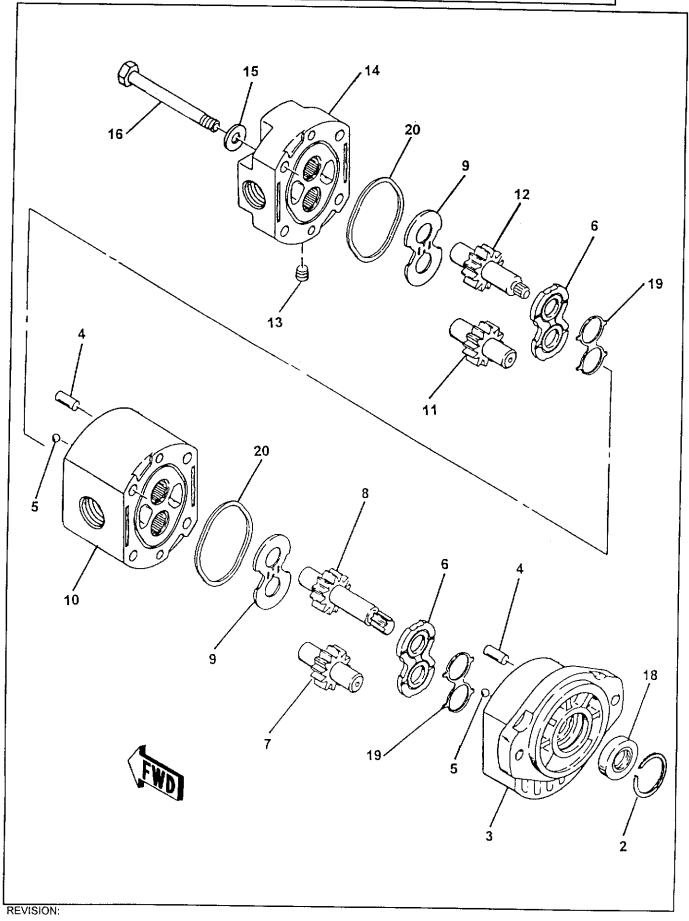



DOUBLE AUXILIARY MIXER PUMP ASSEMBLY


PARTS GROUP 90 FIGURE 06 PAGE 02

ITEM	REED'S	DESCRIPTION	<u> </u>
NO.	PARTS NO.	12345	QTY
-1	73156	Assembly, Double Auxiliary Mixer Pump (See Group 90, Figure 01 for NHA) (Also See Group 40, Figure 02 for REF)	Ref
2		Retainer	1
3		Assembly, Body	
4		• Pin, Dowel	4
5		Bearing, Ball	4
6		• Plate, Wear	2
7		Gear, Driven	1 1
8		Gear, Drive	1
9		• Plate, Thrust	2
10		Assembly, Middle Body	<u> </u>
11		Gear, Rear Driven	1 -
12		Cover, Rear Drive	- 1
13		• Plug, Pipe	1
14		Assembly, Cover	1
15		Washer, Flat (attaching parts)	4
16		Screw, Hex (attaching parts)	4
-17		• Kit, Seal	1
18		• • Seal, Shaft	1
19		• • Rubber, Space	2
20		• • Ring, Square Cut	2



LIFT MIXER CYLINDER ASSEMBLY

PARTS
GROUP 90
FIGURE 07
PAGE 01

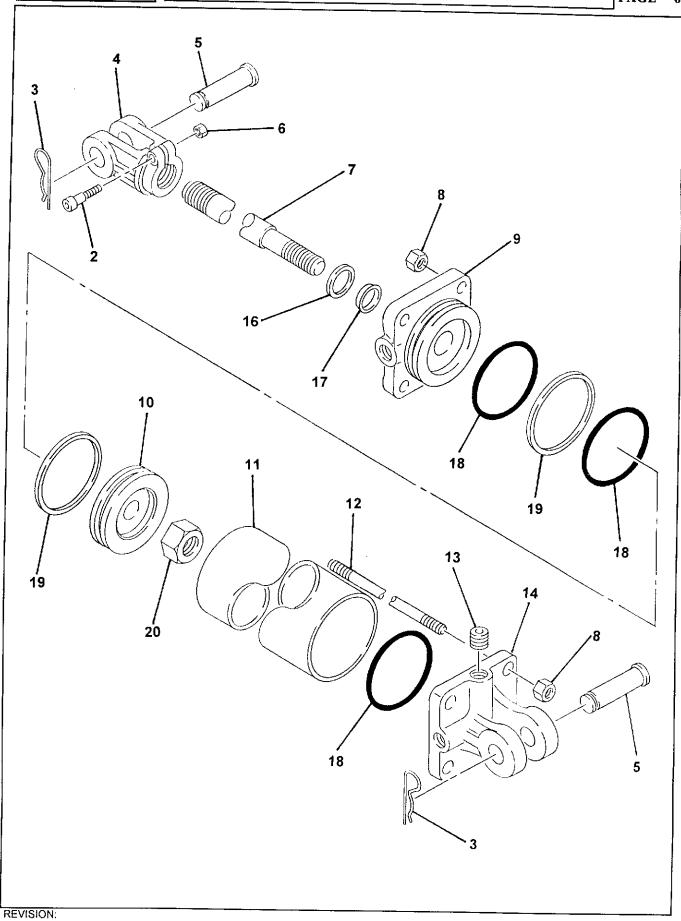



LIFT MIXER CYLINDER ASSEMBLY


PARTS
GROUP 90
FIGURE 07
PAGE 02

ITEM NO.	REED'S PARTS NO.	DESCRIPTION	OTY
		12345	QTY
-1	72218	Assembly, Lift Mixer Cylinder	Ref
${2}$	***	(See Group 90, Figure 01 for NHA)	
3	·	• Screw, Cap	I
		• Pin, Clip	2
4	· · · · · · · · · · · · · · · · · · ·	• Clevis	1
5		• Rod, Clevis Pin	2
6		• Nut, Clevis	
7		• Rod	
8		• Nut, Tie Rod	8
9		• Head	
10		• Piston	1
11		• Tube	1
12		• Rod, Tie	4
13		• Plug, Pipe	1
14		• Base	
-15		• Kit, Seal	
16		• • Wiper	
17		• • U-Cup	
18		• • O-Ring	3
19		• • Ring, Back Up	2
20		• • Nut, Piston	



MIXER MOTOR ASSEMBLY

PARTS
GROUP 90
FIGURE 08
PAGE 01

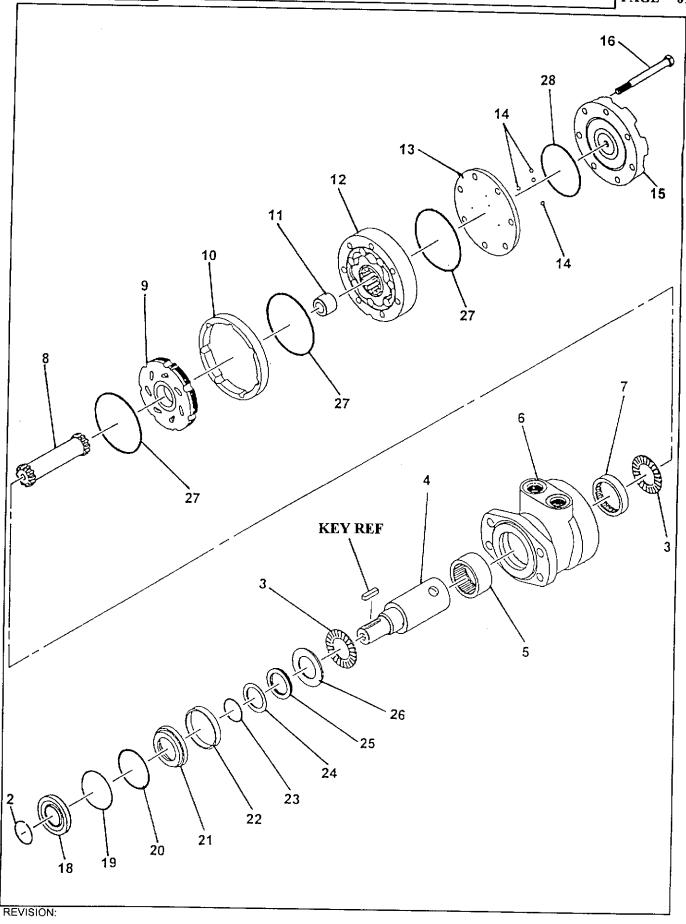



MIXER MOTOR ASSEMBLY

PARTS GROUP 90 FIGURE 08 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	72222	Assembly, Mixer Motor	Ref
	· · · · · · · · · · · · · · · · · · ·	(See Group 90, Figure 01 for NHA)	Rei
2		• Pin	1
3		Bearing, Thrust	2
4		• Shaft	1
5		Bearing, Front	1
6		Housing, Motor	
7	- 	Bearing, Rear	
8		• Link, Drive	1
9		Manifold	1
10	<u></u>	Boot, Manifold	
11		Spacer, Drive Link	
12		Assembly, Rotor	1
13		Plate, Ballance	1
14		• Ball, Steel	4
15		• Cover, End	
16		• Bolt, Hex (attaching partsw)	7
-17		• Kit, Seal	
18		• • Seal, Dust	1
19		• • Ring, SPL Wire	1
20	 	• • Shim, Back Up	1
21		• • Seal, Carrier	
22		• • Seal, High Pressure	
23		• • Shim, Back Up	1
24		• • Shim, Teflon Back Up	1
25		• • Seal, Shift	1
26		• • Washer, Thrust	1
27			l 1
28		• • Seal, Body	3
		• O-Ring	1 1



M5 MULTISPRAY MIXER & PUMP ILLUSTRATED PARTS MANUAL

PARTS GROUP 90 FIGURE 09 PAGE 01

THIS PA	GE INTE	NTTIANI A 1	IVI	DET DI	ANTE

REVISION: